



## Lenco MC-175SI (V2) CD Player USB and Bluetooth User Manual

[Home](#) » [Lenco](#) » Lenco MC-175SI (V2) CD Player USB and Bluetooth User Manual 

# Lenco

Model: MC-175SI (V2)



User manual – DAB+/ FM radio with CD player, USB and Bluetooth

### Contents

- 1 Lenco MC-175SI (V2) CD Player USB and Bluetooth
- 2 PRECAUTIONS BEFORE USE
- 3 Accessories:
- 4 Description of Parts
- 5 Remote
- 6 BATTERY INSTALLATION
- 7 Clock and Timers
- 8 Technical Specifications
- 9 About the disks
- 10 Documents / Resources
  - 10.1 References

## **Lenco MC-175SI (V2) CD Player USB and Bluetooth**

### **CAUTION:**

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### **PRECAUTIONS BEFORE USE**

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install in accordance with the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
6. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
15. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has USB playback function, the USB memory stick should be plugged into the unit directly. Don't use an USB extension cable because it can cause interference resulting in failing of data.

17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
19. This product is intended for non-professional use only and not for commercial or industrial use.
20. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
21. Never remove the casing of this device.
22. Never place this device on other electrical equipment.
23. Do not allow children access to plastic bags.
24. Only use attachments/accessories specified by the manufacturer.
25. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the device, when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
26. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
27. If the product is delivered with power cable or AC power adaptor:
  - If any trouble occurs, disconnect the AC power cord and refer servicing to qualified personnel.
  - Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point.
  - Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
  - Unplug this device during lightning storms or when unused for a long period.
  - The socket outlet must be installed near the equipment and must be easily accessible.
  - Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
  - Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
  - Devices with class 2 construction do not require an earthed connection.
  - Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
  - Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
28. If the product contains or is delivered with a remote control containing coin/cell batteries:
  - Warning:
    - "Do not ingest battery, Chemical Burn Hazard" or equivalent warning.
  - [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
  - Keep new and used batteries away from children.
  - If the battery compartment does not close securely, stop using the product and keep it away from children.
  - If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
29. Caution about the use of Batteries:
  - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
  - Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.

Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or that leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 
Attention should be drawn to the environmental aspects of battery disposal.

## INSTALLATION

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.







## WARNING
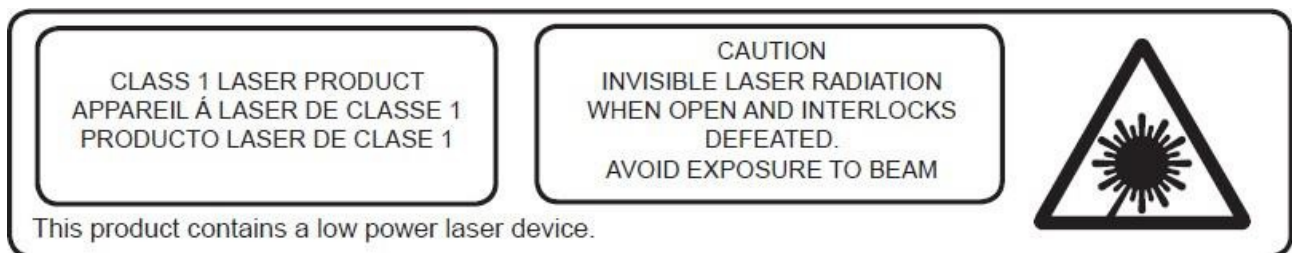
### Class 1 Laser Product




   **Warning:** Do not touch the lens.
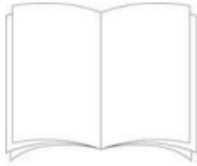
### Accessories:

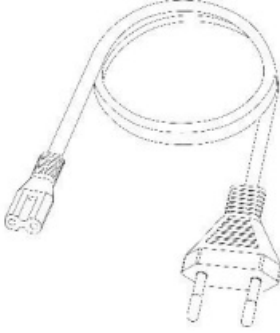 
Remote control	User manual	Speaker cable
		
3.5mm Line in cable	Indoor antenna	Power Cord
		

## Description of Parts

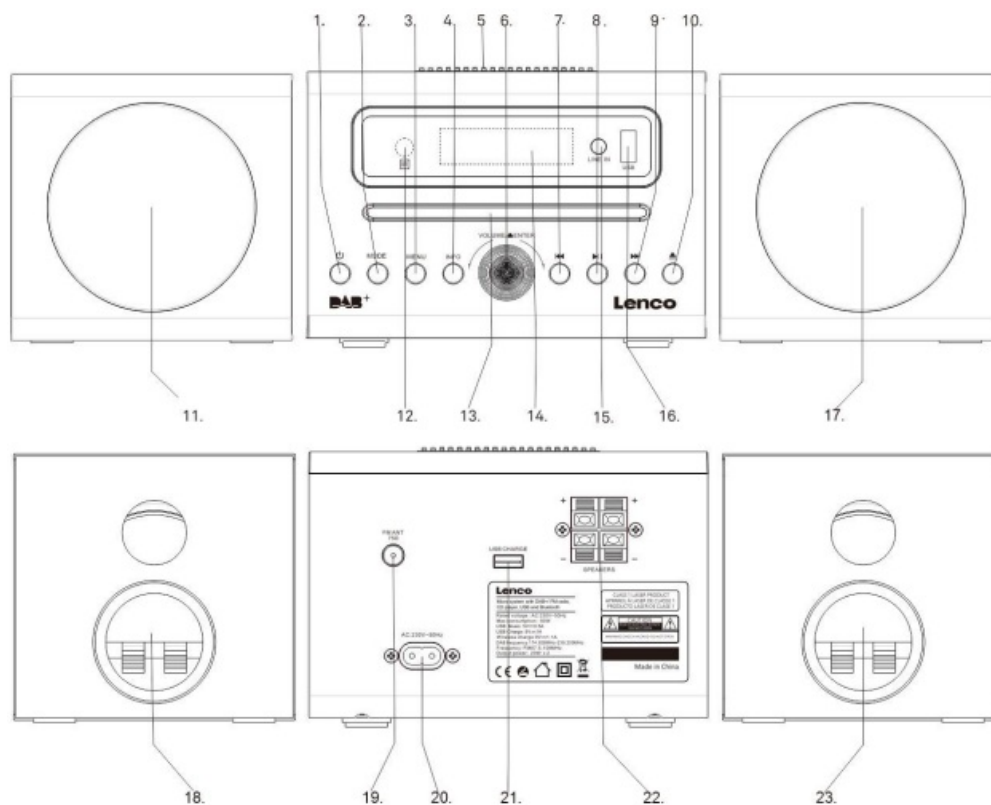 

1. Power on switch • press to Power on • Press and hold to Power off 2. Mode Select the audio mode: DAB-FM- CD- USB-BT-LINE3 . Menu 4. Info 5. Wireless charge position 6. Volume +/-, Enter 7. Previous button 8. Play/Pause/Enter button 9. NEXT button 10. CD tray open/close button 11. Left speaker	12. Remote sensor 13. CD door 14. LCD display 15. Line in jack 16. USB Play port 17. Right speaker 18. Left Speaker connector 19. DAB/FM indoor antenna 20. AC MAINS 21. USB charge port 22. R/L speaker output jack 23. Right speaker connector
---	---

## Remote

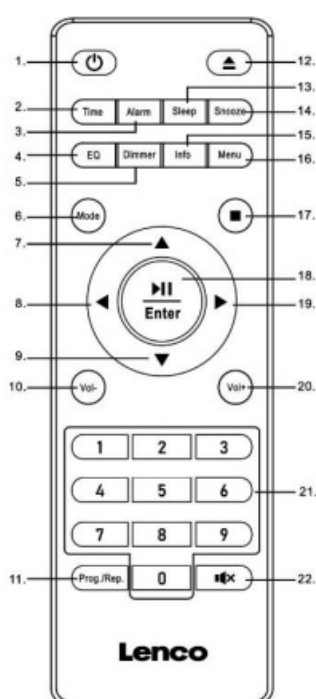 

1. Power on/off 2. Time setting 3. Alarm setting 4. EQ setting 5. Dimmer 6. Mode 7. Up cursor button 8. Go back one track / Left cursor button 9. Down cursor button 10. Volume – 11. Program for CD/USB Repeat for CD/USB	12. CD open /close 13. Sleep setting 14. Snooze 15. Info 16. Menu 17. Stop 18. Enter/Play /pause 19. Go forward one track / Right cursor button 20. Vol + 21. 0...9 for selection of the CD song number 22. Mute
---	--


## BATTERY INSTALLATION

 Battery must be inserted correctly to avoid damaging to the remote control. Always remove the battery when the remote control will not be used for a long period of time, as this may cause leakage of the battery and

subsequently damage the remote.

### Inserting the remote-control batteries

1. Push the release clip on the battery compartment downwards and lift to remove the cover.
2. Insert 2 x 1.5 V AAA batteries (not supplied) the correct way around, by observing the polarity (+ and -) indicated on the battery compartment.
3. Place the furthest end of the cover in position on top of the battery compartment. Then press the nearest end of the cover until you hear it click firmly into place.

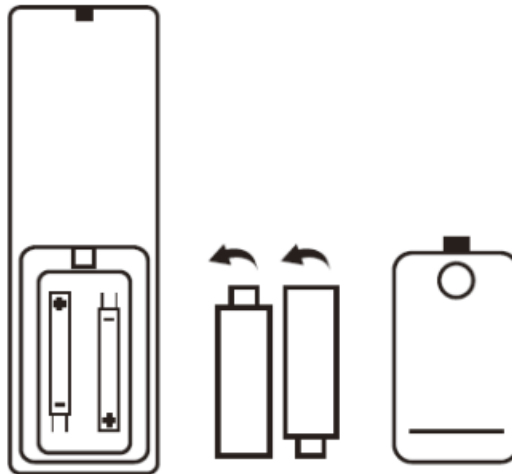

If the distance required between the remote control and the appliance decreases, the batteries are exhausted. In this case replace the batteries with new ones.

### Auto standby

When playing media from a connected device, the device automatically switches to standby if:

- No button is pressed for 10 minutes,
- No audio from a connected device for 10 minutes.

### Operation

Press the POWER button once to turn ON and hold the button to power OFF the unit.

Adjusting the volume

Rotate the Volume knob clockwise to increase the volume.

Rotate the Volume knob counter-clockwise to decrease the volume.

The display will show the volume setting.

Mute function

Pressing the MUTE button on remote control will mute the volume is muted. "Volume Muted" will appear on the display. Press this button again to cancel the mute function.

### Clock and Timers

Setting the clock and date

After the unit is plugged into a mains supply or after a power failure, the time and date on the LCD display will blink. The unit should be in standby mode to set the clock.

1. Press Time button, "Time setup" is displayed, press ENTER to confirm.
2. Press [▲] / [▼] to select "24H" or "12H", Press ENTER confirm. The hour digits on the display will blink.
3. Press [▲] / [▼] to set the hour, press ENTER confirm, the minutes digits on the display will blink.

4. Press [▲] / [▼] to set the minutes, press ENTER confirm, the Year digits on the display will blink.
5. Press [▲] / [▼] to set the Year, press ENTER confirm, the Month digits on the display will blink.
6. Press [▲] / [▼] to set the Month, press ENTER confirm, the Day digits on the display will blink.
7. Press [▲] / [▼] to set the Day, press ENTER confirm, press [▲] / [▼] the select save "YES/NO"

### Setting Alarm

Note: Check that the radio has the correct time and date before you set an alarm.

This unit may be used as an alarm clock. The CD/USB device or DAB/FM radio is activated to play at a preset time.

1. Press POWER to switch the unit to standby mode.
2. Make sure that you have set the clock correctly.
3. Press the ALARM button to set alarm 1; press ALARM button twice to set alarm 2
4. "Alarm 1 (or 2) Setup" is displayed. Press [▲] / [▼] ENTER button to select.
5. "Alarm 1 (or 2) Setup On time" is displayed and the hour digits for the alarm will flash.
6. Press [▲] / [▼] repeatedly to set hour. Press ENTER to confirm.
7. Press [▲] / [▼] to set minute, Press ENTER to confirm.
8. Press [▲] / [▼] select the Alarm volume from 0 to 30, Press ENTER to confirm.
9. Press [▲] / [▼] to scroll to choose OFF/USB/CD/FM/DAB. Press ENTER to confirm.
10. Press [▲] / [▼] to choose the duration for the alarm. You can choose from 10 to 60 minutes. Press the ENTER button to confirm. Use [▲] / [▼] to select YES and press ENTER to save the alarm setting.
11. The display will show the current time and Alarm 1 (or Alarm 2 or at the same time)

**Warning:** When alarm is set to DAB mode and there is no DAB signal, the alarm clock is silent.

– When alarm source CD is selected and there is no CD inserted, there will be no alarm sound

**Note :** Choose Alarm source OFF if the alarm shouldn't activate the next day

### Snooze

1. Whenever the alarm (alarm 1, alarm 2) comes on, it can be temporarily suspended for a short period of approximately 9 minutes, by pressing the "SNOOZE" key once.
2. The alarm (alarm 1, alarm 2) will then automatically sound again after approximately 9 minutes have passed.
3. The "Zz" symbol will show on the display to remind that the snooze function is active.
4. To deactivate the snooze, press and release the "POWER" key.

### Sleep Timer

1. Repeatedly press the SLEEP button, you can choose between 90/80/70/60/50/40/30/20/10 minutes.  
After this time, the unit will go to standby mode. This is useful for falling asleep to music at night.
2. If you want to cancel the sleep mode, repeatedly press SLEEP until OFF appears on the display

### Display Backlight

You can press the DIMMER button adjust the display backlight brightness, there are 3 options available, High, Medium and Low.

### DAB Radio mode

 


Carefully extend the telescopic antenna.

Press the POWER button to turn on the unit, press the MODE button to select to DAB mode, it will start up into DAB mode.


### Auto Scan

1. If this is the first time the unit has entered DAB Mode, it will automatically start an 'Auto Scan' to search for available stations. (Once DAB Mode has been used before, the unit will automatically select the previously played station)
2. Hold the ENTER button to automatically start auto scan to search for available stations. During the scanning process, the lower line of the display shows a bar graph indicating the progress of the scan.

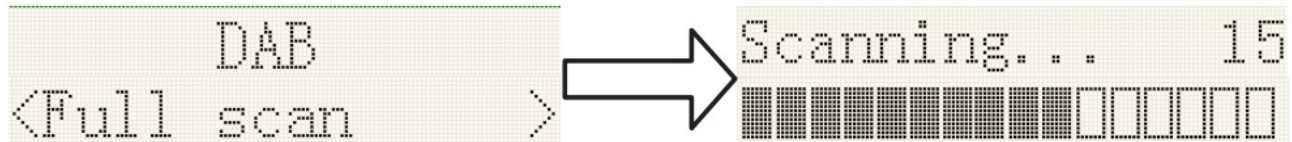

### Manual Scan

 1. Press the MENU key to enter the menu.
2. Press the [◀] or [▶] button to select "Manual tune", press the [ENTER] button to the service menu.
3. Press [◀] or [▶] enter to tune in the desired channel. A graph will indicate the signal strength if you press [ENTER]
4. Press [MENU] or [▲/▼] to exit scan.

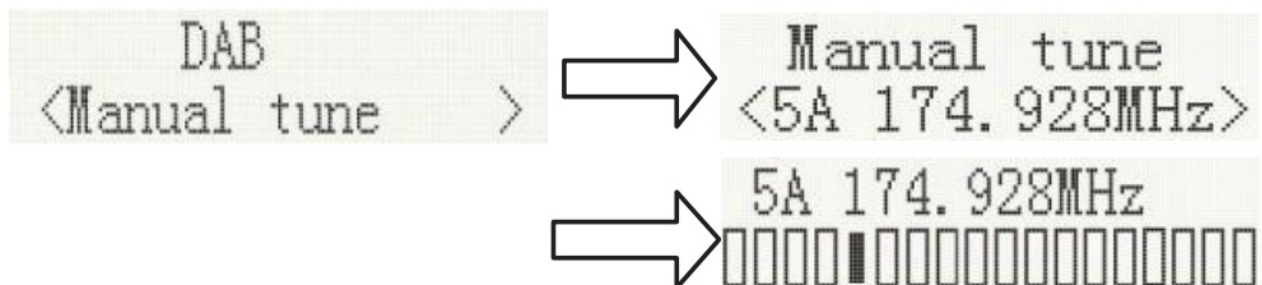

5. If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.


### DRC (Dynamic Range Control)

 Dynamic Range Control (also known as DRC) is a technology used to help make quieter sounds easier to hear in a noisy environment.

1. In DAB menu, press the [◀] or [▶] button to select "DRC", press the [ENTER] button to display "\*" to the top right.
2. DRC OFF – DRC is switched off, broadcast DRC will be ignored. DRC LOW – DRC level is set to 1/2 that sent by broadcaster.  
DRC HIGH – DRC level is used as sent by broadcaster.  
Press MENU to confirm the setting. The display will return to normal.

### Prune (To Remove Stations That are Listed But Unavailable)

In DAB menu, press [◀] or [▶] to display the “Prune” submenu, press [ENTER] to select the Prune option.

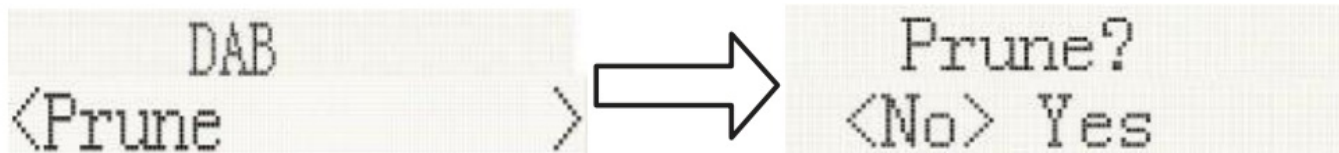


### System (DAB)

In DAB menu, press [◀] or [▶] to show the “SYSTEM” submenu, press the [ENTER] button to go to the system settings.


#### 1. Language

 Press [ENTER] to go to language selection; the default source language is English, the selected language will have “\*” displayed at the top right. Users may choose between English, French, Italian, Deutsch, Polish, Nederlands, Espanol

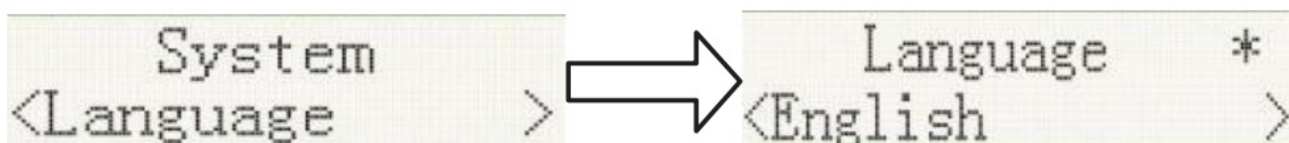


#### 2. Factory Reset

 Press [ENTER] to perform a factory reset. If you wish to perform the reset operation, push [◀] or [▶] until “YES” is highlighted on the display and press [ENTER]. A full reset of your radio will be performed. All presets and station lists will be erased.

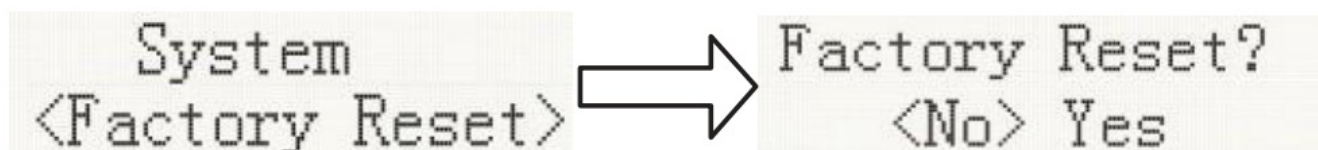


#### 3. SW Version

 Press [ENTER] to view DAB software version. Press Menu to stop displaying the software version.

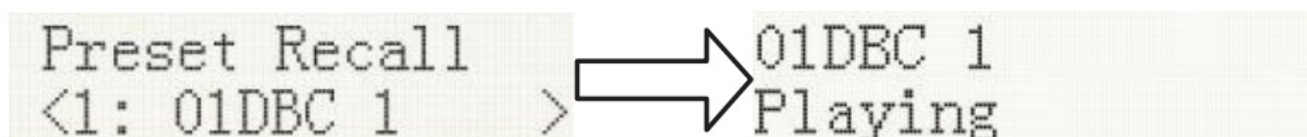

#### 4. SW Version

 Press [ENTER] to view DAB software version. Press Menu to stop displaying the software version.

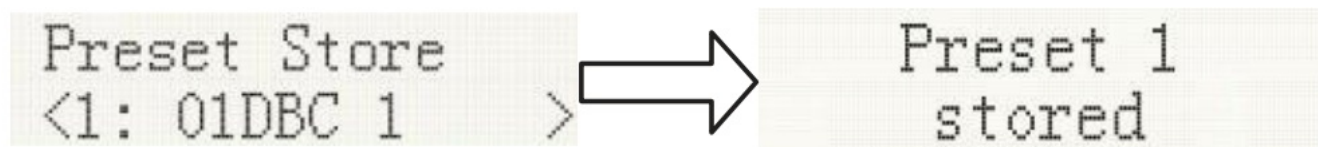


\*If there are no operations after 30 seconds, the display will return to normal.

### Preset
 
#### 1. Preset Recall

In DAB menu, press [◀] or [▶] station select “Preset Recall”, then press [ENTER] to tune to the stored in preset memory. Or press PROG. Button (11) of the remote control.

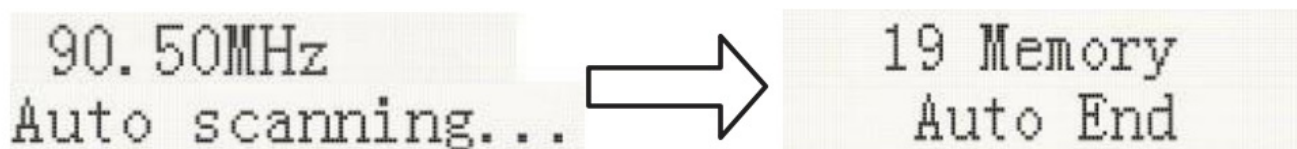


**Note:** If you have not previously stored a preset station and the preset button is pressed, “Empty preset” will be displayed.

## 2. Preset Store

 You may store your preferred DAB stations to the preset station memories. There are 50 memory presets in your radio. Presets are remembered by your radio in the event of a power failure.

In DAB menu, select [Preset store] with [◀] or [▶], then press [ENTER]. Press the “previous or next” buttons to select a storage space, then press [ENTER] to confirm the desired preset number under which you will store the station you are currently playing. Press [ENTER] to confirm.

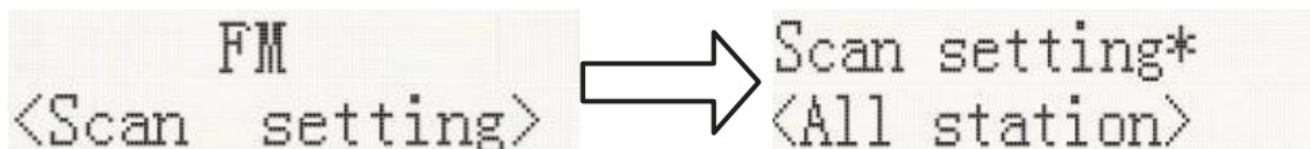


## 3. FM Radio

Carefully extend the telescopic aerial to its full length.

### Auto Scan

 1. Press the MODE key to select “FM Mode”.
2. Long Press [◀] or [▶] button, and your radio will scan and stop automatically when it finds a station of sufficient signal strength.
3. After a few seconds, the display will update. The display will show the station frequency. If the signal is strong enough and the station signal contains RDS data, then the radio will display the station name.
4. To find other stations, press and hold the [◀] or [▶] button as before.
5. To scan the FM band in the opposite direction (high frequencies to low frequencies), press the [◀] or [▶] button and hold for 2 seconds.
6. When the waveband end is reached, your radio will recommence tuning from the opposite waveband end.

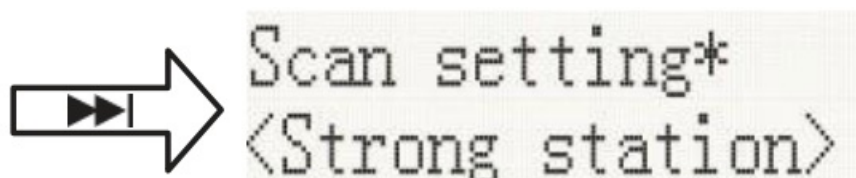

### Manual Scan

 
1. Press the MODE key on the main unit to select “FM Mode”.
2. Select FM mode as previously described, if required.
3. Press [◀] or [▶] shortly adjust tuning. Each press of the tuning button will change the frequency up or down by 50 kHz.
4. When the waveband end is reached, the radio will recommence tuning from the opposite waveband end. If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.

### Menu

1. Scan Setting


In FM mode, press MENU to enter the FM menu, then press [◀] or [▶] to select [Scan setting], then press ENTER to select the sensitivity setting:

1.1. All stations: ~15dB

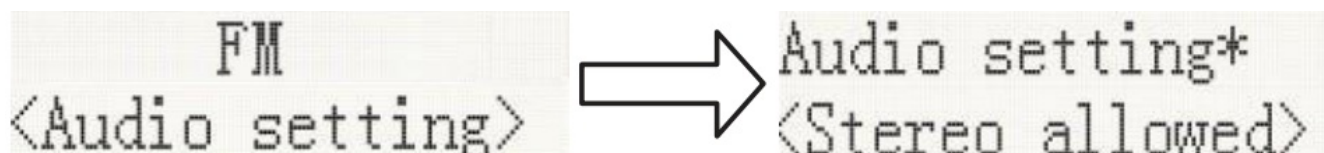


1.2. Strong stations only: ~19dB,

 2.

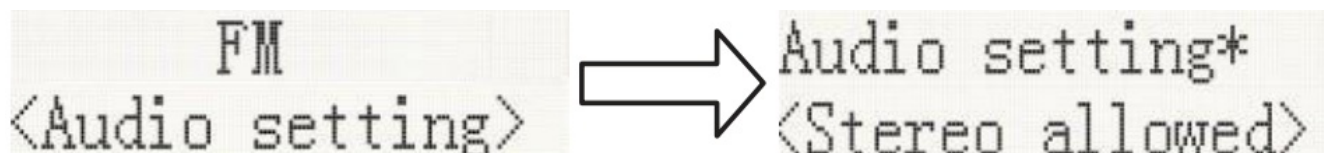


Audio Setting

 2.1. Stereo allowed:

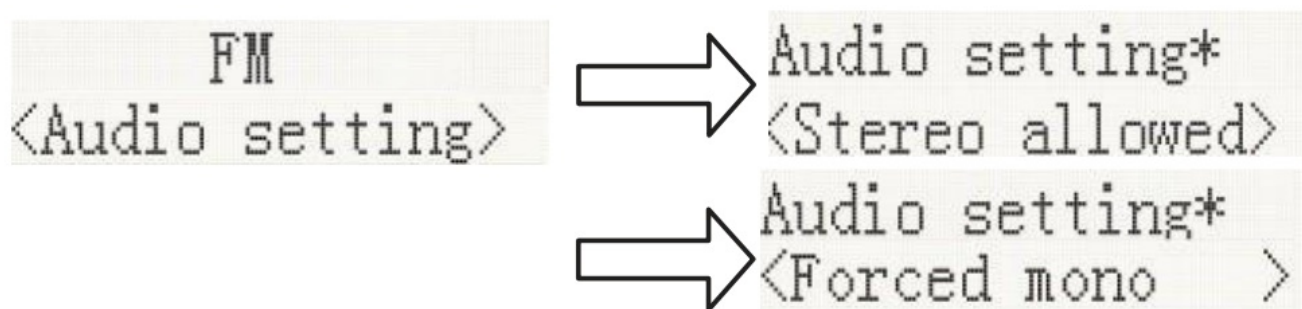

 
2.2. Forced mono

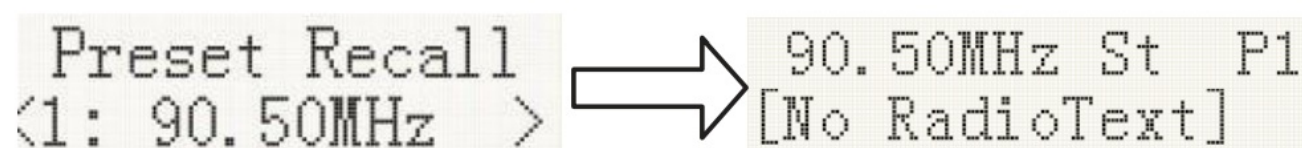

23. System (FM system), same as DAB system setting.

3. PRESET:

 
In FM menu, press [◀] or [▶] station select "Preset Recall", then press [ENTER] to tune to the stored in preset memory. Or press PROG. Button (15) of the remote control.

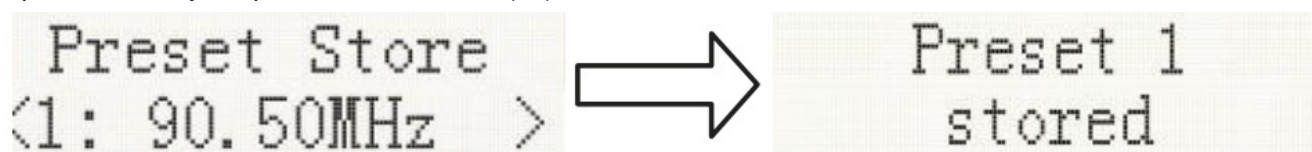

4. 3.1. Preset Store (Save a Station):

You may store your preferred FM stations to the preset station memories. There are 50 memory presets in your radio. Presets are remembered by your radio in the event of a power failure.

 In FM menu, select [Preset store] with ◀ and ▶, then press [ENTER]. Press the "previous or next" buttons to select a storage space, then press [ENTER] to confirm the desired preset number under which you will store the station you are currently playing. Press [ENTER] to confirm.

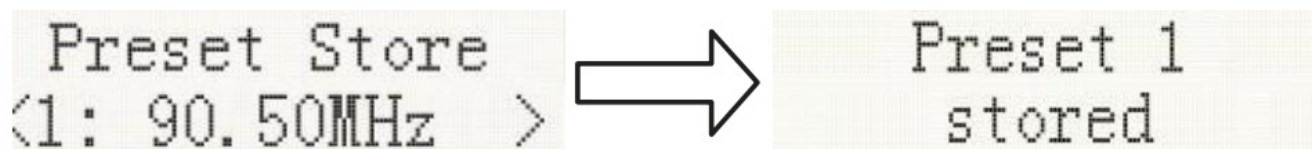

## Bluetooth Mode

You must follow several steps to connect your mobile phone:



1. Activate Bluetooth from your mobile phone (please refer to your phone's user manual)
2. Press POWER button to turn on the unit, then press the MODE button repeatedly until the "Bluetooth searching..." indicator appears on the LCD display. It will be ready to pair automatically.
3. Use your mobile phone to search for the Bluetooth device named "Lenco MC-175SI".
4. Select "Lenco MC-175SI" on your phone and it present the option to connect or not. Please connect to it using the password "0000" (if any). When you are successfully connected, the Bluetooth indicator "Bluetooth connected" appears on the LCD display.

### Automatically Connecting with Your Phone

Pairing is only needed the first time the unit and phone are used together. When the unit and phone have been paired once, they will automatically connect when the unit is on and Bluetooth is activated on the phone. The next time you power on, the unit will automatically connect to the most recently connected mobile phone.

### Play from Bluetooth Device

After successful Bluetooth connection, press the [▶||] button to play. Press the [◀◀] or [▶▶] button to skip the tracks backwards or forwards. To pause or resume play, press [▶||] the button again. Press and hold the button [ ] to disconnect all paired Bluetooth devices.

### Playing a compact disc (CD)

**NOTE:** Never touch the laser lens inside the CD compartment. Clean the laser lens using a CD cleaner disc if it becomes dirty.

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select the CD function.
3. Press the [▲] button to open the CD door and insert a CD into the tray (with printed label side facing up).
4. Press the [▲] button again to close the CD DOOR and the disc will rotate for a few seconds, then play the 1st track automatically.
5. To temporarily stop playback, press the [▶||] button, and to resume playback, press it again.
6. Press the [▲] button to STOP play.

### REVERSE/FORWARD

1. The [◀◀] or [▶▶] Buttons used to jump to a different track number or hold to scan disc tracks at high speed.
2. Press the [◀◀] button once to skip to the beginning of the current track. Press it two or more times to hear previous tracks on the disc.
3. Press the [◀◀] button to start playing the next tracks on the disc.
4. Press and hold the [◀◀] button; The current track will be rewarded towards the start of the track track(s); When the desired track section is found, release the button and normal play will resume.
5. Press and hold the [▶▶] button, the current track will be sped up towards the next track(s). When the desired track section is found, release the selected button and normal playback will resume.

### REPEAT FUNCTION

The CD REPEAT button may be used to repeat a single track or repeat all tracks on a compact disc.

1. Press the REPEAT button once during playback, the “REPEAT ONE” sign will appear on the LCD display for about 2 seconds. The same track will be repeated over and over.
2. Press the REPEAT button a second time to repeat all tracks. The “REPEAT ALL” sign will appear on the LCD display for about 2 seconds.
3. To cancel REPEAT PLAY, press the REPEAT button repeatedly until “REPEAT OFF” appears on the LCD display for about 2 seconds.

## PROGRAM FUNCTION

The Program feature may be used to program up to 20 tracks to play in a selected order.

1. While in the stop mode only (CD is not playing), press and hold the PROG button for 2 seconds, and the LCD display will show the wording “P 01” and “T 01” starts to flash.
  2. Press the [◀] or [▶] buttons to allocate the desired track.
  3. Press the PROG button to select and store the track into memory.
  4. Repeat step 2 to 3 to select up to 20 tracks.
  5. To play the selected tracks (in the program mode), press the [▶▶] button.
  6. Press the [◀] button to hear the previous program track or press the [▶] button to hear the next program track.
- Note: After all programmed tracks have been played, the CD player will return to the stop mode.
7. To clear the programmed tracks from memory, press [■] button twice.

## MP3 DISC SECTION

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select CD Mode.
3. Close the CD Door and the disc will rotate for a few seconds and then play the 1st track automatically.
4. Press the [◀◀] or [▶▶] buttons to choose a track.
5. To temporarily stop playback, press the [▶||] button; to resume, press the button again.
6. Press the [ ] button to stop play.

**Note:** Because MP3 discs have a large capacity, disc access times are a little longer.

## Repeat Playing Function

### Single Track Repeat

Press the REPEAT button once to repeat a single track. The display appears as “Repeat one”.

### Whole Disc Repeat

In Play mode, press the REPEAT button 2 times to repeatedly play all tracks on the disc. The display will show “Repeat All”.

To cancel repeat play, press the REPEAT button repeatedly until the “Repeat off” sign appears.

### PROGRAM PLAY

The tracks on the disc can be programmed to play in any order (up to 20 tracks can be programmed). Note: this can only be done while in Stop mode

1. Press the PROG button while in Stop mode. “P01” “F01” will appear on the display and “T001” will flash.
2. Press the [◀] or [▶] button to select the desired tracks in the album, then press the PROG button to store in the memory.
3. The first track number is now stored in memory, and the program number changes to “P02”, waiting for your

next selection.

4. Repeat Steps 1 – 3 to program additional tracks.

After programming is finished, press the [ ] button, and programmed play begins from the first programmed track. The player stops automatically after all programmed tracks have been played. (Press the [ ] button twice to cancel the programmed tracks memory).

### **Playing Music via USB**

This device has been developed using the latest technical advances in the USB field. However, given the wide range of USB storage device types that are currently on the market, we unfortunately cannot guarantee full compatibility with all USB storage devices. For this reason, in rare cases, there may be problems in playing back files from USB storage devices. This is not due to device malfunction.

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly until 'USB' appears on the display.
3. Connect a USB storage device directly into the PLAYER USB port. The display briefly shows the number of folders and then the total number of tracks. Playback will automatically start.
4. Operation of the control buttons is the same as for MP3 CD playback. Please refer to MP3 DISC SECTION operations as described previously.

### **NOTES:**

- Always directly connect a USB storage medium to the USB port to prevent any malfunctions.
- The PLAYER USB port is not designed for charging external devices.
- Important: Switch the device to a different operating mode before you remove the USB storage device.

### **Equalizer Function**

With your unit switched on (not in Standby mode):


Each time you press the EQ. button, you will change the EQ. setting like. Normal, Classic, Jazz, Pop, Rock, according to your individual preferences.

### **Wireless Charger Function**

Simply place your Qi wireless charging device on the wireless charger area indicated on the top surface and charging will begin on contact.

Output power: 5W/7.5W/10W

### **USB Charging (5V Out)**

The USB port is designed for charging external devices, such as smart phones. Output power is 5V  1A

### **Line Input Jack**

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select the Line-In mode. 'Line-in' will appear on the LCD display
3. Connect the 3.5mm connect wire from the line out jack of your personal player (e.g. portable MP3 player) to the Line input jack.
4. Start playback from your personal player.

### **Technical Specifications**

Input	AC 100-240V ~ 50/60Hz
Music power	2 x 20W RMS
Speaker Driver	6Ω, 20W
Batteries in remote control	2×1.5V AAA /UM4/LR03
DAB Frequency	174.928 – 239.200 MHz
FM Frequency	87.5 – 108 MHz
Bluetooth Frequency:	2402 – 2480MHz
Bluetooth Version:	V5.0
EIRP / RF output power:	<3.56dBm
Power consumption	Max 50W
Power consumption (standby)	< 1W
Operating Temperature	0°C-35°C
Operating position	Horizontal
Dim. unit	430 x 215 x 145mm
Weight	3.67KG

Remark: The maximum connection distance is around 10 meters. Please place your Bluetooth device as close as possible to this device to avoid connection getting disturbed.

**WARNING!** Risk of hearing impairment




- Set a low volume on the playback device before connecting headphones.
- Avoid excessive volume, particularly over extended periods or frequent use.

Excessive volume can result in permanent hearing impairment.



## About the disks



	<p><b>Handling</b> Do not touch the underside of disks. Hold disks by the edges to avoid leaving fingerprints on the surface. Any dust, fingerprints or scratches may cause a malfunction. Never affix a label or sticky tape to the disk.</p>
	<p><b>Storage</b> Put disks back in their case after use. Never expose disks to direct sunlight or heat sources. Never leave disks inside a car parked in full sunlight.</p>
	<p><b>Cleaning</b> Use a clean, soft, lint-free cloth to clean the disk, working from the center outwards in a straight line. Do not use solvents such as petrol, thinners, commercially available cleaners or antistatic sprays for vinyl disks.</p>

### Guarantee

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires. This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

### Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

### Disposal of the Old Device



— This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).


Type RF	Frequency range (MHz)	Power (dBm)
DAB	174-240	—
FM	87.5-108	—
Bluetooth	2402-2480	<6

### Service

For more information and helpdesk support, please visit [www.lenco.com](http://www.lenco.com)



## Documents / Resources

 <p>Model: MC-175SI V2</p> <p>User manual: CD-R, CD-RW, audio with 12 pin, USB and Bluetooth Dolby B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, AA, AB, AC, AD, AE, AF, AG, AH, AI, AJ, AK, AL, AM, AN, AO, AP, AQ, AR, AS, AT, AU, AV, AW, AX, AY, AZ, BA, BB, BC, BD, BE, BF, BG, BH, BI, BJ, BK, BL, BM, BN, BO, BP, BQ, BR, BS, BT, BU, BV, BW, BX, BY, BZ, CA, CB, CC, CD, CE, CF, CG, CH, CI, CJ, CK, CL, CM, CN, CO, CP, CQ, CR, CS, CT, CU, CV, CW, CX, CY, CZ, DA, DB, DC, DD, DE, DF, DG, DH, DI, DJ, DK, DL, DM, DN, DO, DP, DQ, DR, DS, DT, DU, DV, DW, DX, DY, DZ, EA, EB, EC, ED, EE, EF, EG, EH, EI, EJ, EK, EL, EM, EN, EO, EP, EQ, ER, ES, ET, EU, EV, EW, EX, EY, EZ, FA, FB, FC, FD, FE, FF, FG, FH, FI, FJ, FK, FL, FM, FN, FO, FP, FQ, FR, FS, FT, FU, FV, FW, FX, FY, FZ, GA, GB, GC, GD, GE, GF, GG, GH, GI, GJ, GK, GL, GM, GN, GO, GP, GQ, GR, GS, GT, GU, GV, GW, GX, GY, GZ, HA, HB, HC, HD, HE, HF, HG, HH, HI, HJ, HK, HL, HM, HN, HO, HP, HQ, HR, HS, HT, HU, HV, HW, HX, HY, HZ, IA, IB, IC, ID, IE, IF, IG, IH, II, IJ, IK, IL, IM, IN, IO, IP, IQ, IR, IS, IT, IU, IV, IW, IX, IY, IZ, JA, JB, JC, JD, JE, JF, JG, JH, JI, JJ, JK, JL, JM, JN, JO, JP, JQ, JR, JS, JT, JU, JV, JW, JX, JY, JZ, KA, KB, KC, KD, KE, KF, KG, KH, KI, KJ, KK, KL, KM, KN, KO, KP, KQ, KR, KS, KT, KU, KV, KW, KX, KY, KZ, LA, LB, LC, LD, LE, LF, LG, LH, LI, LJ, LK, LL, LM, LN, LO, LP, LQ, LR, LS, LT, LU, LV, LW, LX, LY, LZ, MA, MB, MC, MD, ME, MF, MG, MH, MI, MJ, MK, ML, MM, MN, MO, MP, MQ, MR, MS, MT, MU, MV, MW, MX, MY, MZ, NA, NB, NC, ND, NE, NF, NG, NH, NI, NJ, NK, NL, NM, NN, NO, NP, NQ, NR, NS, NT, NU, NV, NW, NX, NY, NZ, OA, OB, OC, OD, OE, OF, OG, OH, OI, OJ, OK, OL, OM, ON, OO, OP, OQ, OR, OS, OT, OU, OV, OW, OX, OY, OZ, PA, PB, PC, PD, PE, PF, PG, PH, PI, PJ, PK, PL, PM, PN, PO, PP, PQ, PR, PS, PT, PU, PV, PW, PX, PY, PZ, QA, QB, QC, QD, QE, QF, QG, QH, QI, QJ, QK, QL, QM, QN, QO, QP, QQ, QR, QS, QT, QU, QV, QW, QX, QY, QZ, RA, RB, RC, RD, RE, RF, RG, RH, RI, RJ, RK, RL, RM, RN, RO, RP, RQ, RR, RS, RT, RU, RV, RW, RX, RY, RZ, SA, SB, SC, SD, SE, SF, SG, SH, SI, SJ, SK, SL, SM, SN, SO, SP, SQ, SR, SS, ST, SU, SV, SW, SX, SY, SZ, TA, TB, TC, TD, TE, TF, TG, TH, TI, TJ, TK, TL, TM, TN, TO, TP, TQ, TR, TS, TT, TU, TV, TW, TX, TY, TZ, UA, UB, UC, UD, UE, UF, UG, UH, UI, UJ, UK, UL, UM, UN, UO, UP, UQ, UR, US, UT, UU, UV, UW, UX, UY, UZ, VA, VB, VC, VD, VE, VF, VG, VH, VI, VJ, VK, VL, VM, VN, VO, VP, VQ, VR, VS, VT, VU, VW, VX, VY, VZ, WA, WB, WC, WD, WE, WF, WG, WH, WI, WJ, WK, WL, WM, WN, WO, WP, WQ, WR, WS, WT, WU, WV, WW, WX, WY, WZ, XA, XB, XC, XD, XE, XF, XG, XH, XI, XJ, XK, XL, XM, XN, XO, XP, XQ, XR, XS, XT, XU, XV, XW, XX, XY, XZ, YA, YB, YC, YD, YE, YF, YG, YH, YI, YJ, YK, YL, YM, YN, YO, YP, YQ, YR, YS, YT, YU, YV, YW, YX, YY, YZ, ZA, ZB, ZC, ZD, ZE, ZF, ZG, ZH, ZI, ZJ, ZK, ZL, ZM, ZN, ZO, ZP, ZQ, ZR, ZS, ZT, ZU, ZV, ZW, ZX, ZY, ZZ</p>	<p><b><a href="#">Lenco MC-175SI (V2) CD Player USB and Bluetooth</a> [pdf] User Manual</b></p> <p>MC-175SI V2 CD Player USB and Bluetooth, MC-175SI V2, CD Player USB and Bluetooth, Play er USB and Bluetooth, USB and Bluetooth</p>
---	--

## References

- [Lenco.com | Officiële Lenco Webshop](#)
- [Lenco.com | Officiële Lenco Webshop](#)
- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.