



Lenco PA-220BK Bluetooth Party Speaker User Manual

[Home](#) » [Lenco](#) » Lenco PA-220BK Bluetooth Party Speaker User Manual 

Lenco

PA-220BK Bluetooth Party Speaker
User Manual



CAUTION:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space

around the whole device.

2. Install in accordance with the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles, and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb the normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
6. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids.
To remove severe stains, you may use a damp cloth with diluted detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device, or battery replacement.
15. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has a USB playback function, the USB memory stick should be plugged into the unit directly. Don't use a USB extension cable because it can cause interference resulting in failure of data.
17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory, or mental disabilities, or a lack of experience and knowledge unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
19. This product is intended for nonprofessional use only and not for commercial or industrial use.
20. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
21. Never remove the casing of this device.

22. Never place this device on other electrical equipment.
23. Do not allow children access to plastic bags.
24. Only use attachments/accessories specified by the manufacturer.
25. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when the liquid has been spilled or objects have fallen into the device when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
26. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
27. If the product is delivered with a power cable or AC power adaptor:
 - If any trouble occurs, disconnect the AC power cord and refer servicing to qualified personnel.
 - Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
 - Unplug this device during lightning storms or when unused for a long period.
 - The socket-outlet must be installed near the equipment and must be easily accessible.
 - Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
 - Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
 - Devices with class 2 construction do not require an earthed connection.
 - Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
 - Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
28. If the product contains or is delivered with a remote control containing coin/cell batteries:

Warning:

 
 - "Do not ingest battery, Chemical Burn Hazard" or equivalent warning.
 - [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 - Keep new and used batteries away from children.
 - If the battery compartment does not close securely, stop using the product and keep it away from children.
 - If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
29. Caution about the use of Batteries:
 - Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
 - Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage, or transportation.
 - Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or that leakage of flammable liquid or gas.
 - A battery subjected to the extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

- Attention should be drawn to the environmental aspects of battery disposal.

INSTALLATION


- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

REAR PANEL

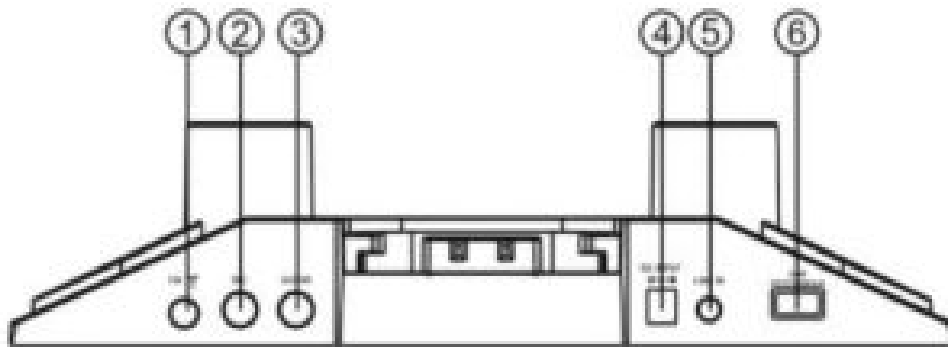

- | | |
|--------------------------------|----------------------------------|
| 1. FM Antenna | 4. DC INPUT |
| 2. MIC: Wired Mic input socket | 5. LINE IN: Line-in input socket |
| 3. Guitar: Guitar input socket | 6. USB: USB input socket |

 
TOP PANEL

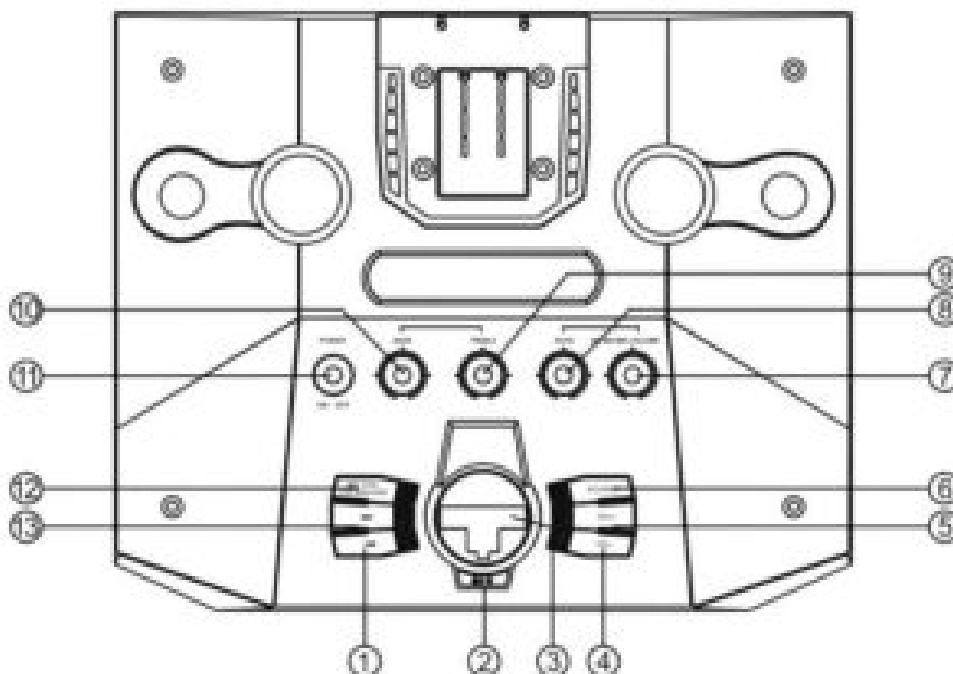

1. PREV: Press this key to go to the previous track in USB/BT modes.
2. STANDBY/LIGHT MODE:
Press this key to change the Light mode between LED1, LED2, LED3, and Off. Press and hold for Standby, ON or OFF.
3. LED DISPLAY: To display speaker status.

4. VOL-: To decrease the volume.
5. VOL+: To increase the volume.
6. SOURCE: Press this key to change sources between USB, BT, FM, LINE.
7. WL MIC/MIC VOLUME: Volume control knob for microphone and wireless microphone.
8. ECHO: To adjust the echo level of the connected mic.
9. TREBLE: To adjust TREBLE levels.
10. BASS: To adjust BASS levels.
11. POWER: Power ON or OFF.
12. PLAY/PAUSE/TWS/FM auto-scan: Press to PLAY/PAUSE a track in USB/BT mode.
Press and hold to ON or OFF the TWS (True Wireless Stereo) mode. In FM mode, press for the fully automatic search.
13. NEXT: Press this key to go to the next track in USB/BT modes.

 REMOTE CONTROL

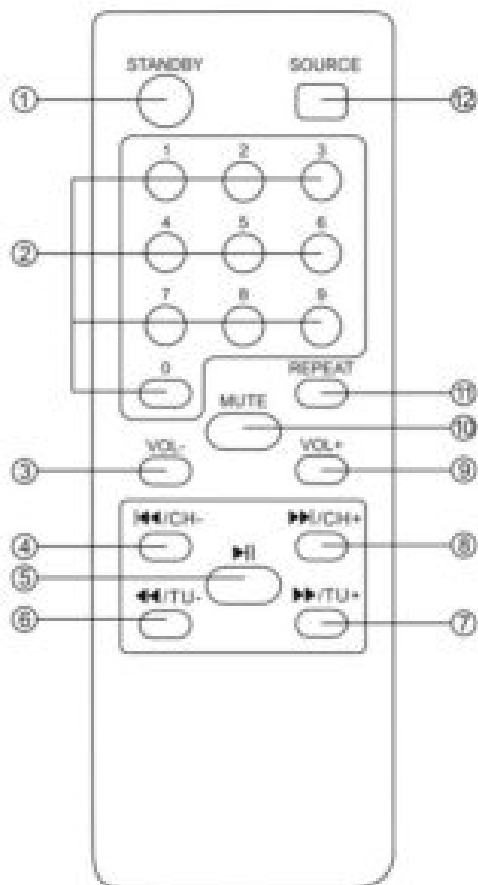

1. STANDBY: Standby ON/OFF key.
2. 0~9 NUMERIC KEYS: These keys are used to play a track directly in USB source mode.
E.g.: To play the 12th track in the USB playlist press the numeric key “1” followed by “2.”
3. VOL-: To decrease the volume.
4. /CH-: Play the previous song by pressing “/CH-” at USB/BT input mode. Choose the previous channel by pressing “/CH-” at FM input mode.
5. : Play/Pause in USB/BT mode. In FM mode, press for automatic search.

6. /TU-: Fast rewind a song by pressing " /TU-" at USB input mode. Choose tuning channel by pressing " /TU-" at FM input mode.
7. /TU+: Fast forward song by pressing " /TU+" at USB input mode. Choose tuning channel by pressing " /TU+" at FM input mode.
8. /CH+: Play the next song by pressing " /CH+" at USB/BT input mode. Choose the next channel by pressing " /CH+" at FM input mode.
9. VOL+: To increase the volume.
10. MUTE: Press to toggle the volume mute ON/OFF.
11. REPEAT: Choose repeat mode by pressing "REPEAT" at the USB input mode.
12. SOURCE: Press this key to change the source between USB, BT, FM, LINE.

Bluetooth pair and connect

- Turn off any Bluetooth devices previously paired (linked) with this unit.
- Turn on the Bluetooth features on your phone or music player.
- Turn on and set this unit to Bluetooth mode. The flashing: "  " on the LED display indicates it is in pairing mode.
- Set your phone or music player to search for Bluetooth devices.
- Select "Lenco PA-220" from search results on your phone or music player.
- Select OK or YES to pair this unit with your phone or music player.
- If protected, enter 0000 for passkey steady blue light indicates a successful connection.

TWS (True Wireless Stereo) mode


Turn on 2 speaker equipment and select both unit INPUT mode as Bluetooth

2. Press the "TWS" key on the speaker set for 2 seconds, it will show "  " on display, TWS is connecting to another speaker equipment and will connect successfully after a sound indication or display shows "  "
3. Turn on your Bluetooth feature on your mobile phone to search Bluetooth devices and select "Lenco PA-220" from the search result, select OK or YES to pair this unit with your mobile phones and a steady blue light will indicate the connection is successful and can play any music from your mobile phones
4. Press the "TWS" key on the speaker unit for 2 seconds and it will turn off TWS features after showing "  " on display.


FM Radio Operation

1. Before using the radio functions, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.
Press [SOURCE] repeatedly to select FM mode.
2. Press the CH+/CH- key on the remote control or Long press the key "  /  " on the top panel to skip to the preset station.
3. Press the TU+/TU- key on the remote control or press the key "  /  " on the top panel to adjust the radio frequency manually.
The number key on the remote control can directly select the frequency

4. Press the key “▶||” on the top panel or remote, the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.

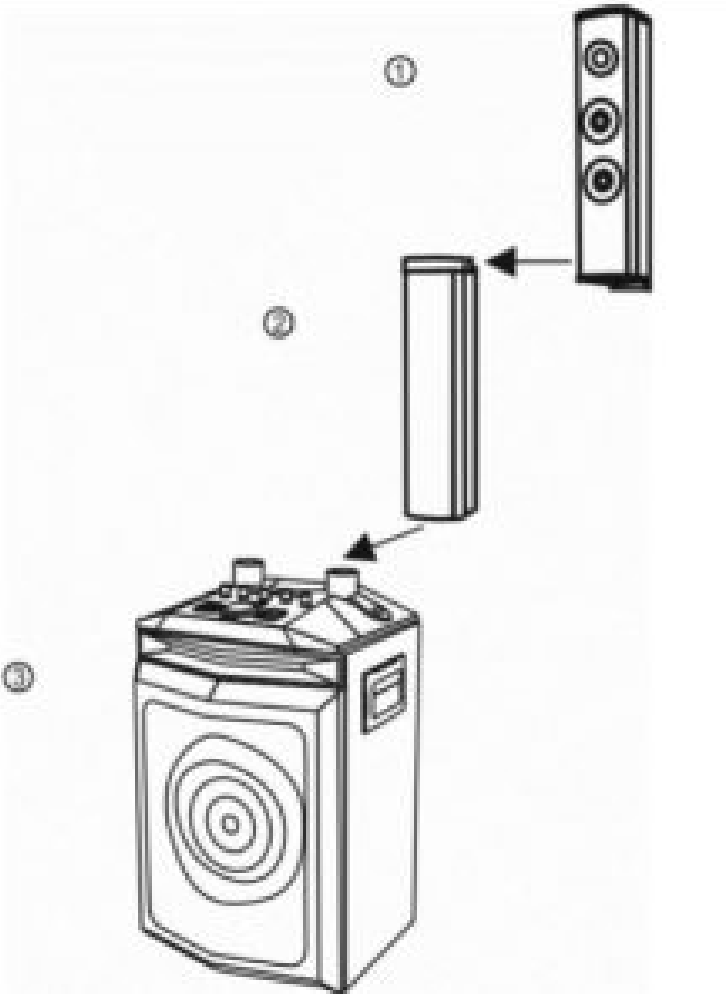 INSTALLATION	DISMANTLE
	

 Power on

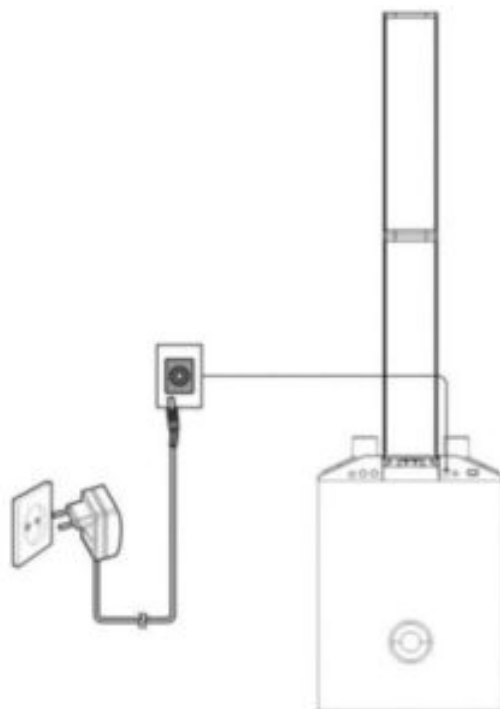

SPECIFICATION

Frequency Response	20Hz-18KHz
Power Source	100-240V~,50/60Hz
Power Consumption	85W
Output power	120W
Microphone	Wireless 864 & 865MHz
Bluetooth	V5.0
FM radio	87.5-108 MHz
Unit Size (W x D x H)	30×33.5×126cm
Tweeter size	1 x 1 inch
Woofer size	2 x 3 inch
Subwoofer size	1 x 10 inch
Unit Weight	10.5kg
Working Temperature	0-35 °C

- The specification is presented only as a reference. The value of weight and size is approximations.
- Our product is improved ceaselessly and the specification and function may be changed without prior notice.

Power supply adaptor (For EU only)


Manufacturer: GUANGZHOU GUANG ER ZHONG ELECTRONIC TECHNOLOGY CO., LTD

Model number: GPUSW1853000WD00

Use only the power supply listed in the user instructions

Information	
Manufacturers name or trademark, commercial registration, and address	Guangzhou Guang Er Zhong Electronic Technology CO., LTD
Model Identifier	GPUSW1853000WD00
Input voltage	100-240V AC
Input AC frequency	50/60 Hz
Output voltage	18.5 V DC
Output current	3:00 AM
Output Power	55.5W
Average active efficiency	88%
Efficiency at low load (10%)	85%
No-load power consumption	0.15W

 Accessories-included

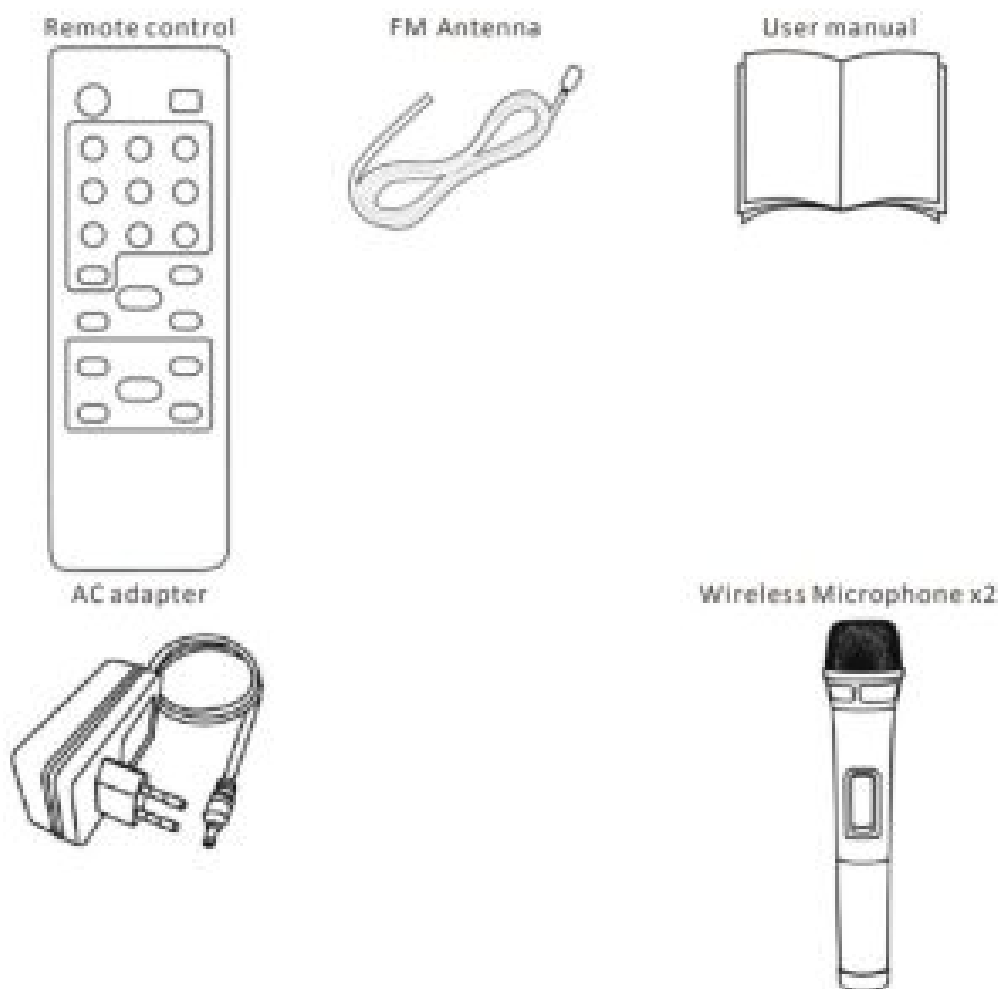

Guarantee

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications, and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to a particular situation. No legal rights or entitlements may be obtained from the description made in this manual.

Disposal of the Old Device



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws of the requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve of environmental protection in the treatment and disposal of electrical waste (Waste Electrical and Equipment Directive).

CE Marking

Hereby, Lenco Benelux B.V., Thermiekstraat 1a, 6361 HB Nuth, The Netherlands, declares that this product is in compliance with the essential EU directive requirements.

The declaration of conformity may be consulted via techdoc@commaxxgroup.com



Service

For more information and helpdesk support, please visit www.lenco.com Lenco Benelux BV, Thermiekstraat 1a, 6361 HB Nuth, The Netherlands.

Contents

1 Documents / Resources
2 Related Posts

Documents / Resources

