



Lenco Xemio-768 MP3-MP4 Player with Bluetooth User Guide

[Home](#) » [Lenco](#) » Lenco Xemio-768 MP3-MP4 Player with Bluetooth User Guide 

Contents


- [1 Lenco Xemio-768 MP3-MP4 Player with Bluetooth Controls and Connections](#)
- [2 Charging the battery](#)
- [3 Downloading the User's Manual](#)
- [4 Video Converter Tool](#)
- [5 Guarantee](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Lenco

Lenco Xemio-768 MP3-MP4 Player with Bluetooth



Controls and Connections

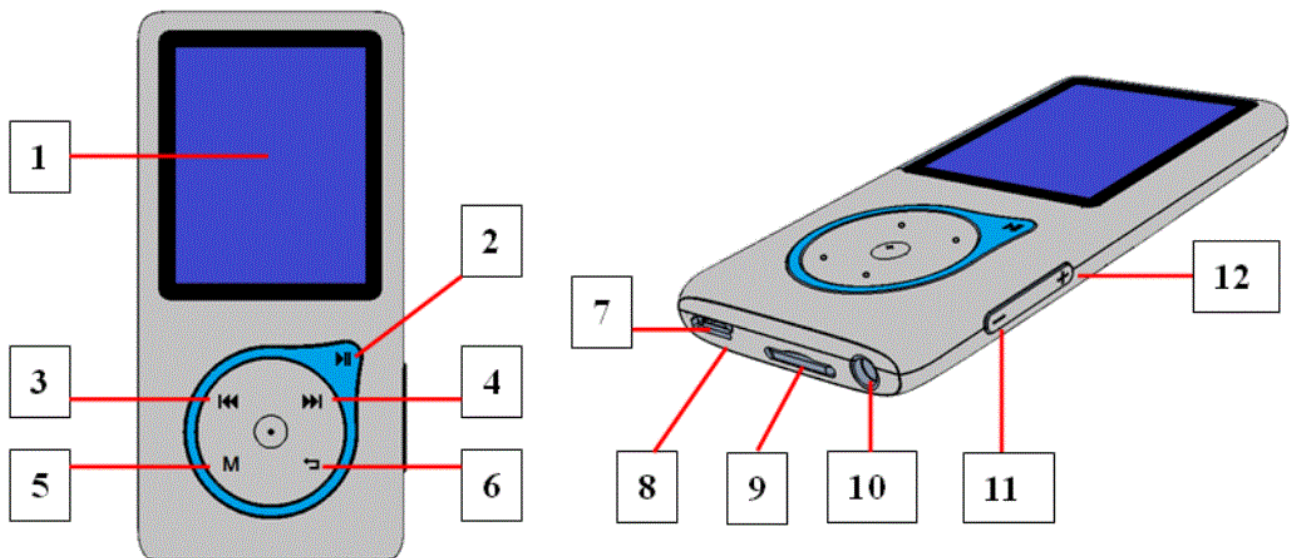

Item	Description	
1	TFT LCD Display	
2		Button (ON / OFF, Play / Pause, Select / Enter)
3		Button (Previous / Fast-Rewind, Item up)
4		Button (Next / Fast-Forward, item down)
5	M	Button (Call Menu / Submenu)
6		Button (Exit; Back to Previous Menu / Main Menu)
7	USB Micro Connector (PC Connection / Charge)	
8	Microphone Position (inside Micro USB port)	
9	Memory Card Slot (for Micro SD Card)	
10	Earphone Output Jack (3.5mm Stereo)	
11		Button (Volume Down)
12		Button (Volume Up)

Insert the included Micro SD Memory card before using the player

- If not already switched off, turn off the player and plug in the Micro SD memory card into players card slot. Now you can connect the player to your computer (PC/Mac) to copy your favorite music files to the player.
 - Note that “Disk error!” will be displayed, if no Micro SD card is inserted into the player and the play function is selected.

Charging the battery

- Make sure that your computer is turned on. Connect the player to the computer by using the included USB cable. The computer will detect and install the driver automatically. Once the installation is complete, the player will be displayed as device in “My Computer” or for MAC users on the desktop.
- When connected to a computer, the player will charge automatically. It will take 2 ~ 3 hours to fully charge the battery. During charging it's possible to up- download files to the inserted Micro SD card.

Warning:


Better use the original USB cable delivered with your MP3 player. This cable is a data and charging cable. Some other USB cables in the market are charging only cables. If you use a charging only cable to transfer data from your computer to your player, it will only show the battery symbol on the screen and will not be detected by your computer as an external drive; this means that you cannot transfer any files from your computer to your MP3 player.

Note :

The player contains a built-in temperature monitor sensor. If it detects that the battery pack temperature is not within acceptable values, it will control and stop the charging function. The charging function will automatically restart when the detected battery pack temperature returns to delete normal limits.

Turn ON / OFF the player and use of Main Menu:

- Press and hold the button for 3 seconds to turn the player “ON”, You will see one of the following Menu screens “Bluetooth / Music /Movie / Record / Picture / Setup / eBook”

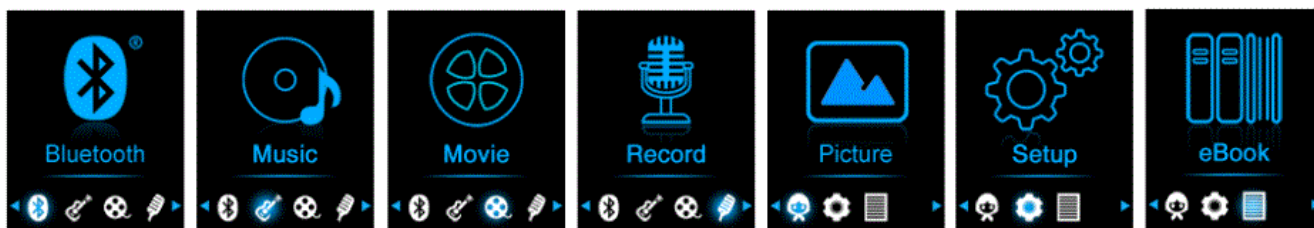

- Select your desired menu function by using the button.
- To return to the previous screen, press the button.
- Adjust the volume level by pressing the / button.
- To turn OFF the player, press and hold the button for 3 seconds.

NOTE about the hearing protection function

a display warning pops up on the screen, or a beep warning can be heard from the earphone every time you increase the volume and reach to the default setting level 12 which may exceed 85dB limit . Press the M button to accept the warning And continue increasing the volume by pressing + Bluetooth Audio Transmission

To Turn On the Bluetooth Function


- From the main menu, choose the Bluetooth function by using / and buttons, and a Bluetooth sub-menu appears.

Search and Pair Bluetooth device

NOTE: B

Before pairing, please make sure your Bluetooth Receiver Device supports the Bluetooth A2DP profile.

- Keep the device within a 1 meter range of your Bluetooth receiver device. Power it On and set it into searching/pairing mode;
- Turn the BT On in BT Control menu.
- Then in the Bluetooth list menu choose Search Device by using the / and buttons, the device will start searching for approximately 10 ~ 20 seconds. Devices found will be listed on the screen.
- Choose your device from the on-screen list and choose “Pair / connect by using the / and button. Wait a few seconds, both device s should be paired and a Bluetooth icon “ “ will show on the display indicating the Bluetooth connection is ok. If the connection is lost the color of the Bluetooth symbol will change to grey.

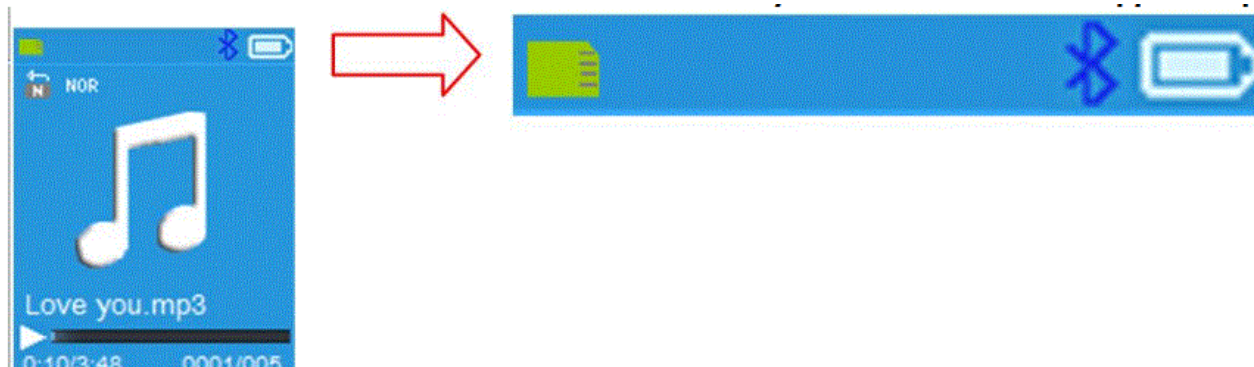

- Choose “ Folders & songs ” in the Music menu list to directly select your favorite music
- “The player will switch to the Now Playing” screen You now can select Previous Next Play Pause and adjust volume by using the / , and / buttons

- To exit the Bluetooth Transmission function, press the button until you see the main menu icons. Select the Bluetooth menu. Select 'BT control' from the list and select 'Turn BT off'.

Bluetooth Function notes:

1. When using the Bluetooth audio transmitting mode, the player's earphone output will be turned off automatically;
2. There is no fast forward / backward function in Bluetooth mode.
3. The equalizer function doesn't work when using a Bluetooth earphone/headphone
4. Only when using a cabled device the equalizer function will work.

Downloading the User's Manual

- To help save the environment, the detailed User's Manual is stored in the folder named "UTILITIES > User Manual" on the included Micro SD. To open it you need to download it onto your computer. It also can be downloaded from our website via www.Lenco.EU/...downloads

Note:

To open the user manual your computer needs to have a pdf reader installed. You can download a pdf reader for free on <http://get.adobe.com/reader>

Video Converter Tool

- The video convert tool is stored on the Micro SD card, in a folder named "UTILITIES > Video Conversion Software". Download it onto your computer for copy, and then you can install this tool on computer directly.

WARNING:

When participating in the traffic listening to a personal music player can make the listener less aware of potential dangers such as approaching cars.

WARNING:

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Guarantee

Lenco offers service and warranty in accordance with the European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note: If this unit is opened or accessed by a nonofficial service center in any way, the warranty expires. This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Disposal of the Old Device

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance to any applicable local laws of requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in the treatment and disposal of electrical waste (Waste Electrical and

Electronic Equipment Directive).



CE Marking

Hereby, Commaxx B.V. Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands, declares that this product is in compliance with the essential EU directive requirements.
The declaration of conformity may be consulted via techdoc@commaxxgroup.com




Service

For more information and helpdesk support, please visit www.lenco.com Commaxx B.V. Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands

Documents / Resources

	<p>Lenco Xemio-768 MP3-MP4 Player with Bluetooth [pdf] User Guide Xemio-768, MP3-MP4 Player with Bluetooth, Xemio-768 MP3-MP4 Player with Bluetooth</p>
	<p>Lenco Xemio-768 MP3-MP4 Player [pdf] User Manual Xemio-768, MP-208, MP3-MP4 Player, MP4 Player, Player, MP3-MP4</p>

References

-  [Adobe - Download Adobe Acrobat Reader DC](#)
-  [Lenco.com | Officiële Lenco Webshop](#)
-  [Lenco.com | Officiële Lenco Webshop](#)