



Lenercom LC-PM3-24 Jump Starter User Manual

[Home](#) » [LENERCOM](#) » Lenercom LC-PM3-24 Jump Starter User Manual 

Contents

- 1 Lenercom LC-PM3-24 Jump Starter
- 2 Product Information
- 3 Product Usage Instructions
- 4 PRODUCT OVERVIEW
- 5 OPERATION
- 6 Jump Starter Instruction
- 7 Charging Cell Phone or Tablet Instruction
- 8 PARTS LIST
- 9 TECHNICAL SPECIFICATIONS
- 10 FAQ
- 11 TROUBLESHOOTING
- 12 WARRANTY
- 13 Documents / Resources
 - 13.1 References

Lenercom

Lenercom LC-PM3-24 Jump Starter



Product Information

Specifications:

- Dimension: 322x101x45mm
- Weight: 880g
- Battery Capacity: 24000mAh (88.8Wh)
- Output:
 - USB-C: 5V=3A
 - Quick Charge: 5V=3A; 9V=2A; 12V=1.5A
 - 5V=2.4A; 15V=10A; 12V jump start
- Input: USB-C(5V=3A)
- Full charging time: About 4 hours
- Start current: 1500A
- Peak current: 3000A
- Operating temperature: -20-60°C
- Dustproof and waterproof grade: IP65

Product Usage Instructions

Lenercom Jump Starter Charging Instruction:

1. Plug the suitable home adapter into the universal socket.
2. Connect the USB-C connector to the Lenercom Jump Starter host.

Jump Starting a 12V Vehicle:

1. Connect the blue plug fully seated into the host.
2. Ensure the Cable Indicator is off.
3. Connect the Red Clamp to the positive (+) battery terminal and the Black Clamp to the negative (-) battery terminal.
4. Operate following the instructions of the Cable Indicator.
5. Start the vehicle when instructed.

Charging Cell Phone or Tablet:

1. Plug the switch cable to the Quick Charge output port.
2. Select the appropriate connector and connect it to your mobile phone or tablet.
3. Touch the switch button to start charging your device.

Power Supply to Vehicle Products or Electronics:

1. Plug the optional switch cable to the 15V 10A output port.
2. Connect the optional switch cable to the vehicle product or electronics.
3. Press the switch button to provide power supply.

LED Flashlight:


- Press the switch for 3 seconds to start the LED flash light.
- There are 4 modes of LED light (normal, strobe, SOS, off) that cycle through when you press slightly.

Thank you for choosing the Lenercom Jump Starter!


Always follow basic safety precautions when using electrical appliances. Read all instructions carefully, Please keep this instruction manual for easy reference.

PRODUCT OVERVIEW

LAYOUT

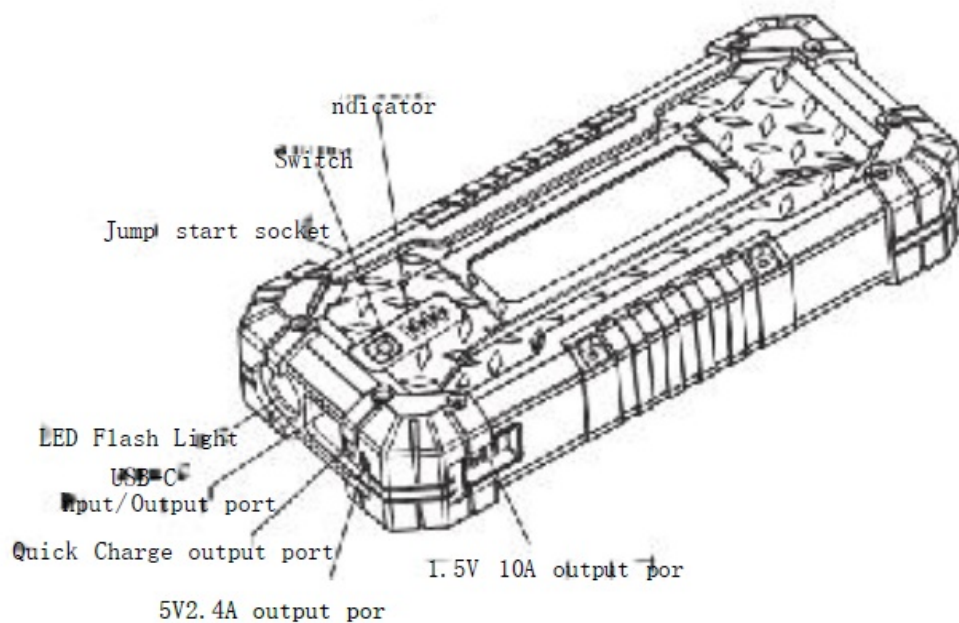

Package Content

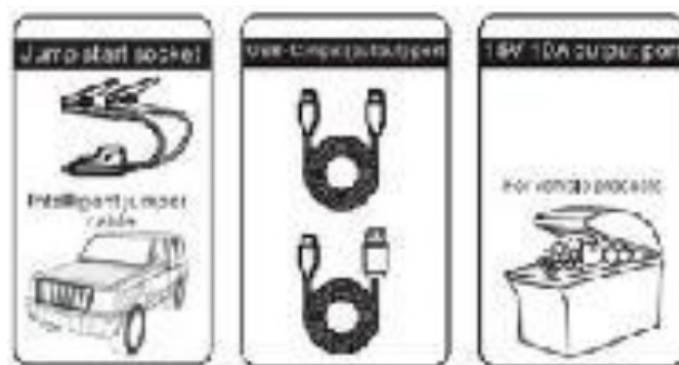

OPERATION

GUIDANCE

Indicator

Press the switch to check the storage level of the Lenercom Jump Starter.

- **Indicator:** Unlit / solid / 2 solid / 3 solid / 4 solid
- **Storage level:** 0% / 25% / 50% / 75% / 100%


The indicator will flash one by one during the period of charging. Different numbers of solid indicators show different storage level of the Lenercom Jump Starter. All indicators light off when the charging is paused or completed.

Jump Starter Instruction

Lenercom Jump Starter Charging Instruction

1. Plug the suitable home adaptor into the universal socket

2. Connect the USB-C connector to the Lenercom Jump Starter host.

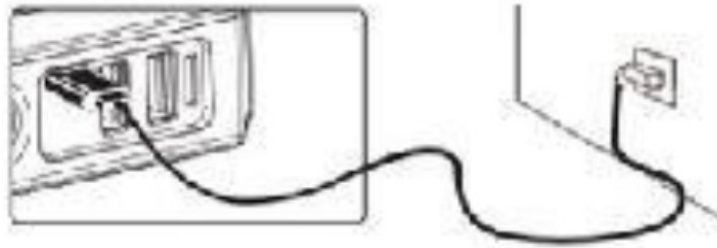

Jumpstart 12V vehicle Instruction:

1. Connect the blue plug fully seated into the host, and make sure the Cable Indicator is off
2. Connect Red Clamp to the positive(+)battery terminal, Black Clamp to the negative(-)battery terminal
3. Operate following the instructions of the Cable Indicator



Indicators



GREEN LIGHT
 When the connection is correct and the circuit is working, you can turn on the engine to jump-start directly.



REVERSE RED LIGHT on:
 Telling the user the connection is incorrect. Please check the connection and wait until the GREEN LIGHT is on to turn on the engine.



GREEN LIGHT
 When the vehicle's battery is low, press the "BOOST" button, wait for the GREEN LIGHT to come solid, then turn on the engine within 30s.



No Lights on
 Saying the vehicle's battery maybe damaged, after confirm the clamps connection is correct press the "BOOST" button. The GREEN LIGHT is on, and you can turn on the engine within 30s.

1. Start the vehicle
2. When the vehicle is started, remove the jumper cable from the vehicle battery. Leave the vehicle's engine running

Charging Cell Phone or Tablet Instruction

1. Plug the switch cable to the Quick Charge output port.
2. Select appropriate connector and connect it to your mobile phones or tablet
3. Touch the switch button, it can recognize electronic products' suitable parameters, start to charge for mobile phone/tablet etc.




For power supply to vehicle products or electronics

1. Plug the optional switch cable to 15V 10A output port.
2. Connect the optional switch cable and vehicle product or electronics
3. Press the switch button to power supply.

LED flash light

- Press the switch 3 seconds to start the LED flash light
- There are 4 modes of LED light that appear in order(normal. strobe. SOS.off)if you press slightly.

PARTS LIST

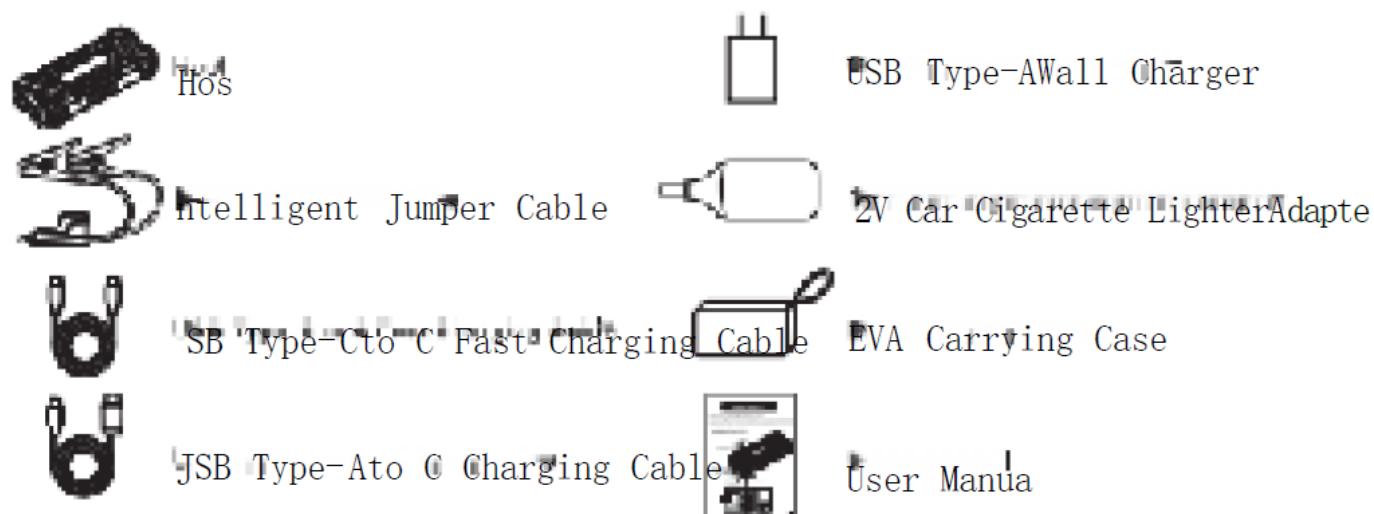

TECHNICAL SPECIFICATIONS

- **Dimension:** 322x101x45mm
- **Weight:** 880
- **Battery Capacity:** 24000mAh(88.8Wh)

- **Output:** USB-C(5V=3A);Quick Charge(5V=3A;9V=2A;12V-1.5A)
 - 5V=2.4A;15V=10A;12V jump start
- **Input:** USB-C(5V=3A)
- **Full charging time:** About 4 hours
- **Start current:** 1500A
- **Peak current:** 3000A
- **Operating temperature:** -20°C-60°C
- **Dustproof and waterproof grade:** IP65

FAQ

Q. How to turn off this appliance?

A. This appliance will power off automatically when no load or charging is complete

Q. How long time to full charge the Lenercom Jump Starter?

A. Approx. 4 hours through the USB-C input port.

Q. How many times can this appliance charge for my cell phone?

A. Depend on the battery capacity of your cell phone. Take iPhone 6 as an example, can full charging 8 times

Q. How many times can this appliance jump start the 3.0L Gasoline vehicle if it is full battery?

A. Approx 25 times

Q. What's the lifetime of Lenercom Jump Starter?

A. Usually 3-5 years in normal condition

Q. How long the storage of battery will remain?

A. 6-12 months however we suggest to recharge it every 3 months

TROUBLESHOOTING

Eindi0c / Cause / Damedios

- No response when Low voltage protection pressing the switch Lenercom Jump Start button

TOXIC AND HARMFUL SUBSTANCES

Composition and amount of toxic and harmful substances in Lenercom Jump Starter

- Pb / Hg / Cd / Cr(Vi) / PBB / PBDE
- O / O / O / O / O / O

O: Indicate all homogeneous materials hazardous substances content are below the MCV limit specified in the Standard 2002/95/EC(RoHs)

WARNING:

1. Read the instruction manual carefully before using this unit
2. Do not use in place of a vehicle battery.
3. Do not use as a toy.
4. To reduce the risk of injury,close supervision is necessary when the product is used near children.
5. Jump for 12V vehicles,it would be hazard if for other jumping.
6. Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
7. Do not connect the two clamps together.
8. Before starting,ensure that there is no corrosion at the interface and no foreign matter adheres. Connect the main unit to the battery holder tightly to avoid the impact of the interface connection
9. After successfully starting the car, please remove the product from the car battery within 30s, otherwise it may cause damage
10. Do not Jump Start more than 3 times in a row,It could damage the unit by overheating. When starting up multiple times, each start-up interval is two minutes.
11. Don't use the jumper cable to charge other equipment
12. Do not store in locations where the temperature may exceed 60°C.
13. Charge only at ambient temperature between 0°Cand 45°C.
14. Do not expose the product to rain or water
15. Do not expose the product to extreme heat or fire.
16. Do not operate the product in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

17. Make sure someone should be within range of your voice or close enough to come to your aid when working with batteries.
18. Remove personal metal items like rings, bracelets necklaces,etc. When using the products.
19. To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack
20. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury
21. Charge only using the charger provided with this unit or the same standard with the host input port.
22. After jump start the car,don't charge this unit immediately.
23. Do not use the unit to jump-start a vehicle while charging the internal battery.
24. Under extreme conditions,the battery may leak. If a liquid is noticed coming from product do not handle with bare hands.In case of skin contact wash with soap and water immediately.If liquid comes in contact with eyes rinse eyes with cold running water for at least 10 minutes and get medical attention immediately.
25. The product contains a lithium-based battery, at end of the product's life dispose of the product according to local regulation


WARRANTY

WARRANTY INFORMATION

1. We offer a limited warranty for this product against any defects in material and workmanship for a period of one year from the date of purchase by the end user/consumer. The conditions of the warranty are as follows:
2. The warranty is only valid upon presentation of the original receipt(from the dealer/retailer)by the original purchaser with the product to be repaired or replaced.
3. The warranty is void if the serial number, date of purchase and label has been removed
4. The warranty does not cover damage or product failure resulting from normal wear and tear, physical abuse, improper installation, misuse, modification or repairs by unauthorized third parties.
5. We do not assume responsibility for any loss or damage incurred during shipment or as a result of a force majeure.
6. We are not liable for any incidental or consequential damages arising from the use or misuse of this product.
7. All warranty claims are limited to repair or replacement of the defective product and at the sole discretion of
8. If we repair or replace the product,the product will be covered for the remaining time of the original warranty period. Repair or replacement may involve the use of reconditioned units that are equivalent in function.
Replaced part or products becomes the property of us.
9. Consumable components such as batteries are not covered by the warranty

Made in China

Documents / Resources

	Lenercom LC-PM3-24 Jump Starter [pdf] User Manual LC-PM3-24 Jump Starter, LC-PM3-24, Jump Starter, Starter
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.