



## Lennox Mini Split Remote Controller Instructions

[Home](#) » [Lennox](#) » Lennox Mini Split Remote Controller Instructions 

### Contents

- [1 Lennox Mini Split Remote Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Remote Controller](#)
- [5 Remote Controller Display](#)
- [6 Instruction for remote controller](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



### Lennox Mini Split Remote Controller



## Product Information

The remote controller is a device used to control the air conditioner. It has various buttons for different functions, including starting/stopping the air conditioner, adjusting the temperature, selecting modes (AUTO, HEAT, COOL, DRY, FAN), controlling fan speed, setting timers, activating sleep mode, and more. The remote controller also has a display screen that shows the current settings and status of the air conditioner.


## Product Usage Instructions

Follow these instructions to use the remote controller effectively:

1. Insert two AAA alkaline batteries into the remote controller. Make sure to install the batteries correctly (observe the polarity).
2. Point the remote controller towards the receiver on the indoor unit of the air conditioner. Ensure that there are no obstacles blocking the signal between the remote controller and the indoor unit.
3. Avoid pressing two buttons simultaneously to prevent incorrect operation.
4. Keep wireless equipment such as mobile phones away from the indoor unit to avoid interference.
5. To start or stop the air conditioner, press the "G+" button.
6. In HEAT or COOLING mode, use the "Turbo" button to activate or deactivate the turbo function.
7. Use the mode selection button to choose between AUTO, HEAT, COOL, DRY, and FAN modes.
8. Adjust the temperature by pressing the "+" or "-" buttons.
9. The "I FEEL" button can be pressed to activate the I FEEL function (optional feature).
10. To turn on self-cleaning technology, press the "Clean" button.
11. The "UVC" button can be used to start or stop the UVC sterilize function (optional feature).
12. In cooling and heating modes, the "ECO" button enables power-saving operation.
13. Choose the desired fan speed (Auto, Medium, High, Low) using the fan speed button.
14. The airflow sweep button allows you to change the position and swing of the vertical or horizontal blades.
15. The "DISPLAY" button can be used to start or stop the display when the air conditioner is running.
16. Set the sleep function by pressing the "Sleep" button.
17. To operate the air conditioner in low noise mode, press the "Quiet" button.
18. Use the timer selection button to set the desired timer for turning on or off the air conditioner.

Please refer to the user manual for more detailed instructions and information about additional features (optional) such as I FEEL, UVC, AUH, ECO, generator mode, and QUIET.


## Remote Controller

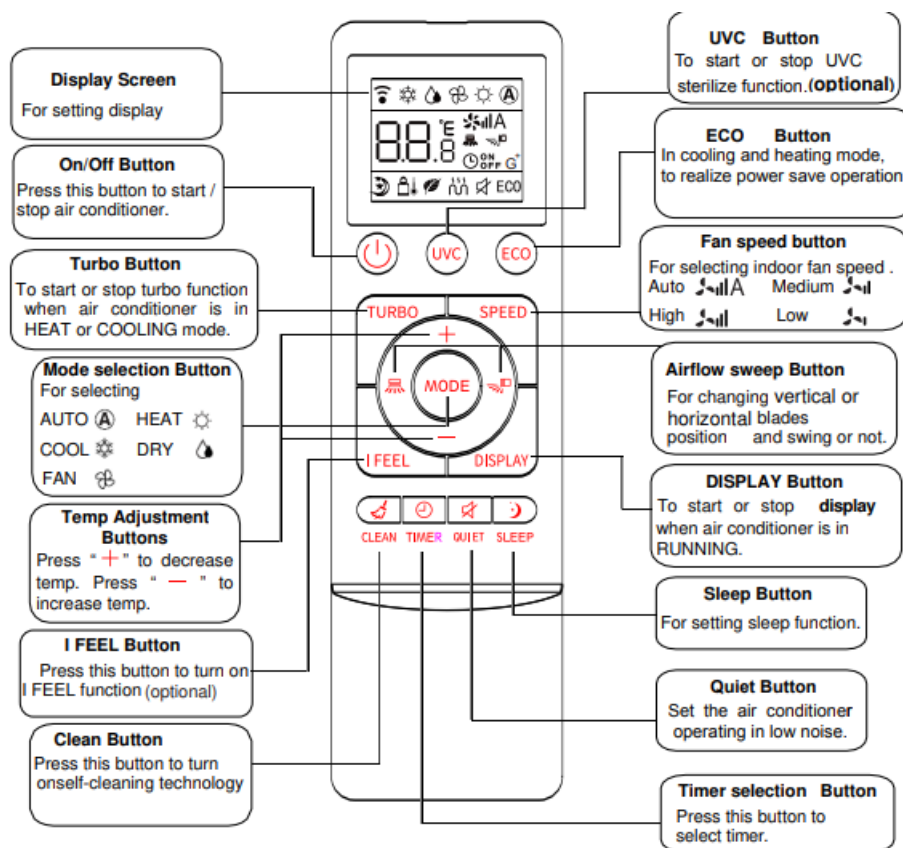

## Remarks:

1. The function and display of Heat is not available for cooling-only air conditioner.
2. HEAT AUTO function and display are not available for cooling-only type air conditioner.
3. If user want to make the room air cool or warm quickly ,user can press "turbo" button in cooling or heating mode,air conditioner will run in power function.If press "turbo" button again, air conditioner will exit power function.
4. The above illustration of remote controller is only for reference, it may be slightly different from the actual product you selected.


## Remote Controller Display

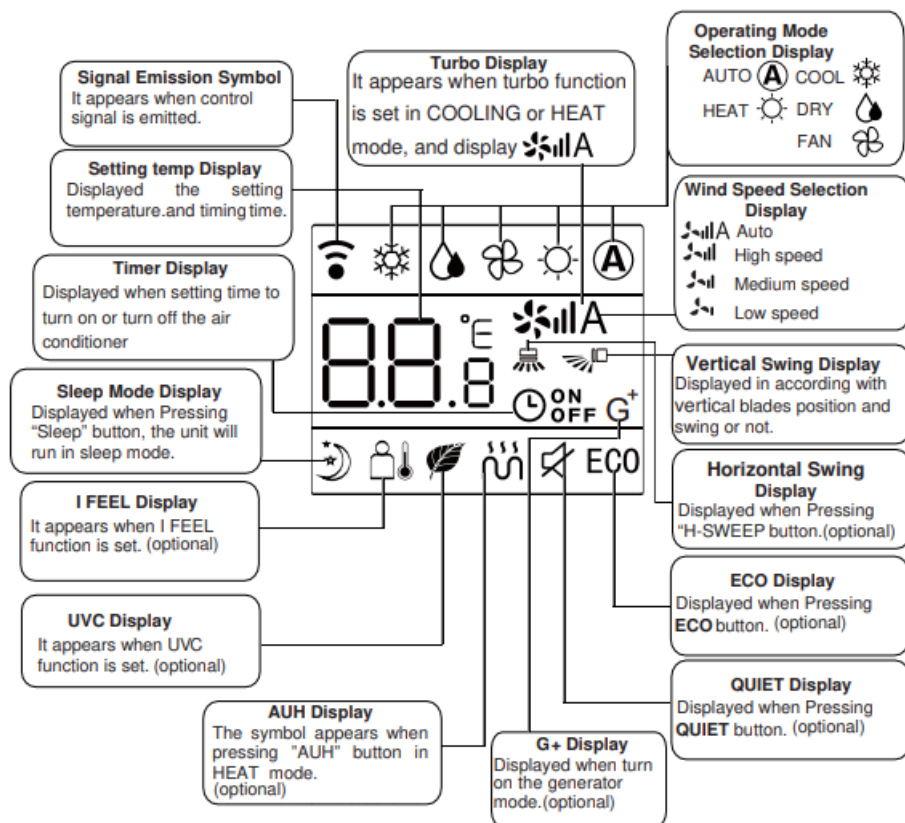

## Instruction for remote controller

- The remote controller uses two AAA alkaline batteries under normal condition, the batteries last for about 6 months. Please use two new batteries of similar type (pay attention to the poles in installing).
- When using remote controller, please point the signal emitter towards indoor unit receiver; There should be no obstacle between remote controller and indoor unit.
- Pressing two buttons simultaneously will result wrong operation.
- Do not use wireless equipment (such as mobile phone) near indoor unit. If interference occurs because of this, please switch off the unit, pull out power plug, then plug again and switch on after a while.
- There is no direct sunlight to the indoor receiver, or it can not receive the signal from the remote controller.
- Don't cast the remote controller.
- Don't put the remote controller under the sunlight or near the oven.
- Don't sprinkle water or juice on the remote controller, use soft cloth for cleaning if it occurs.
- The batteries must be removed from the appliance before it is scrapped and that they are disposed of safely.

## Documents / Resources

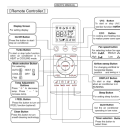	<p><a href="#">Lennox Mini Split Remote Controller</a> [pdf] Instructions UVC, Mini Split Remote Controller, Remote Controller</p>
---	--