



RECHARGEABLE  
INTERACTIVE  
FLOPPING  
CORN  
TOY



# LEWISER Rechargeable Interactive Flopping Corn Toy User Manual

[Home](#) » [LEWISER](#) » LEWISER Rechargeable Interactive Flopping Corn Toy User Manual 

## Contents

- [1 LEWISER Rechargeable Interactive Flopping Corn Toy](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)
- [13 Related Posts](#)



**LEWISER Rechargeable Interactive Flopping Corn Toy**



## INTRODUCTION

The LEWISER Rechargeable Interactive Flopping Corn Toy is a fun and interesting stuffed animal that can be used by both kids and pet owners. This cute, recharging toy in the shape of corn comes to life with a unique flopping motion that makes it a lot of fun to play with. At only \$11.09, the item is very cheap and a great deal for fun that you can interact with. This toy, which came out on August 13, 2023, is meant to keep kids and pets busy for hours. The plush material is safe for all ages and soft, and the built-in recharging battery lets you play for a long time without having to keep buying new batteries. This toy, made by LEWISER, is made for people who want to make their home a fun and funny place.

## SPECIFICATIONS

Brand Name	LEWISER
Price	\$11.09
Material Type	Plush
USB Rechargeable	Yes
Product Dimensions	8.66 x 3.15 x 1.57 inches
Weight	3.53 ounces
Date First Available	August 13, 2023
Manufacturer	LEWISER

## WHAT'S IN THE BOX

- Flopping Corn Toy
- battery
- USB Cable
- User Manual

## FEATURES

- **Unique Corn Design:** This toy is shaped like an 8-inch corn and has a funky paint job and whiskers that make it look funny. Its strange look will make your cat curious and make it want to hunt.
- **Interactive Movement:** The moving parts that twist, curl, and wiggle are meant to look like prey, which will make your cat want to bite, slap, kick, and pounce for hours of fun.
- **Soft and Durable Materials:** It's made of plush fabric, which is soft on your cat's paws and teeth but strong enough to last through rough play.

# Baby Toys Level Materials

Absolutely Safe for Your Fur Babies



## Comfortable & Durable

The cover is made of soft and durable fabric, suitable for snuggling, tapping, and kicking.

- **Infused with Catnip and SilverVine:** Comes with an A-grade catnip tea bag that smells like strong cat mint and gets cats moving, which is good for their health and exercise in general.
- **USB reusable:** The toy has a reusable battery that can be charged via USB. This means that you don't have to use disposable batteries and can get power in an easy and environmentally friendly way.

# Rechargeable Micro USB

- 🔋 500mAh large capacity battery
- ⚡ Up to 200 flaps on a single charge



motion sensor  
auto off/on



pilot lamp

- charging
- fully charged

USB



card slot design  
collision avoidance

- **Removeable Battery Mechanism:** The recharging mechanism inside can be taken out, which makes it easy to clean the plush cover and keep things clean.
- **Mode for Saving Energy:** If you leave the toy alone, it will instantly go into sleep mode to save power and be ready for your cat's next play session.
- **Quirky Play Whiskers:** The corn toy has a group of four-inch long whiskers that make it look nicer and more fun to play with. Your cat will love watching them move and flutter.
- **Small and Lightweight:** The toy is 8.66 inches long, 3.15 inches wide, and 1.57 inches high. It only weighs 3.53 ounces, so cats of all sizes can easily carry and play with it.

# Crazy Farm Flopping Toys

For Indoor Cats & Small Dogs



- **Realistic Movements:** The toy's flopping and wiggling movements imitate the actions of small prey animals. This will keep your cat interested and satisfy their natural urge to hunt.
- **Perfect Holiday Gift for Pets:** The toy is a great holiday gift for cats because it has a fun design and interesting features.
- **Toxic-free and safe for pets:** Made from safe, non-toxic materials that won't hurt your pet while they play.
- **Encourages Physical Activity:** This toy gets cats to jump, pounce, and play actively, which is good for their health and relieves stress through exercise.
- **Affordable Price:** The toy is a great deal at \$11.09 for pet owners who want an engaging and inexpensive way to play.

## SETUP GUIDE

- **Carefully take the toy out of its box** and check that all of its parts are there, such as the USB charging cable and catnip bag.
- **Charge the Toy:** To charge the toy, use the USB cord that came with it. To get it ready to use, plug it into a power source that works with USB and let it charge all the way up.
- **Add Catnip:** To add more appeal, open the plush cover and put the catnip tea bag in the marked space.
- **Power On:** To turn on the toy's motion sensor, press the activate button or lightly touch it.
- **Place on Flat Surface:** Give your cat room to play by putting the toy on a flat, open surface.
- **Test Motion Sensor:** Lightly tap the toy to make sure the built-in motion sensor works and makes the moving happen.
- **Adjust the Whiskers:** Make sure the toy's whiskers are spread out so it's more interesting to look at.
- **Check for Safety:** Before giving the toy to your cat, make sure there aren't any loose or separated parts that

could choke them.

- **As you pick a play mode**, you can leave the toy in automatic mode for hands-on play. Make sure your cat can get to it.
- **The toy can be used with other toys**, like a teaser stick, to make the play more interesting.
- **Watch the First Play**: Watch your cat play with the new toy for the first time to make sure they are interested and that they are interacting well with it.
- **Add more ways to play** by hanging the toy from a doorknob or hook with a string or an elastic band.
- **present Gradually**: If your cat is nervous, present the toy slowly so that sudden movements don't scare them.
- **Safe Charging Cable**: Once the USB charging cable is charged, put it away somewhere safe so pets don't chew on it.
- **As Needed**: Check the battery life and charge the toy when the motion stops working or becomes weak.

## CARE & MAINTENANCE

- **To keep it clean and free of dirt**, take off the soft cover and wash it with water and light soap every so often.
- **Take Out the Battery Unit**: To keep the plush cover from getting damaged, always take out the rechargeable mechanism before cleaning it.
- **Check for Damage**: Look for signs of wear and tear like loose threads or parts that have come off on a regular basis and replace them if needed.
- **Periodically Recharge**: To keep the toy working well, recharge it after a long game or when the battery runs out.
- **Avoid Contact with Water**: Keep the battery and other electrical parts inside dry and away from water.
- **Stay Away from Sharp Objects**: Keep the toy away from anything sharp that could poke or hurt it.
- **Secure Catnip**: To keep the toy appealing, replace the tea bag with catnip when its smell fades.
- **Properly Store**: When not in use, keep the toy in a safe, dry place so it doesn't get dirty or broken.
- **Watch the Battery Life**: Keep an eye on how the toy's battery works over time and change the rechargeable battery if it gets weak.
- **Don't charge the toy too much**; disconnect it when it's fully charged to make the battery last longer.
- **Keep It Easy for Your Cat to Get To**: Put the toy somewhere your cat can easily get to it without falling or getting hurt.
- **Keep your cat from chewing on the charging wire** by putting it somewhere your cat can't get to.
- **Check Motion Sensor**: Make sure the motion sensor is always working right by testing it every so often.
- **Do Not Use Broken Toys**: Stop using the toy if any of the parts are broken or split to keep your cat from getting hurt.
- **If the toy gets too worn out or broken**, you might want to get a new one so your cat can continue to have safe and fun playing.

## TROUBLESHOOTING



Problem	Solution
Toy does not turn on	Ensure the toy is fully charged before use.
Flopping motion is too slow	Check if the battery charge is low; recharge as needed.
Plush fabric gets dirty	Gently spot clean with a damp cloth and mild detergent.
Charging port not working	Inspect the charging cable for damage or try a different charger.
Toy stops flopping suddenly	Ensure the toy is charged and restart by pressing the button.
Noise is too loud	Check if the toy is damaged; contact manufacturer if necessary.
Flopping motion is erratic	Recharge the toy fully and reset by turning it off and on again.
Toy feels warm during use	This may be normal; ensure it is not overheating.
Battery drains too quickly	Recharge after each use for optimal battery performance.
Charging light does not turn on	Ensure the charger is properly connected to the toy.
Toy is not responsive to touch	Reset the toy by turning it off, then on again.
The fabric is shedding	Check the toy for damage and handle gently during use.
Toy gets stuck in one position	Try manually moving the toy to reset the mechanism.
Charging time is longer than expected	Ensure the charger is functioning correctly.
Motion stops after extended play	Allow the toy to cool down before using it again.

## PROS & CONS

### Pros:

- Rechargeable battery for endless fun without the need for replacements.
- Soft plush material makes it safe and comfortable for kids and pets.
- Interactive flopping action that is both amusing and stimulating.
- Affordable price at **\$11.09** for high entertainment value.
- Lightweight and portable, making it easy to move around and store.

### Cons:

- Limited to only flopping motion; lacks other interactive features.
- May not be suitable for extremely aggressive pets.
- Battery life may vary depending on usage.
- The plush fabric could get dirty with frequent use.
- Only available in one size, which may not suit all preferences.

## WARRANTY

The **LEWISER Rechargeable Interactive Flopping Corn Toy** comes with a **1-year limited warranty** covering manufacturing defects. This warranty does not cover damages caused by misuse or accidents. To claim warranty service, please contact the manufacturer with proof of purchase.



## FREQUENTLY ASKED QUESTIONS

What is the brand of the Interactive Flopping Corn Toy?

The toy is manufactured by LEWISER.

What is the price of the LEWISER Rechargeable Interactive Flopping Corn Toy?

The price of the LEWISER Rechargeable Interactive Flopping Corn Toy is \$11.09.

What is the material type used for the LEWISER Rechargeable Interactive Flopping Corn Toy?

The toy is made of plush material, providing a soft and comfortable texture for pets.

What are the dimensions of the LEWISER Rechargeable Interactive Flopping Corn Toy?

The toy measures 8.66 x 3.15 x 1.57 inches.

How much does the LEWISER Rechargeable Interactive Flopping Corn Toy weigh?

The weight of the toy is 3.53 ounces.

How is the LEWISER Rechargeable Interactive Flopping Corn Toy powered?

It is USB rechargeable, making it convenient and eco-friendly.

When was the LEWISER Rechargeable Interactive Flopping Corn Toy first available?

The toy was first available on August 13, 2023.

How does the LEWISER Rechargeable Interactive Flopping Corn Toy operate?

The toy has a flopping action that activates when touched or played with, providing engaging, realistic movement for pets.

What makes the LEWISER Rechargeable Interactive Flopping Corn Toy unique?

The LEWISER Rechargeable Interactive Flopping Corn Toy combines a soft plush exterior with interactive flopping motions that mimic prey, stimulating a pet's natural instincts.

How long does the battery last in the LEWISER Rechargeable Interactive Flopping Corn Toy?

Battery life varies based on usage but can be easily recharged via USB for continuous play.

How can the LEWISER Rechargeable Interactive Flopping Corn Toy be charged?

The toy can be charged using a USB cable, which is included with the product.

Is the LEWISER Rechargeable Interactive Flopping Corn Toy easy to clean?

The plush exterior can be spot-cleaned to maintain hygiene.

What type of pets is the LEWISER Rechargeable Interactive Flopping Corn Toy recommended for?

The toy is perfect for cats and small dogs that enjoy chasing and batting at toys.

Why won't my LEWISER Rechargeable Interactive Flopping Corn Toy turn on?

Ensure the LEWISER Rechargeable Interactive Flopping Corn Toy is fully charged. Connect it to a charger and allow it to charge until the indicator shows full battery. Also, verify that the power switch is toggled to the on position.

Why does my LEWISER Rechargeable Interactive Flopping Corn Toy stop flopping suddenly?

If the toy stops flopping, it could be due to a low battery. Recharge the LEWISER Rechargeable Interactive Flopping Corn Toy fully. If the battery is charged and the problem persists, inspect the toy for any debris or obstructions affecting the motor.

## References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.