



**MIC280 Series
Wireless Microphone
with Speaker and
Lights**



LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights Instruction Manual

[Home](#) » [Lexibook](#) » LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights Instruction Manual



Contents

- 1 LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights
- 2 UNPACKING YOUR DEVICE
- 3 PRODUCT DESCRIPTION
- 4 CHARGING THE DEVICE
- 5 BLUETOOTH® PAIRING
- 6 HOW TO USE
- 7 SPECIFICATIONS
- 8 SIMPLIFIED EU DECLARATION OF CONFORMITY
- 9 MAINTENANCE AND WARRANTY
- 10 More Info
- 11 FAQ
- 12 Documents / Resources
 - 12.1 References



LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights



Specifications

- Product Model: MIC280series
- Power Source: USB charging cable (5V)
- Features: Wireless microphone with speaker and lights
- Additional Items: 1 x USB-C cable, 1 x Instruction manual

Product Description

- The MIC280series is a wireless microphone with speaker and lights designed for entertainment purposes. It features various control keys for power, modes switching, mic volume control, voice changing, charging/AUX input, and headphone jack.

Charging the Device

1. Ensure the unit is switched off.
2. Connect the small end of the USB-C cable to the charging port on the device.
3. Connect the other end of the USB cable to a powered computer or USB power adapter and plug it into a wall socket.
4. Indicator lights up in red during charging and turns off when charging is complete.

How to Use

1. **Power ON/OFF:** Short press for play/pause, long press for 3 seconds to turn ON/OFF.
2. **M Key (Modes switch):** Short press to switch modes, long press to change LED light mode.
3. **Volume Up and Down keys:** Various functions for adjusting microphone and music volume.

4. **5V Charging/AUX:** Use the 2-in-1 USB Type-C cable for charging and aux-in functionality.

5. **Headphone jack:** Connects to a 3.5mm earphone for private listening.


UNPACKING YOUR DEVICE

When unpacking, check that the box contains all the following items:

- Includes: 1 x Wireless microphone with speaker and lights / 1 x USB-C cable / 1 x Instruction manual

WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded for your child's safety.

PRODUCT DESCRIPTION

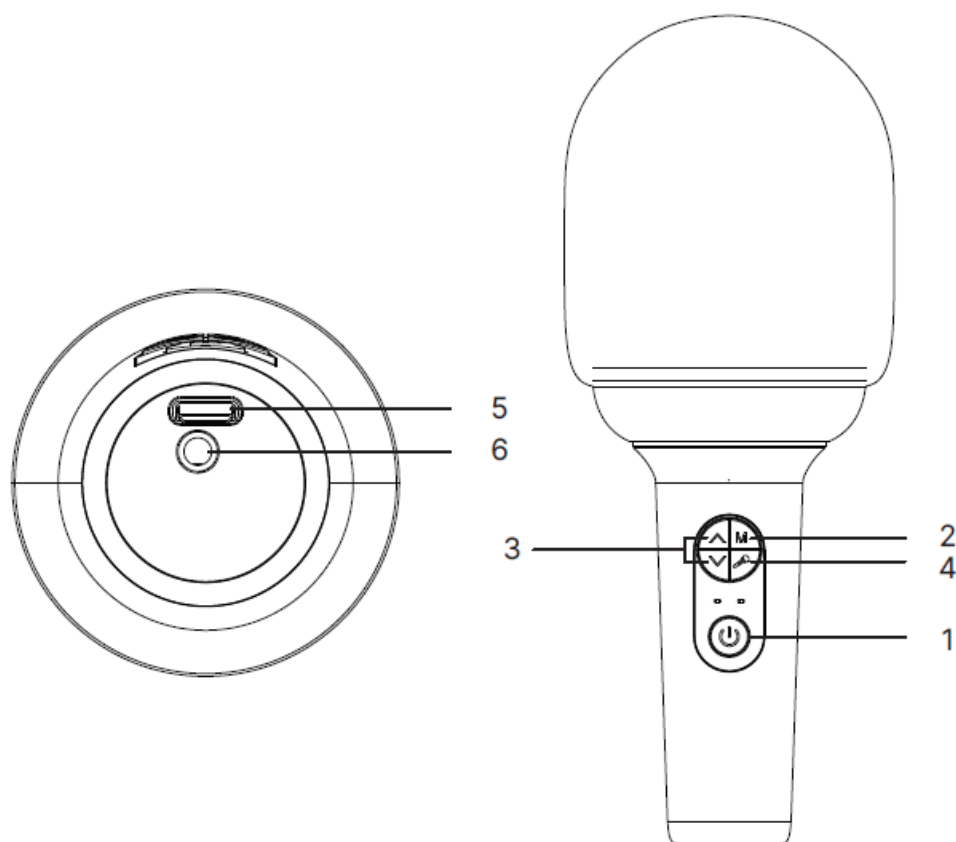

1. Power ON/OFF
2. Modes switch key
3. Mic volume control
4. Voice Changing key
5. 5V charging/AUX
6. Headphone jack

CHARGING THE DEVICE

The Wireless microphone with speaker and lights operates with the USB charging cable (included).

Power supply

1. Check that the unit is switched off.
2. Insert the small end of the USB-C cable (included) into the USB-C charging port (5).
3. Connect the other end of the USB cable into the USB port of your powered computer or USB type power adaptor (not included) and plug it into a wall socket. The indicator near the USB charging port lights up in red when the device is charging.
4. Once loading complete the LED light will turn off.

Note: Please note that the USB-C cable can be used for battery charging only and not for data transfer.

The USB cable can be used for charging during playback.

WARNING

- Risk of explosion if battery is incorrectly replaced. Please only replace it with an identical or an equivalent battery. (For Service instructions only; battery is not intended to be replaced by the USER).
- The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.

Safety Instructions

- Keep a minimum distance around the device for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Device for use in a temperate and/or tropical climate.
- Batteries should be disposed properly. Take them to the collection container in order to protect the environment.

BLUETOOTH® PAIRING

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lexibook® is under license. Other trademarks and trade names are those of their respective owners.

1. Long press the power button for 3 seconds. Then the blue light flashing and speaker is waiting for connection.
2. Turn on the Bluetooth connection of your devices to search for 'KM-108' and click 'Connect.'
3. The speaker will play the sound of 'dong', then the blue light is steady on. That means the connection is successful. If the connection is not successful, the blue light blinks slowly.
4. After pairing, press the Play button to play or pause the music.

HOW TO USE

Power ON/OFF

- **Short press:** Play/pause while music is playing
- **Long press:** 3 seconds to turn ON/OFF



TWS Function (under Bluetooth Mode only):

- Power on any two microphones at the same time (same model, same Bluetooth name).
- Double-click one of the microphone's power ON/OFF key, after hearing a BEEP tone means two microphones connected successful, then use the external Bluetooth device to search "MIC280" and connect to play music together.

M Key (Modes switch)

- **Short press:** switch microphone Playback mode/LINE IN mode/Bluetooth mode
- **Long press:** change the led light mode.

Volume Up and Down keys

- : Short press to increase the volume of microphone, double click to increase the echo, long press to increase the volume of music.
- : Short press to reduce the volume of microphone, double click to reduce the echo, long press to reduce the volume of music.
- **Short press:** Voice changing effects switch to Male voice/Female voice/Baby voice/Monster voice/Original voice
- **Double click:** original singing sound /cancel original singing.
- **5V charging/AUX:** There will have 2 in 1 USB Type-C Charging and Aux-in cable, switch to LINE

IN mode then use the LINE IN cable, the side of Type-C to plug into 5V charging/AUX port on the bottom of microphone, and for the other side using the 3.5 mm plug to connect with mobile phone to start playing music.

5V charging/AUX

- There will be 2 in 1 USB Type-C Charging and Aux-in cable, switch to LINE IN mode then use the LINE IN cable, the side of Type-C to plug into 5V charging/AUX port on the bottom of microphone

Headphone jack

- Connect to a 3.5mm earphone.

WARNING: Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, switch it off and then on again, or unplug the USB cable.

SPECIFICATIONS

- Bluetooth® version 5.4
- **Effective distance:** Up to 10 meters (32 feet)
- **Output Power:** 3W
- **Playing time:** Around 3-4 hours
- **Charging time:** Around 4-5 hours
- **Battery:** Lithium battery 3.7V , 1200mAh
- **Product dimension:** (height) 210 x ø 87mm

- **Multi Voice Changer:** Transform your real voice to 4 other voices (Male voice/Female voice/Baby voice/Monster voice).

SIMPLIFIED EU DECLARATION OF CONFORMITY

We, Lexibook® S.A.

6 avenue des Andes Bâtiment 11 91940 Les Ulis – France

Lexibook UK

PO Box 423 UMBERLEIGH, EX32 2JW , United Kingdom

- **Kind of product:** Wireless microphone with speaker and lights
- **Type designation:** MIC280
- **Bluetooth® Frequency range:** 20Hz-20KHz
- **Transmission power:** 2dBm

Hereby, Lexibook Limited declares that the radio equipment type MIC280 is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.lexibook.com/doc/mic280/mic280_1.pdf

MAINTENANCE AND WARRANTY

The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit. Use caution when cleaning and wiping the plastic parts.

This product is covered by our 2 years warranty program, except for the integrated battery which is covered by a 6-month warranty.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference.

In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

NOTE: Please keep this instruction manual, it contains important information.

Reference: MIC280series

Designed and developed in Europe – Made in China



This product is not a toy.

Environmental Protection



■ Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)



This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. End user is legally obliged to return used batteries. Return the used batteries free of charge in retail stores and collection center. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health. We strongly advise you to take your product to an official collection point or service center to have a professional remove the rechargeable battery. Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.

More Info

United Kingdom & Ireland



For after-sales service, please contact us at savcomfr@lexibook.com.

- www.lexibook.com

FAQ

- **Q: What should I do if the device malfunctions or loses memory?**
 - **A:** In case of malfunction, strong frequency interference, or electrostatic discharge, switch off the device, then switch it back on or unplug the USB cable to reset it.

Documents / Resources

	<p>LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights [pdf] Instruction Manual</p> <p>MIC280D, MIC280series, MIC280 Series Wireless Microphone with Speaker and Lights, MIC280 Series, Wireless Microphone with Speaker and Lights, with Speaker and Lights, Speaker and Lights, and Lights</p>
	<p>LEXIBOOK MIC280 Series Wireless Microphone with Speaker and Lights [pdf] Instruction Manual</p> <p>MIC280 Series, MIC280 Series Wireless Microphone with Speaker and Lights, Wireless Microphone with Speaker and Lights, Microphone with Speaker and Lights, Speaker and Lights</p>

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.