



LEXUS LHA3712 Color Screen with Navigation System Owner's Manual

[Home](#) » [LEXUS](#) » LEXUS LHA3712 Color Screen with Navigation System Owner's Manual 

Contents

- [1 LEXUS LHA3712 Color Screen with Navigation System](#)
- [2 CONTROL PANEL BUTTONS](#)
- [3 HOW TO USE THE TOUCHSCREEN](#)
- [4 HOW TO USE THE BACK BUTTON](#)
- [5 HOW TO USE THE !\[\]\(30a147af384f9f71632c2ff17bc706c8_img.jpg\) BUTTON](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 


LEXUS LHA3712 Color Screen with Navigation System





 

CONTROL PANEL BUTTONS

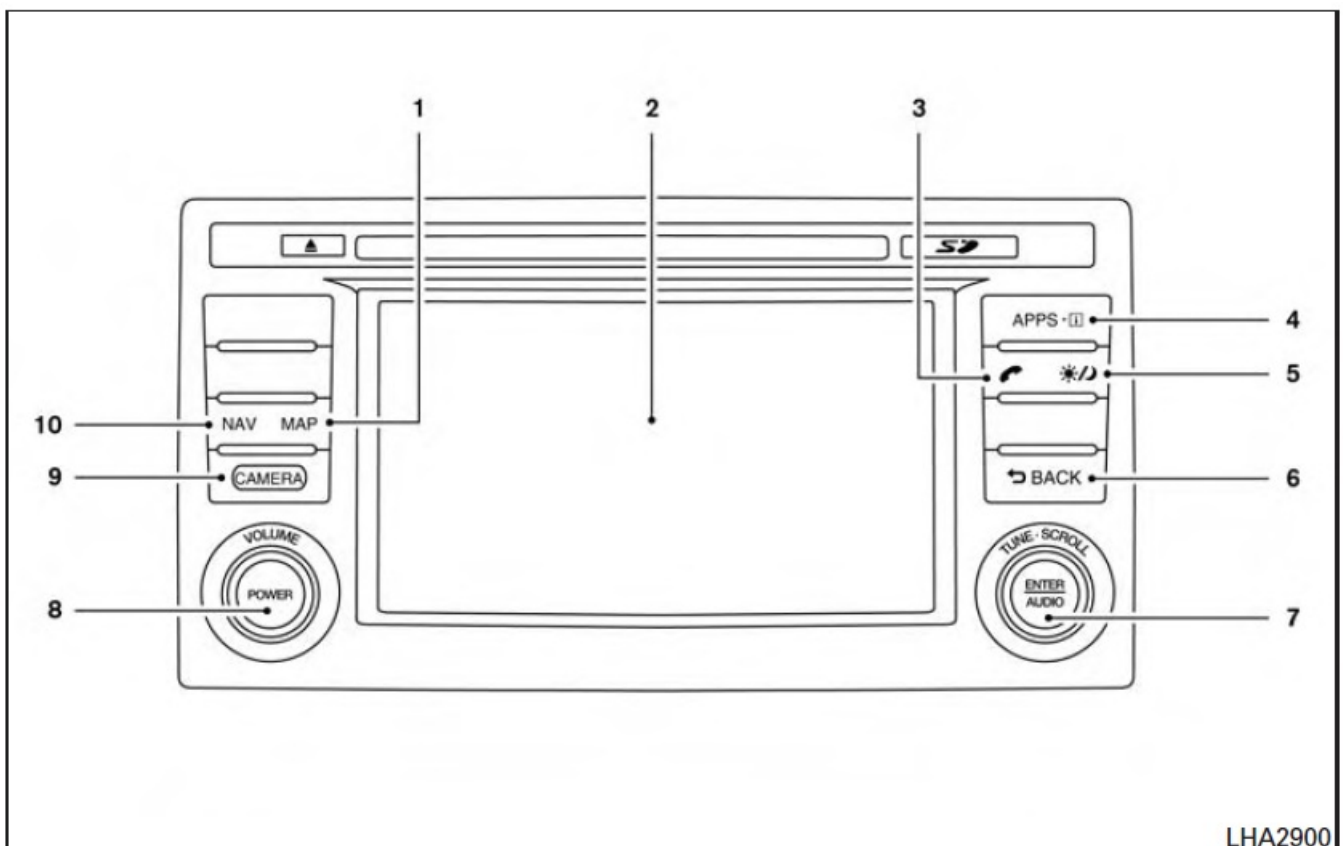COLOR SCREEN WITH NAVIGATION SYSTEM (if so equipped)



LHA2900

1. MAP button*
2. Display screen
3.  button**

4.  button
5.  (brightness control) button
6.  BACK button
7. ENTER / AUDIO button / TUNE / SCROLL knob
8. POWER button / VOLUME control knob
9. CAMERA button
10. NAV button*

WARNING

- Positioning of the heating or air conditioning controls and display controls should not be done while driving in order that full attention may be given to the driving operation.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.
- Do not use this system if you notice any abnormality, such as a frozen screen or lack of sound. Continued use of the system may result in accident, fire or electric shock.
- In case you notice any foreign object in the system hardware, spill liquid on it, or notice smoke or smell coming from it, stop using the system immediately. Ignoring such conditions may lead to accidents, fire or electrical shock. It is recommended that you visit a NISSAN dealer for servicing.

For additional information, refer to the separate Navigation System Owner's Manual regarding the Navigation system control buttons . For additional information, refer to "Bluetooth® Hands-Free Phone System with Navigation System" in this section regarding the Bluetooth® Hands-Free Phone System control button. When you use this system, make sure the engine is running.

If you use the system with the engine not running for a long time, it will discharge the battery, and the engine will not start.

 
Reference symbols:

"Example" — Words marked in quotes refer to a key shown only on the display. These keys can be selected by touching the screen.

HOW TO USE THE TOUCHSCREEN

CAUTION

- The glass display screen may break if it is hit with a hard or sharp object. If the glass screen breaks, do not touch it. Doing so could result in an injury.
- To clean the display, never use a rough cloth, alcohol, benzine, thinner or any kind of solvent or paper towel with a chemical cleaning agent. They will scratch or deteriorate the panel.
- Do not splash any liquid such as water or car fragrance on the display. Contact with liquid will cause the system to malfunction.
- To help ensure safe driving, some functions cannot be operated while driving.
- The on-screen functions that are not available while driving will be "grayed out" or muted.
- Park the vehicle in a safe location and then operate the navigation system.

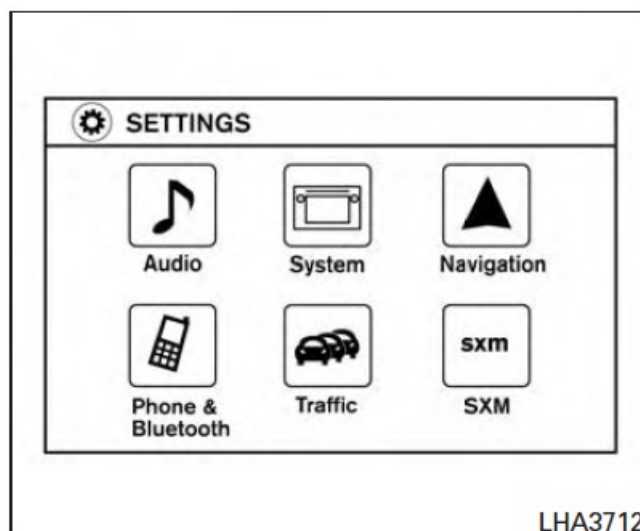


Touch-screen operation

 
Menu Item		Result
Selecting the item		Touch an item to select . To select the “Audio” key, touch the “Audio” key on the screen. Press the BACK button to return to the previous screen.
Adjusting the item		Touch the “+” key or the “-” key to adjust the settings of an item. Touch the up arrow to scroll up the page one item at a time. Touch the down arrow to scroll down the page one item at a time.
Inputting characters		Touch the letter or number key. There are some options available when inputting characters.
	123/ABC	Changes the available character set to numbers.
	Space	Inserts a space.
	Delete	Deletes the last inputted character with one touch. Touch and hold the “Delete” key to delete all of the characters.
	OK	Completes the character input.

Touch-screen maintenance

 
If you clean the display screen, use a dry, soft cloth. If additional cleaning is necessary, use a small amount of neutral detergent with a soft cloth. Never spray the screen with water or detergent. Dampen the cloth first and then wipe the screen.

HOW TO USE THE BACK BUTTON

Press the  BACK button to return to the previous screen.

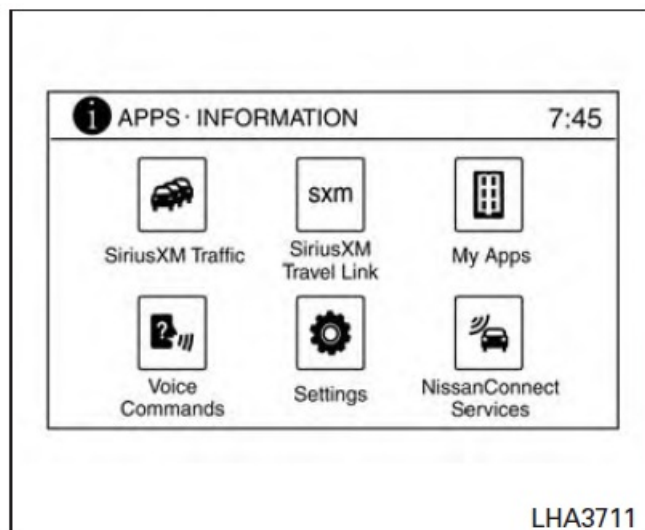

Type A (if so equipped)

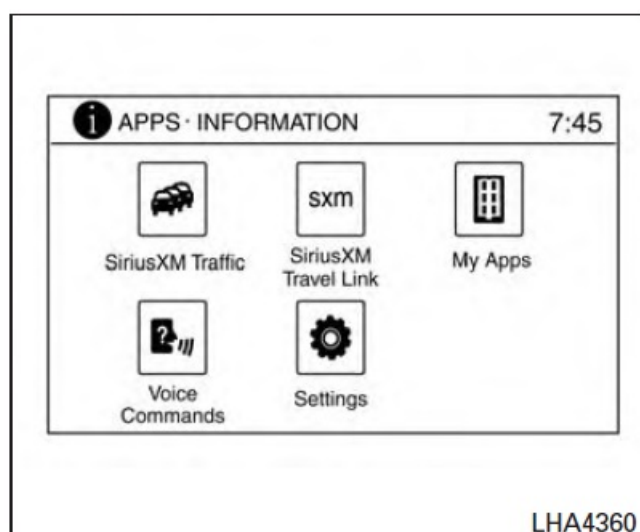


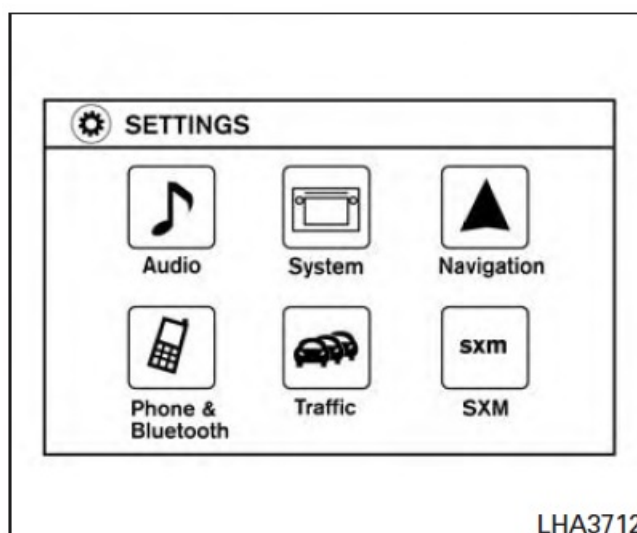 
Type B (if so equipped)

HOW TO USE THE [] BUTTON

- For additional information, refer to the separate Navigation System Owner's Manual regarding the "SiriusXM® Travel Link", and "Traffic" features.
- For additional information, refer to "NissanConnectSM Mobile Apps" in this section regarding "My Apps" key.
- For additional information, refer to "NISSAN Voice Recognition System" in this section regarding the "Voice Commands" key

To select and/or adjust several functions, features and modes that are available for your vehicle:

1. Press the [] button.
2. Touch the "Settings" key.
3. Touch the desired item.



 
Menu item		Result
Audio		For additional information, refer to “Audio system” in this section.
Navigation		For additional information, refer to the separate Navigation System Owner’s Manual.
Phone & Bluetooth		For additional information, refer to “Bluetooth® Hands-Free Phone System with Navigation System” in this section.
System		Touch this key to select and/or adjust various functions of this system. A screen with additional options will appear.
	Display	Touch this key to adjust the appearance of the display.
	Brightness	Adjusts the brightness of the display.
	Display Mode	Adjusts to fit the level of lighting in the vehicle. Touch key to cycle through options. “Day” and “Night” modes are suited for the respective times of day while “Auto” controls the display automatically.
	Scroll Direction	Adjusts the direction of the menu scroll. Choose to either move up or down.
	Clock	Touch this key to adjust the time.

Menu item		Result
	Time Format	The clock can be set to 12 hours or 24 hours.

		Date Format	Select from five possible formats for displaying the day, month, and year.
		Clock Mode	Adjust the mode for the clock. "Auto" uses the system's GPS to automatically maintain the time. "Manual" allows you to set the clock using the "Set Clock Manually" key.
		Set Clock Manually	Adjust the clock manually, Touch the "+" or "-" keys to adjust the hours, minutes, day, month and year up or down. "Clock Mode" must be set to manual for this option to be available.
		Daylight Savings Time	Adjusts the daylight savings time on or off.
		Time Zone	Choose the applicable time zone from the list.
	Language	Touch this key to change the language on the display.	
	Camera	Touch this key to change the camera settings.	
		Display Mode	Touch this key to select the touch-screen display mode (day, night, or automatic).
		Brightness	Adjust touch-screen brightness.
		Contrast	Adjust touch-screen contrast.

	Color	Adjust touch-screen color.
	Temperature Unit	Touch this key to change the temperature unit being displayed (Fahrenheit or Celsius).
	Touchscreen click	Toggles the touch-screen click feature on or off. When activated a click sound will be heard every time a key on the screen is touched.
	System Beeps	Toggle the system beep tones feature on or off. When activated, a beep sound will be heard when a pop-up message appears on the screen or a button on the unit (such as the button) is pressed and held for 2 seconds.
	Return to Factory Settings/ Clear Memory	Touch this key to return all settings to default and to clear the memory.
	Software Licenses	Touch this key to display software licensing information.
Traffic messages		Touch this key to display traffic settings. For additional information, refer to the separate Navigation System Owner's Manual.
SXM		Touch this key to start SiriusXM® radio. For additional information, refer to "Audio system" regarding SXM setup in this section.

Documents / Resources

	LEXUS LHA3712 Color Screen with Navigation System [pdf] Owner's Manual LHA3712, Color Screen with Navigation System, LHA3712 Color Screen with Navigation System
---	---