



LG AKB73715686 Replacement Part Remote Control Instructions

[Home](#) » [LG](#) » LG AKB73715686 Replacement Part Remote Control Instructions 

Contents

- [1 LG AKB73715686 Replacement Part Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



LG AKB73715686 Replacement Part Remote Control



Product Information

Specifications

- Model: LG AKB73715686
- Compatibility: LG TVs and Radios
- Subtitle Options: AD/PIP/*
- Inputs: TV/PC
- Media Options: AV

Product Usage Instructions

Power and TV/Radio Controls

To turn on/off the device, press the “Power” button. Use the “TV/Radio” button to switch between TV and radio modes.

Subtitle Options

To enable/disable subtitles, press the “Subtitle” button. Use the “+” and “-” buttons to navigate through different subtitle options.

TV/PC Input

Press the corresponding number buttons (1-0) to directly access TV or PC channels/input.

Media Input

Press the “Media” button to access media input options.

List and Channel Navigation

Use the “List” button to view a list of available channels or media files. Use the number buttons (1-0) to select a specific channel or media file

Q.View, FAV, Guide, and Mute Controls

The “Q.View” button allows you to switch between different viewing options. The “FAV” button provides quick access to favorite channels. The “Guide” button displays the TV guide. Press the “Mute” button to mute/unmute the sound.

Volume and Channel Controls

Use the “+” and “-” buttons to adjust the volume. The “Vol+” and “Vol-” buttons allow you to navigate through different channels.

Text, Info, and Options Controls

Press the “Text” button to access text-related options. The “Info” button displays additional information. Use the “Options” button to access various settings and menu options.

Navigation Controls

The navigation controls (Up, Down, Left, Right) allow you to navigate through menus and options. The “OK” button is used to confirm selections.

Using Instructions

Original / Recharge



Original		Recharge	
	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	AD/PIP/*		Shift + Subt
	TV/PC		Media
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

Original		Recharge	
	Q.View		Smart
	FAV		Pre Ch
	Guide		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Shift + Options
	Settings		Options
	Q.Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down





Original		Recharge	
	Right		Right
	Left		Left
	OK		Ok
	Simplink		D. Menu
	Rec/*		Rec
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

