

LG DSN4 Wireless Sound Bar



LG DSN4 Wireless Sound Bar User Manual

[Home](#) » [LG](#) » LG DSN4 Wireless Sound Bar User Manual 

Contents

- 1 LG DSN4 Wireless Sound Bar
- 2 Product Information
- 3 WHAT'S IN THE BOX
- 4 TV Connection
- 5 Additional Device Connection
- 6 Remote Control
- 7 Additional Information
- 8 FAQ'S
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts



LG DSN4 Wireless Sound Bar

 


Product Information

Specifications

- Model: DSN4
- MFL71686108
- Power consumption: AC adapter – Networked standby: 1.0 W
- Dimensions (W x H x D): Approx. 890.0 mm X 57.0 mm X 85.0 mm (With foot)
- Bus Power Supply (USB): 5 V 0 500 mA
- Amplifier (Total RMS Output power): 300 W RMS

WHAT'S IN THE BOX

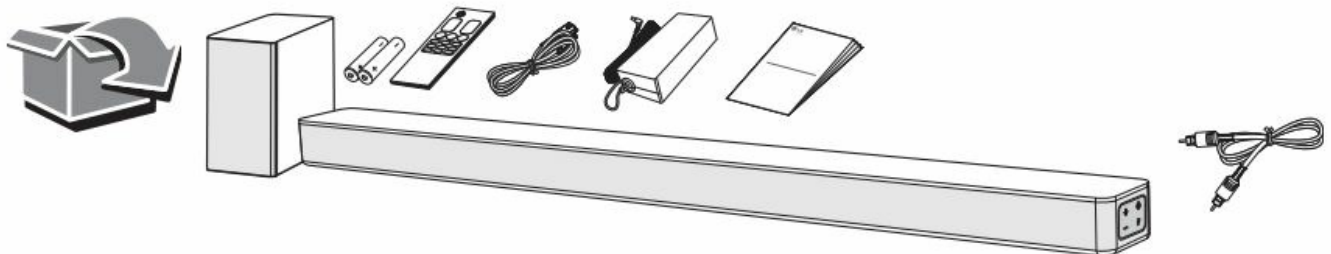

Front Panel

The buttons are located on the side.

 


- ⏻ (Standby) Switches the unit ON or OFF.
- F (Function) Selects function.
- /+ (Volume) Adjusts volume.

- **(Standby)** · Switch the unit ON or OFF.
- **(Function)** · Selects function.
- **(Volume)** Adjusts volume.

Rear Panel

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

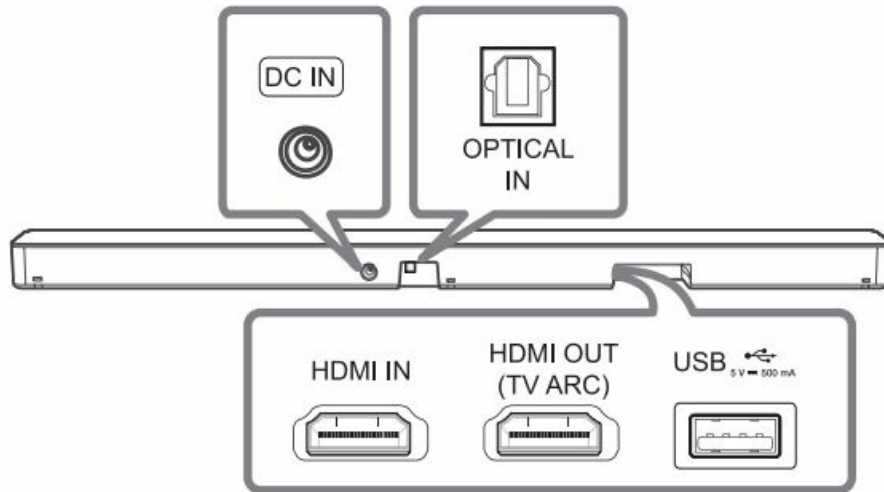

- DC IN Connect to the AC adapter.
- OPTICAL IN · Connect to an optical device.
- HDMI IN · Connect to device with HDMI OUT.
- HDMI OUT (TV ARC) Connect to a TV.
- USB Port · Connect to a USB device.

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow the steps below:

 
1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the soundbar.

Manual Subwoofer Connection

If the subwoofer does not make a sound, try to connect manually:

1. Press PAIRING on the rear of the wireless subwoofer.
The yellow-green LED on the front of the wireless subwoofer blinks quickly.
(If the yellow-green LED does not blink, press and hold the PAIRING.)
2. Turn on the soundbar.
Pairing is completed. The yellow-green LED on the front of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

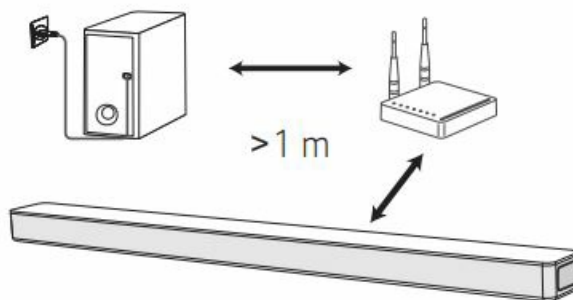


TV Connection

Connect the sound bar and TV using Optical () or HDMI ARC ().


Optical Connection

 1. Connect the sound bar to the TV using an Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.

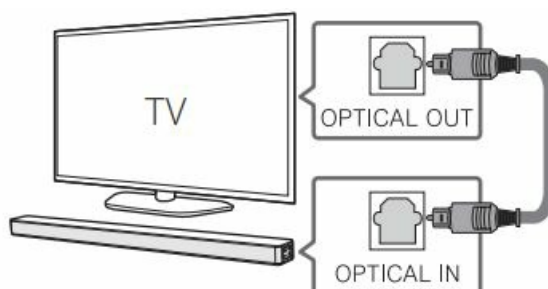

HDMI (ARC) Connection

 
1. Connect the sound bar to the TV using an HDMI cable.
2. Set up [External Speaker (HDMI ARC)] on your TV setting menu.

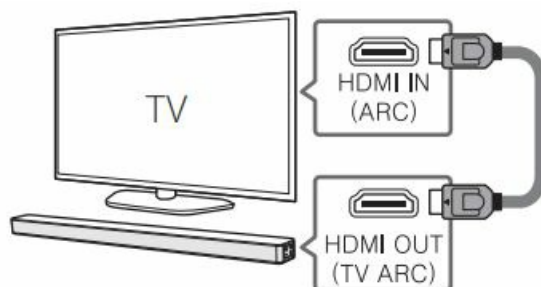

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

Additional Device Connection

 
1. Connect to the external device (e.g., Set-top Box, Player).

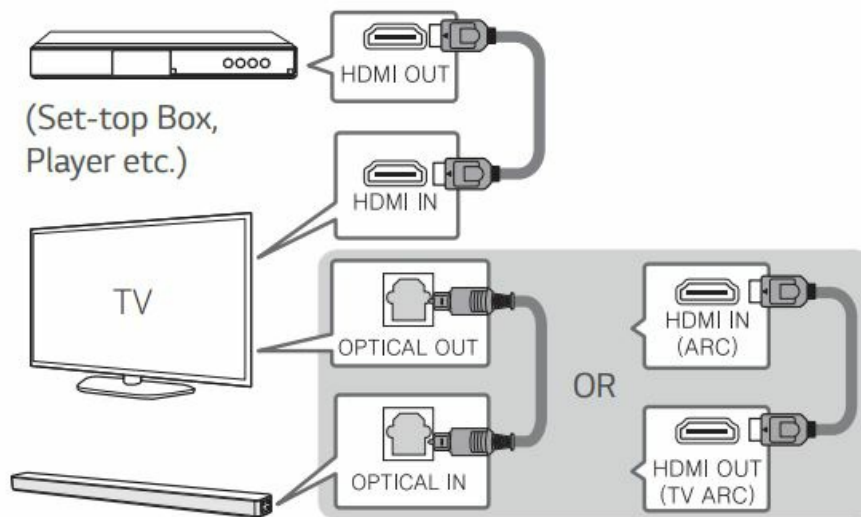


2. Set the input source by pressing F repeatedly.

Remote Control

 Replacement of Battery:

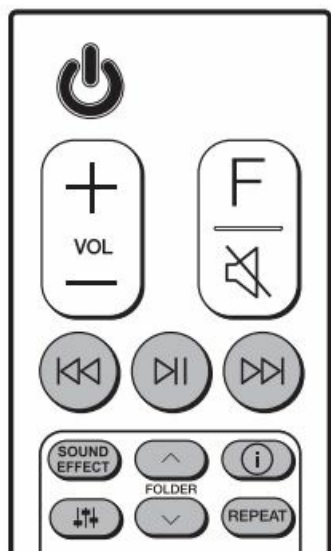

Replacement of Battery

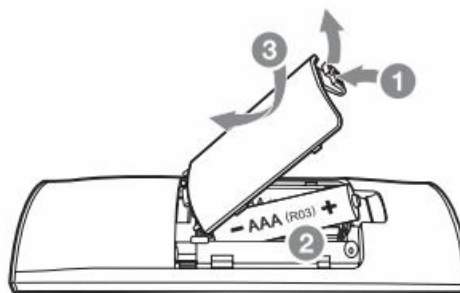 



- ⏮/⏭ Skip/Search
- ⏸ Play/Pause

Bluetooth connection lock (BT LOCK):

- Select the Bluetooth function by pressing F repeatedly.
- Long press N and press it again to limit Bluetooth connection to only BT and LG TV.
- SOUND EFFECT: Selects a sound effect mode.
- TV remote: Long press SOUND EFFECT and press it again to use TV remote control.
- FOLDER ^/∨: Searches a folder.
- Displays the information of a file, an input source or connected Bluetooth device name.
- Auto Power ON/OFF: Long press J and press it again.
- 🔊 Adjust sound level of each speaker.
- REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
	Networked standby : 1.0 W (If all network ports are activated.)
AC adapter	<ul style="list-style-type: none">• Model : DA-38A25• Manufacturer : Asian Power Devices Inc.• Input : 100 - 240 V ~ 50 - 60 Hz• Output : 25 V  1.52 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	300 W RMS

Design and specifications are subject to change without notice.

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device:

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Declaration of Conformity:

Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.lg.com/global/support/cedoc/cedoc#>. For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

- Frequency range: 2402 to 2480 MHz, 5730 to 5821 MHz
- Output power (Max.): 10 dBm, 13 dBm

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.


FAQ'S

Where can I find the advanced features instructions?






You can visit <http://www.lg.com> and download the Owner's Manual for advanced features.

on your TV setting menu. For HDMI (ARC) connection, connect the sound bar to the TV using an HDMI cable and set up [External Speaker (HDMI ARC)] on your TV setting menu." image-1="" headline-2="p" question-2="How do I connect additional devices to the sound bar?" answer-2="You can connect external devices (e.g., Set-top Box, Player) to the sound bar and set the input source by pressing F repeatedly." image-2="" count="3" html="true" css_class=""]

Documents / Resources

	<p>LG DSN4 Wireless Sound Bar [pdf] User Manual DSN4 Wireless Sound Bar, DSN4, Wireless Sound Bar, Sound Bar, Bar</p>
---	---

References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [LG Open Source](#)
-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)
-  [CeDoc](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.