

LGL
VCK CCCP
VFD Clock



LGL VCK CCCP VFD Clock User Guide

[Home](#) » [LGL](#) » LGL VCK CCCP VFD Clock User Guide 

Contents

- [1 LGL VCK CCCP VFD Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Getting Started](#)
- [5 Function Buttons](#)
- [6 WEB Controller Setup](#)
- [7 RGB Light Color Adjustment Module](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

LGL

LGL VCK CCCP VFD Clock



Product Information

Specifications

- **Model:** LGL VFD Clock
- **Power Source:** Type-C cable
- **Connectivity:** WiFi
- **RGB Light Adjustment:** SET1 button
- **Function Buttons:** SET1, SET2, SET3

Product Usage Instructions

Getting Started

1. Plug in the included Type-C cable to power on the clock.
2. Connect to WiFi network "VFD_Clock_AP" and set the clock mode as per your preference.

Function Buttons

- **SET1:** Function for WiFi, Timezone, NTP Server settings.
- **SET2:** Function for RGB LED control.
- **SET3:** Function for VFD Clock settings like brightness, mode, date format, etc.

WEB Controller Setup

Follow these steps to set up the web controller:

1. Connect to the clock's WiFi (VFD_Clock_AP).
2. Open a web browser and go to the IP address shown on the clock.
3. Follow the on-screen instructions to configure your settings.

RGB Light Color Adjustment

Adjust RGB lights using the SET1 button. Experiment with different modes to find your preferred lighting.

FAQ

- **How do I adjust the brightness of the RGB lights?**

To adjust the brightness of RGB lights, navigate to SET2 on the clock and use the RGB-LED-Brightness slider (0-1000).

- **Can I set an alarm on the VFD Clock?**


Yes, you can set an alarm on the clock. Navigate to SET3 and configure the Alarm Mode and Alarm Time settings.

Getting Started

1. Plug in the included Type-C cable. The screen will initialize and flash to indicate that it is powered on.

2. Connect to WiFi and set the clock mode according to your preferences.
3. WiFi name: VFD_Clock_AP

Function Buttons

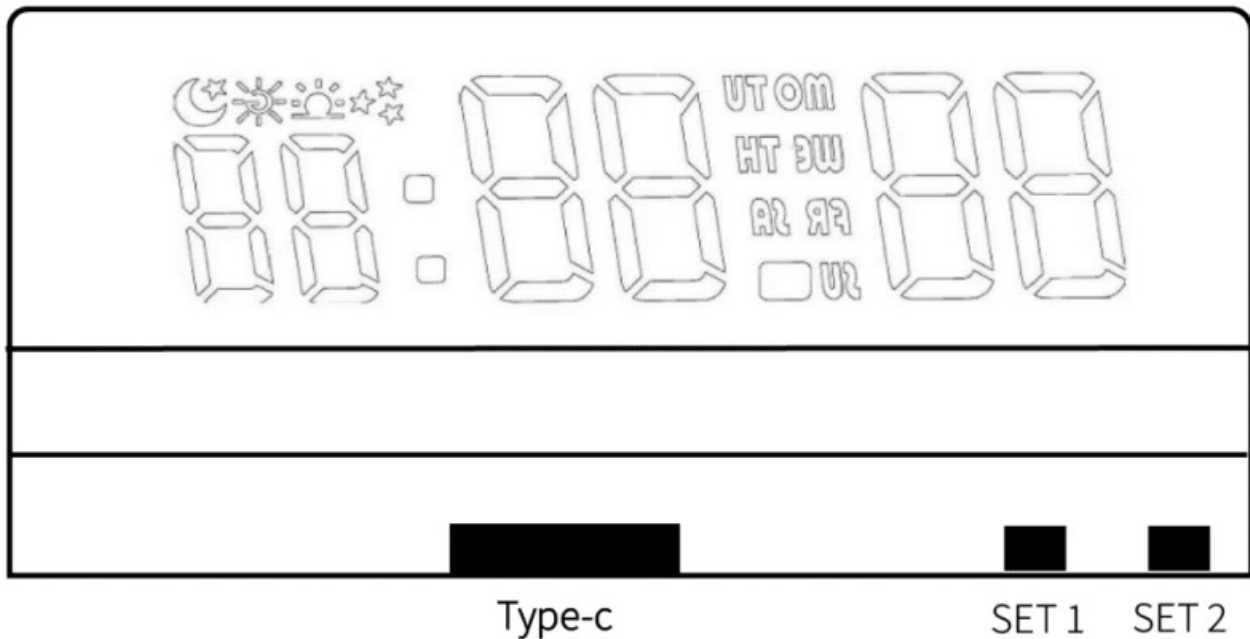

- **SET1:**
 - Single Click: Next RGB mode
 - Double Click: Previous RGB mode
 - Long Press: Turn RGB lights on/off
- **SET2:**
 - Single Click: Increase brightness. Set to AUTO for automatic light sensing or manual brightness adjustment.
 - Double Click: Toggle display mode between fixed time and scrolling time/date.
 - Long Press: Show clock IP address

WEB Controller Setup

Follow these steps to set up the web controller:

- Connect to the clock's WiFi (VFD_Clock_AP).
- Open a web browser and go to the IP address shown on the clock.
- Follow the on-screen instructions to configure your settings.

RGB Light Color Adjustment

You can adjust the RGB lights using the SET1 button. Experiment with different modes to find your preferred lighting.

WEB Controller Setup Content List

- **SET 1: WIFI/Timezone/NTP Server**

- 2.4Ghz_WIFI_Name:
- 2.4Ghz_WIFI_Password:
- Timezone: Timezone tips: Pairs:+1/New york:-5/Tokyo:+9
- Network delay compensation-Offset: default=0
- DST Timezone:
- DST Start Rule:
- **DST End Rule:**

- **NTP Server: pool.ntp.org**

Example: Apr.First.Tue.2 (means: Switching to daylight saving time from 2:00 PM on the first Tuesday of April)

Example: Oct, Second,Tue,2 (daylight saving time ends at 2o'clock on the second Tyesday of October)

No daylight saving time, fill 0 in the blan!

(* no DST, just fill DST Timezone DST Start and EndRule 0)

• SET 2: RGB LED

- RGB-ON/OFF:
- RGB LED-Turn on:
- RGB LED-Turn off:
- LED-Flash Speed (Unit: ms) :
- RGB-Effect Mode: 23RGB flow options to choose from
- RGB-LED-Brightness: (0-1000)
- RGB-LED-Color: Slider to select color


• SET 3: VFD Clock Function

- Brightness: Auto/Min/Low/High/Max
- Mode: Fix Time / Shift TIME/Date
- Date Format: US/UK
- 12/24Format:(12H/24H)
- WIFI NTP ON/OFF:
- Alarm Mode:
- Alarm Time Set:


Manual Set Time&Date

- SET TIME: _____
- SET DATE: _____

RGB Light Color Adjustment Module

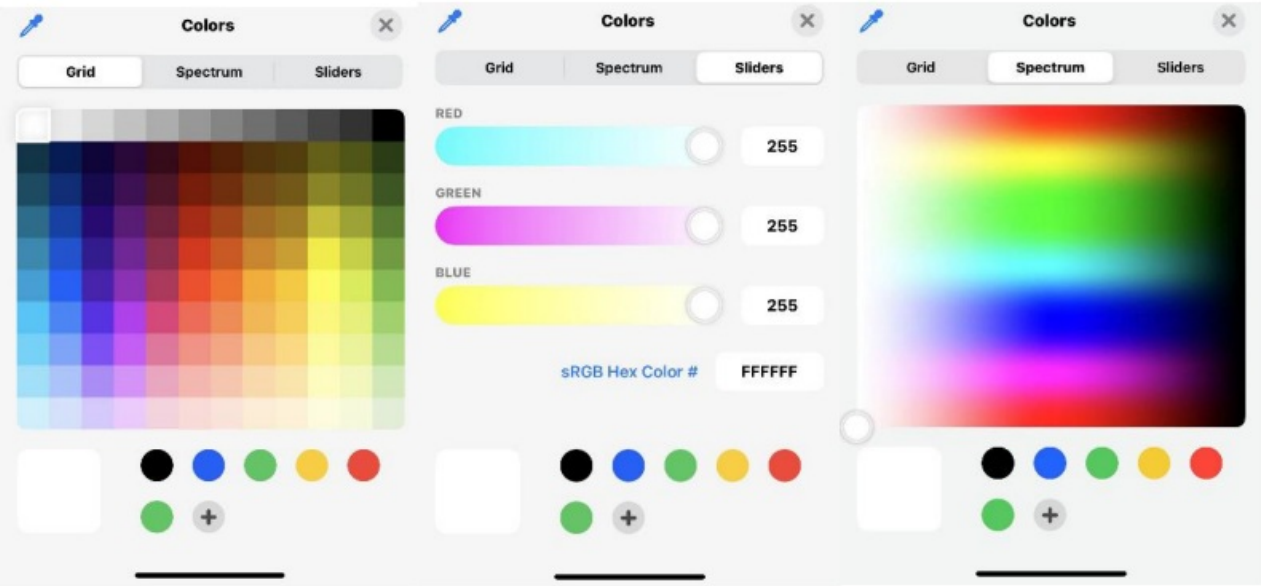

Documents / Resources

<div><div>LGL VFD Clock User Guide</div><div></div><div><div>Getting Started</div><div><div>1. Plug the included USB Cable. Power on the module and follow the on-screen instructions.</div><div>2. Connect to the VFD and start the module using the provided software.</div><div>3. Adjust the VFD Clock.</div></div></div></div> <td><div><div>LGL VCK CCCP VFD Clock [pdf] User Guide</div><div>VCK CCCP VFD Clock, CCCP VFD Clock, VFD Clock, Clock</div></div></td>	<div><div>LGL VCK CCCP VFD Clock [pdf] User Guide</div><div>VCK CCCP VFD Clock, CCCP VFD Clock, VFD Clock, Clock</div></div>
--	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.