



LIAN LI UNI FAN SL-INF Connect 3.0 Controller Installation Guide

[Home](#) » [LIAN LI](#) » LIAN LI UNI FAN SL-INF Connect 3.0 Controller Installation Guide 


 
Contents

- [1 LIAN LI UNI FAN SL-INF Connect 3.0 Controller Installation Guide](#)
- [2 Package Contents](#)
- [3 Power Module Installation](#)
- [4 Fan to Fan Connection](#)
- [5 Steps to Switch Orientation of the Cable on the Power Module](#)
- [6 Remove the Fan Interlocking Key](#)
- [7 Use of Magnetic Adhesive Pad](#)
- [8 Restriction of Controller](#)
- [9 Controller Cable Connection](#)
- [10 * Splitter](#)
- [11 Read More About This Manual & Download PDF:](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



LIAN LI UNI FAN SL-INF Connect 3.0 Controller Installation Guide



Package Contents


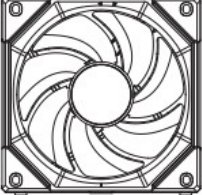

 x 3 pcs	 x 1 pc
 x 4 pcs	 x 1 pc
 x 12 pcs	 x 1 pc

 Power Module Installation

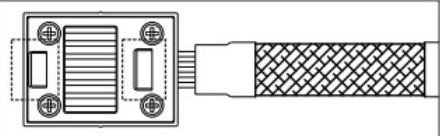


 **Note!** The socket for the power module are in different size, please be aware of the direction.

注意！電源片分為大小兩種卡榫，安裝時須注意方向性。

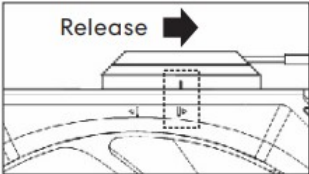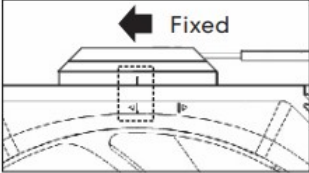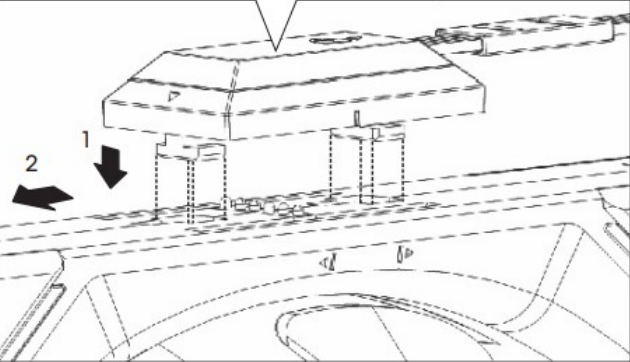


Note! The socket for the power module are in different size, please be aware of the direction.

Fan to Fan Connection

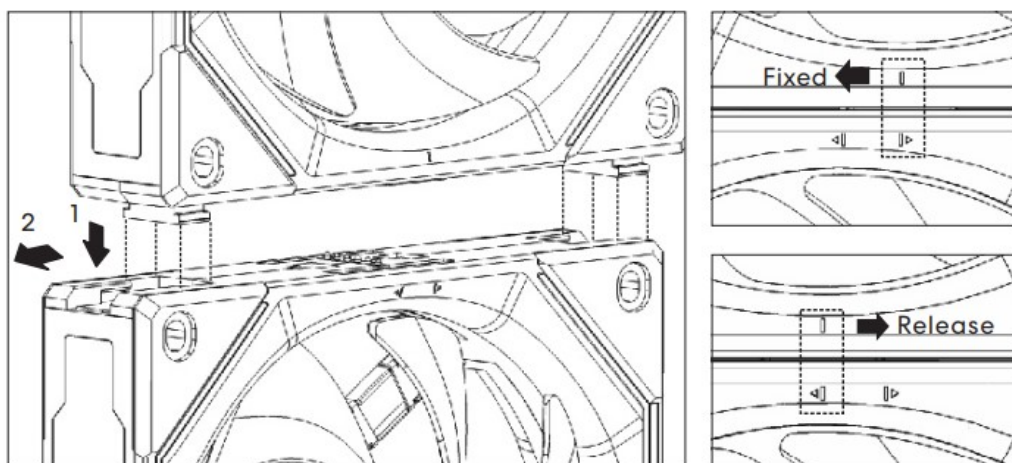


Steps to Switch Orientation of the Cable on the Power Module

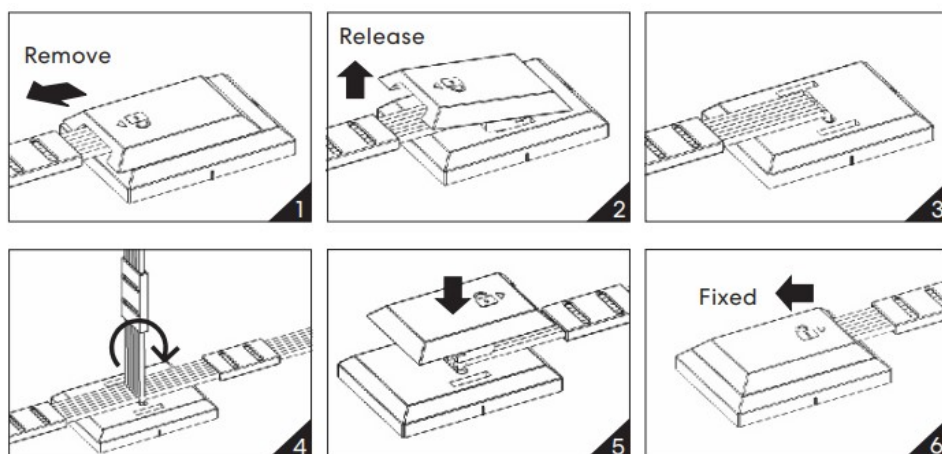

Note! The top cover is removable if it is affected by the radiator inlet and outlet, and route the cable vertically


Remove the Fan Interlocking Key

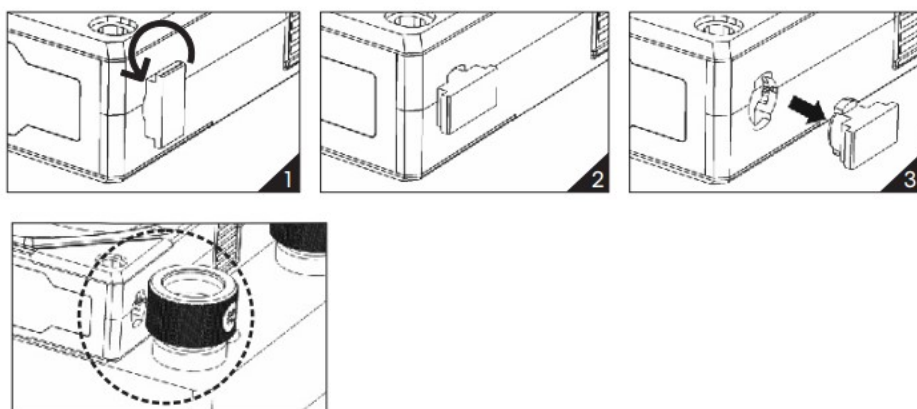

Use of Magnetic Adhesive Pad



Remove the adhesive
撕下雙面膠


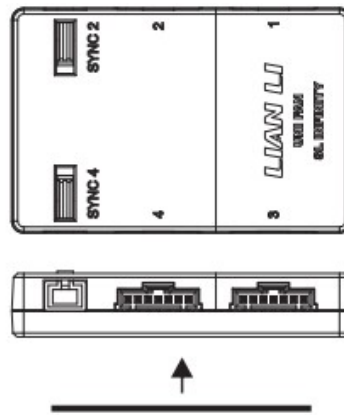


Restriction of Controller

Maximum output of controller when connected BOTH SATA 15 PIN cable:

1. The maximum total output of the controller supports up to 29W.
2. Use L-Connect 3 to set static white, please lower the brightness.
3. When sync to motherboard and set as 100% brightness of static white, the controller supports up to 8 UNI FAN SL Infinity.
4. Each SM type port supports up to 5W. (2 SM type port on controller)

Controller Cable Connection

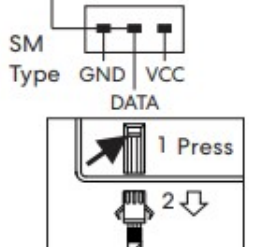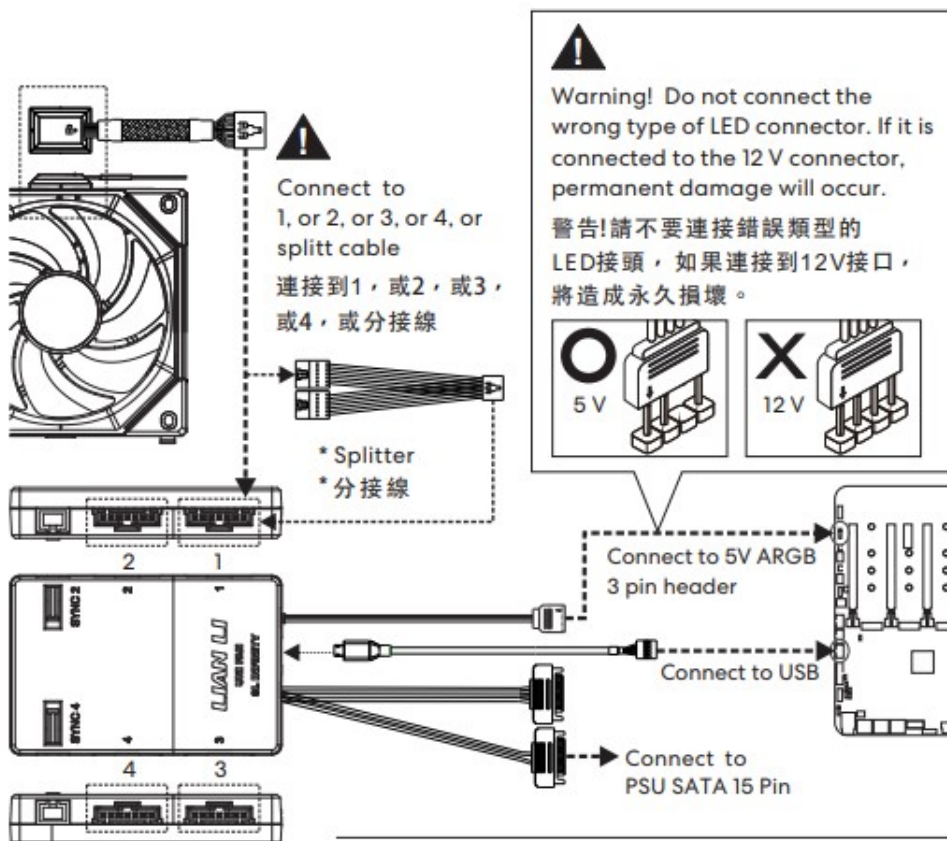

!
Note! Press and pull out the connector to release the cable.
注意! 按下再拉出線材接頭。

* Splitter / 分接線

- Control with L-Connect 3:
Connect up to 8 UNI FAN SL Infinity with splitter when set as static white, lower the brightness if necessary.
- Control with Motherboard software:
Connect up to 5 UNI FAN SL Infinity with splitter when set as 100% brightness static white
- 採用 L-Connect 3 軟體控制燈效:
使用此轉接線串接 8 顆風扇，並設定為定色白光，將白光亮度降低。
- 同步主板燈效軟體:
亮度開至 100% 定色白光模式，使用此轉接線材，最多支援 5 顆 Infinity Fan。

 
G50.12SLIN3.00

* Splitter

- Control with L-Connect 3: Connect up to 8 UNI FAN SL Infinity with splitter when set as static white, lower the brightness if necessary.
- Control with Motherboard software: Connect up to 5 UNI FAN SL Infinity with splitter when set as 100% brightness static white

Read More About This Manual & Download PDF:

Documents / Resources



[LIAN LI UNI FAN SL-INF Connect 3.0 Controller](#) [pdf] Installation Guide

UNI FAN SL-INF Connect 3.0 Controller, UNI FAN SL-INF, Connect 3.0 Controller, 3.0 Controller, Controller

[Manuals+.](#) [home](#)

[privacy](#)