



Lidl Us SSBS30A2 Selfiestick with Bluetooth and Tripod Instruction Manual

[Home](#) » [Lidl Us](#) » Lidl Us SSBS30A2 Selfiestick with Bluetooth and Tripod Instruction Manual 

Contents

- [1 Lidl Us SSBS30A2 Selfiestick with Bluetooth and Tripod](#)
- [2 Introduction](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 Description of parts/controls](#)
- [5 Handling and operation](#)
- [6 Troubleshooting](#)
- [7 Appendix](#)
- [8 3 year limited warranty](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



Lidl Us SSBS30A2 Selfiestick with Bluetooth and Tripod



Introduction

Information about these operating instructions. Congratulations on the purchase of your new device. You have selected a high-quality product. The operating instructions are part of this product. They contain important information on safety, usage, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Use the product only as described and for the specified range of applications. Keep these operating instructions as a reference and store them near the product. Please pass on all documentation incl. these operating instructions to any future owner(s), if you sell this product or give it away.

Trademark information

The Bluetooth® logotype and the Bluetooth® logo are registered trademarks of Bluetooth SIG, Inc. (Special Interest Group) Any use of the trademarks is made under the provision of a license. trademark and trade name are the property of their respective owner. All other names and products may be the trademarks or registered trademarks of their respective owners.

Intended use

This product is an IT device and is intended for taking selfies (self portraits) using a Bluetooth®-capable smartphone. A mini-tripod can be screwed onto the 1/4 inch thread on the bottom of the handle, allowing the device to be used as a stable table-top tripod. Pictures can be taken from a distance of up to 32 feet using the detachable remote trigger. Any use other than the intended use is considered to be improper. The product is not intended for use in commercial or industrial environments. The manufacturer accepts no responsibility for damage caused by improper use or repairs, unauthorized modifications, or the use of unapproved replacement parts. The risk is borne solely by the user.

Warning types

The following warning types are used in these operating instructions: This is the safety alert symbol. It is used to alert you to potential injury hazards. Obey all safety messages that follow this symbol to avoid possible injury and death.

WARNING: indicates a hazardous situation that, if not avoided, could result in death or serious injury.

NOTICE: indicates information that is considered important, but not hazardous (e.g. messages related to property

damage).

Tip: A tip provides additional information that will assist you in using the device.

Safety

This section contains important safety instructions for handling the device. Improper use may result in personal injury and/or property damage.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE! FOR HOUSEHOLD USE ONLY! SAVE THESE INSTRUCTIONS.

Basic safety guidelines:

To ensure safe operation of the device, follow the safety guidelines set out below:

- Check the product for visible, external damage before use. Do not operate products that have been damaged or dropped.
- This product may only be used by children aged 8 years and above and by persons with limited physical, sensory or mental capabilities, or lack of experience and knowledge, if it is provided that they are being supervised or have been instructed on how to use the product safely and are aware of the potential risks. Children must not play with the product. Cleaning and user maintenance tasks must not be carried out by children unless they are supervised.
- Packaging materials are not children's toys! Keep all packaging materials away from children. There is a risk of suffocation!
- When you use the product, make sure that all product components are connected properly.
- Do not make any unauthorized changes or modifications to the product.
- Do not operate the product near sources of heat, such as radiators or other heat generating appliances.
- Do not expose the product to direct sunlight or high temperatures. Otherwise, it may become overheated and irreparably damaged.
- Keep open flames (e.g. candles) away from the product at all times.
- Protect the product from moisture and liquids.
- Do not immerse the device in water or other liquids!

Notes regarding radio interface

- Turn the device off when you are in an airplane, a hospital, an operating room, or a medical electronics system. The transmitted radio waves can affect sensitive devices in their function.
- Keep the device at a distance of at least 7.87 inches from a pacemaker or implanted defibrillator, as radio waves may interfere with the proper functions of the pacemaker or implanted defibrillator.
- The transmitted radio waves can cause noise in hearing aids.
- Do not place the product near flammable gases or in a potentially explosive atmosphere (e.g. paint shop) with radio components turned on, as the transmitted radio waves can cause an explosion or fire.
- The range of radio waves depends on environmental and surrounding conditions.
- For data transmission via a wireless connection, it is also possible for unauthorized third parties to intercept the data.

Safety instructions for batteries

Follow these basic safety instructions for safe handling of batteries:

- Incorrect handling of batteries can result in fire, explosions, leakage of hazardous substances, or other dangerous situations!
- This product contains a button cell. If this button cell is swallowed, it can cause serious internal burns within 2 hours that may result in death.
- Keep batteries out of the reach of children. Children could put batteries in their mouths and swallow them. If you suspect that a battery may have been swallowed or otherwise entered some part of the body, seek medical attention right away.
- Keep old and new batteries out of the reach of children.
- Do not throw the batteries into a fire and do not expose them to high temperatures.
- Do not open, deform or short circuit batteries, as the chemicals they contain may leak.
- Do not attempt to recharge batteries.
- Check the battery regularly. Leaked chemicals can cause permanent damage to the product. Be especially careful when handling damaged or leaking batteries. Risk of chemical burn! Wear protective gloves.
- Chemicals escaping from a battery can cause irritations to your skin. In case of contact with skin, rinse the area with sufficient water. If the chemicals comes into contact with your eyes, rinse them thoroughly with sufficient water. Do not rub your eyes, and consult a physician right away.
- Always insert the batteries with the correct polarity, as they may burst otherwise.
- If the battery compartment no longer closes securely, stop using the product and keep it away from children.
- Remove the battery from the product if you do not intend to use it for a longer period of time.

Description of parts/controls

(See foldout page for illustrations)

1. Mini-tripod
2. Smartphone holder
3. Set screw
4. Telescopic rod
5. Handle
6. Hand strap
7. ¼ inch thread (bottom side)
8. Remote trigger
9. button (ON/OFF button)
10. Power LED (red/blue)
11. button (trigger button)
12. Battery compartment cover
13. button (Bluetooth®)
14. Remote trigger holder

First use

Check package contents

(See foldout page for illustrations)

The following components are included in delivery:

- Selfie stick
- Remote trigger
- Remote trigger holder
- Mini-tripod
- Button cell CR 2032
- Quick Start Guide
- These operating instructions
- Remove all parts of the product from the packaging and remove all packaging material.

Tip: Check the package for completeness and signs of visible damage. If the delivery is incomplete or damage has occurred as a result of defective packaging or during transport, contact the customer service hotline.

Inserting/replacing battery

- Open the battery compartment on the back of the remote trigger 8. Using a coin, for example, turn the battery compartment cover w towards the OPEN arrow direction until the arrow on the battery compartment cover w points to the open lock symbol .
- Insert a CR 2032 battery into the battery compartment. The positive pole must point upward.
- Place the battery compartment cover w on the back of the remote trigger 8 and lock the battery compartment. Turn the battery compartment cover w towards the CLOSE arrow direction until the arrow on the battery compartment cover w points to the closed lock symbol . Ensure that the sealing ring is properly inserted into the frame of the battery compartment.

Tip: If the power LED 0 is flashing red in one second intervals, the battery is dead and must be replaced.

Handling and operation

Connecting to a smartphone

Before you can use the selfie stick, you have to first pair the remote trigger 8 with a compatible smartphone via Bluetooth®

Tip: This product supports iOS 8.0 or higher and Android 6.0 or higher. Since Android is an open-source system, each manufacturer assigns the keys in their camera app themselves. Therefore, the original camera app of some smartphones cannot be used to take pictures and there may be various malfunctions when pressing the button q. If this is the case, check the operating system settings to see whether there is an option to use the volume control (+) as an additional trigger button.

- Press and hold the button 9 for approximately 3 seconds to turn on the remote trigger 8. The power LED 0 lights up red once and then flashes blue in 1 second intervals. The remote trigger 8 is now in pairing mode for approx. 1 minute. If you do not pair the devices within 1 minute, the remote trigger 8 automatically turns off.
- Enable the Bluetooth® function on your smartphone and search for Bluetooth® devices. For a detailed description, refer to the operating instructions of your smartphone.
- Select Swi-384818_2107 from the list of devices found on your smartphone to pair the two devices. When pairing is complete, the power LED 0 turns off.

- To turn off the remote trigger 8, press and hold the button 9 for approx. 3 seconds. The power LED 0 flashes red briefly 3 times and then turns off completely.

Tip: The next time you turn it on, the remote trigger 8 automatically connects to the most recently connected smartphone. If your smartphone does not automatically reconnect to the remote trigger 8, you will have to connect the devices manually. For a detailed description, refer to the operating instructions of your smartphone. If you want to pair another smartphone with the remote trigger 8, press and hold the button e for approx. 2 seconds. The power LED briefly flashes blue twice and then flashes blue in one second intervals. The remote trigger 8 is now in pairing mode for about 1 minute and can be connected to another smartphone.

Attaching the smartphone to the selfie stick

- Open the clamps on the smartphone holder 2.
- Place the smartphone between the clamps on the smartphone holder 2 by pushing the top clamp apart against the spring force. Make sure your smartphone is securely in place.
- Loosen the set screw 3 and adjust the vertical tilt angle of the smartphone. Fix the smartphone in the desired position by re-tightening the set screw 3.
- If necessary, attach the remote trigger 8 to the first element of the telescopic rod 4 via the remote trigger holder r.

Taking selfies

- Unlock the telescopic rod 4 by turning it counterclockwise.
- Now, pull out the telescopic rod 4 to the desired length. Turn the individual elements of the telescopic rod 4 clockwise to lock them in place.
- If you want to loosen the telescopic rod 4 again, turn the individual elements in the opposite direction (counterclockwise).
- Turn your smartphone's camera function on.
- Press the button q on the remote trigger 8. Your smartphone will take a picture. The power LED 0 briefly flashes blue once.

Tip: If you do not press the button q for approx. 6 minutes, the remote trigger 8 automatically turns off.

Using the mini-tripod

- Screw the mini-tripod 1 into the ¼ inch thread 7 on the bottom of the handle 5.
- Always fold out the legs of the mini-tripod 1 completely for the best possible stability.

Troubleshooting

The remote trigger 8 does not turn on.

- The inserted battery is dead. Replace the battery (see chapter on Inserting/replacing battery). Unable to connect via Bluetooth®.
- The Bluetooth® function is disabled on the smartphone. Enable the Bluetooth® function on your smartphone. For more information, refer to the operating instructions of your phone.

- The remote trigger 8 is too far away from the smartphone. Make sure that the remote trigger 8 is no farther than 32 feet from the smartphone.
- Your smartphone may use an unsupported operating system. Check the operating system version on your smartphone (for supported operating systems, refer to the chapter on Technical specifications). No picture is taken when the button q is pressed.
- Each manufacturer assigns the keys in their camera app themselves. As a result, a variety of malfunctions can occur when pressing the button q. For example, the camera may zoom in instead of taking a picture. If this is the case, check the operating system settings to see whether there is an option to use the volume control (+) as an additional trigger button. The power LED 0 flashes red in one second intervals.
- The battery in the remote trigger 8 is dead and must be replaced (see chapter on Inserting/replacing battery).

Cleaning

Damage to the device!

- Ensure that no moisture penetrates into the product during cleaning to avoid irreparable damage to the product.
- Do not use caustic, abrasive, or solvent-based cleaners. They can damage the surfaces of the product.
- Clean the product only with a slightly damp cloth and mild detergent.

Storage when not in use

- Store the product in a dry, dust-free place, away from direct sunlight.
- Before storing the device for a longer period of time, remove the batteries to prevent them from leaking.

Disposal

Disposal of the device

Electric devices may not be thrown away as part of normal household trash. If you can no longer use your electric device, dispose of it in accordance with the legal provisions applicable in your state. This will ensure that old electric devices are recycled and environmental pollution is kept to a minimum. Further information about disposal is available on the internet at www.epa.gov.

Disposal of batteries

Some batteries contain heavy metals such as mercury, lead, cadmium, and nickel; therefore, many communities do not allow them to be thrown away with your regular trash. Recycling is always the best option for disposing of used batteries. Dry-cell batteries are used in a variety of electronics and include alkaline and carbon zinc (9-volt, D, C, AA, AAA), mercuric-oxide (button, some cylindrical and rectangular), silver-oxide and zinc-air (button), and lithium (9-volt, C, AA, coin, button, rechargeable) batteries. Look for in-store recycling bins or community collection events to dispose of these batteries.

Disposal of the packaging

The packaging materials have been selected for their environmental friendliness and ease of disposal, and are therefore recyclable. Dispose of packaging materials that are no longer needed in accordance with applicable local regulations. Note the marking on the different packaging materials and separate them accordingly. The packaging materials are marked with abbreviations (a) and numbers (b) with the following meanings: 1–7: Plastics, 20–22: Paper and cardboard, 80–98: Composites.

Appendix

Technical specifications

REMOTE TRIGGER	
Voltage supply	1 x 3 V____(DC) type CR 2032 (button cell)
Bluetooth® specifications	Version 5 .0 (up to 32 ft [10 m] range)
Frequency range	2 .4 GHz
Transmission strength	< 10 dBm
Supported operating systems	iOS 8 .0 or newer/ Android 6 .0 or newer
Operating temperature	41 to 95 °F (5 to 35 °C)
Storage temperature	32 to 104 °F (0 to 40 °C)
Humidity (no condensation)	≤ 75%
Weight	approx . 0 .85 oz (24 g)
FCC ID	2AJ9O-SSBS30A2
SELFIE STICK	
Clamping range	approx . 2 .13 – 3 .15 in (54 – 80 mm)
Max . load	approx . 17 .64 oz (500 g)

Length	approx . 12 – 39 in (30 cm – 100 cm)
Weight	approx . 5 .64 oz (160 g)
MINI-TRIPOD	
Max . load	35 .27 oz (1 kg)
Weight	approx . 4 .23 oz (120 g)

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Swi-384818_2107 21.10.2020

12:05:55

3 year limited warranty

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.

- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.) Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

How to process the warranty?

To initiate, please:

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Table of Contents	
Introduction	3
• Through the box opening instructions	3
• Through alternative	3
• Through app	3
History	3
• Support video resources	3
• How to use guidelines	3
• Using tracking and location	3
• How to use the app	3
Installation of accessories	7
Features	7
• Quick response	7
Installation and operation	8
• How to use the app	8
• Installing the accessories to the selfstick	10
• How to use the app	10
• Using the app	11
Specifications	11
Dimensions	11
Storage other accessories	11
Warranty	11
• General warranty	11
• Special warranty	11
Support	11
• Technical specifications	11
• EUC Compliance Statement	11
• 3 year limited warranty	11
Index	11