

LIFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer



## LiFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer User Manual

[Home](#) » [LiFE](#) » [LiFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer User Manual](#) 

### Contents

- [1 LiFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer](#)
- [2 USER MANUAL SYMBOLS](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 BATTERY INSTALLATION](#)
- [5 CLEANING AND CARE](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

**LiFE**

**LiFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer**



PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS. Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

## USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions to avoid accidents and prevent damage to the machine:

- **WARNING:** This sign warns you of dangers to your health and indicates possible injury risks.
- **CAUTION:** This sign refers to possible hazards to the machine or other objects.
- **NOTE:** This sign highlights tips and information.

## SAFETY INSTRUCTIONS

1. Keep it the device away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges.
2. Do not immerse the device in water or any other liquid.
3. The device is designed exclusively for private, domestic use and the envisaged purpose.
4. This device is not suitable for commercial use.
5. To ensure the safety of your children, please keep away from all packaging materials such as plastic bags, boxes, foil etc.
  - **CAUTION:** Do not allow babies and young children to play with the packaging materials. Risk of suffocation!
6. If you do not intend to use the device for a long time, remove the battery before storage to avoid fluid leakage.

## BATTERY INSTALLATION

1. Open the battery compartment cover at the rear side of the clock.
2. Insert 2 x AAA batteries (not included) following the polarity marks “+” and “-”.
3. Please follow the correct polarity according to the markings.

## NOTES:

- Do not mix new and old batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

## SETTINGS TIME SETTING

1. Press the “MODE” button and the 12/24 hour mode display will start to flash. Now use the “▲” and “▼” buttons to set the 12/24 hour format. Press “SET” to confirm your setting.
2. The Hour display will start to flash. Now use the “▲” and “▼” buttons to set the hour. Press “SET” to confirm your setting.
3. The Minute display will start to flash. Now use the “▲” and “▼” buttons to set the minutes. Press “SET” to confirm your setting.
4. The Year display will start to flash. Now use the “▲” and “▼” buttons to set the year. Press “SET” to confirm your setting.

5. The Month display will start to flash. Now use the “▲” and “▼” buttons to set the correct month. Press “SET” to confirm your setting.
6. The Date display will start to flash. Now use the “▲” and “▼” buttons to set the correct date. Press “SET” to confirm your setting.

## ALARM SETTING

1. Press the “MODE” key twice or press the “ALM” key directly to enter into the alarm mode.
2. Press the “SET” key to set the Hour, Minute, and Ringtone and adjust them by pressing “▲/▼” key.
3. At normal time display status, with the “ALARM” word display, press the “▲” key to activate the SNOOZE function and press again to close the SNOOZE function.
4. If the alarm is ON and the snooze function is OFF, the alarm will ring for one minute when the clock rings. Press any key to stop. If both of them are ON, it will ring for one minute every four minutes interval.
5. At the activating status of snooze & alarm, press any key to stop the alarm and turn on the snooze function with the SNZ icon flashing or cancelled by pressing “▲” key.

## CLOSING THE ALARM

1. Press the “MODE” key repeatedly until you enter the alarm mode or press the “ALM” key directly.
2. Press the “SET” key to set the time, minute and alarm sound settings. At the fourth press of the “SET” key, no field will blink. At the fifth press of the “SET” key, “\_: \_-” will appear on the display. This means that the alarm is off. Press the mode key repeatedly until you enter the time mode. The alarm will not be displayed on the screen, which means that the alarm is disabled.

## ALARM ON (AT THE TIME THAT IT WAS PROGRAMMED PREVIOUSLY)

1. To reset the alarm (at the time that was programmed previously), press the “MODE” key repeatedly until you enter alarm mode.
2. Press the “SET” key and the last programmed alarm time will be displayed. Time will start to flash (if you do not press “▲/▼” keys, the alarm time will remain the same, and if you press the “▲/▼” keys the time will be changed).
3. Press the “MODE” key repeatedly until you enter the time mode. The alarm will be displayed on the screen, which means that the alarm is enabled.

## SETTING BIRTH REMINDER

1. At the normal display status, press the “MODE” key three times into the birthday-reminding setting mode.
2. Press the “SET” key to set Hour, Minute, Year, Month, and Date by step with “▲/▼” key.
3. Once the birthday-reminding rings, it will play a birthday song for 5 minutes automatically to congratulate “HAPPY BIRTHDAY”.
4. To turn off the alarm, press one “ALM” key. When the alarm time is displayed, press the “SET” key until “: \_” appears in the display. Then, press twice “MODE” key. The current time will be displayed on the screen without

the ALARM sign at the top. The alarm has been turned off.

## **CLEANING AND CARE**

1. Never immerse the device in water or any other liquid.
2. Wipe the housing and the screen of the device with a soft cloth.

## **STORAGE**

1. Always store the device in a safe and clean place. For the better protection of the device, store it in its original packaging.
2. If you do not intend to use the device for a long time, remove the battery before storing it to prevent leakage of the battery fluid.

## **DISPOSAL OF APPLIANCE AND ACCESSORIES**


- This symbol appearing on the product, its accessories or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other household trash.
- To avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

## **DISPOSAL OF BATTERIES**

- This marking on the battery, manual or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.

## **CONTACT**

- **e-mail:**
    - [info@sun.gr](mailto:info@sun.gr)
    - [www.life.gr](http://www.life.gr)
  - Ionias Kalochori, 570 09 Thessaloniki, Greece,
  - **TEL.** +30 2310 700.777
-

	<p><a href="#">LiFE 221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer</a> [pdf] User Manual</p> <p>221-0110 Digital Alarm Clock with LCD Display and Indoor Thermometer, 221-0110, Digital Alarm Clock with LCD Display and Indoor Thermometer, LCD Display and Indoor Thermometer, Indoor Thermometer</p>
--	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.