



LiFE B and W RetroFlip Alarm Clock User Manual

[Home](#) » [LiFE](#) » LiFE B and W RetroFlip Alarm Clock User Manual 

Contents

- 1 [LiFE B and W RetroFlip Alarm Clock](#)
- 2 [Introduction](#)
- 3 [SAFETY INSTRUCTIONS](#)
- 4 [SPECIFICATIONS](#)
- 5 [PARTS IDENTIFICATION](#)
- 6 [INITIAL OPERATION](#)
- 7 [DAILY ALARM SETTING](#)
- 8 [CLEANING AND CARE](#)
- 9 [CONTACT](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)

LiFE

LiFE B and W RetroFlip Alarm Clock



Introduction

- PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.
- Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt and, if possible, the box with the internal packing.
- If you give this device to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

- Important information for your safety is specially marked. It is essential to comply with these instructions to avoid accidents and prevent damage to the machine:



- **WARNING:** This sign warns you of dangers to your health and indicates possible injury risks.



- **CAUTION:** This sign refers to possible hazards to the machine or other objects.

- **NOTE:** This sign highlights tips and information

SAFETY INSTRUCTIONS

The device must be used with due care and you must follow the basic safety instructions as follows:

1. Keep the device away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges.
2. Do not immerse the device in water or any other liquid.

3. The device is designed exclusively for private, domestic use and the envisaged purpose.
4. This device is not suitable for commercial use.
5. To ensure the safety of your children, please keep away from all packaging materials such as plastic bags, boxes, foil etc.
6. **CAUTION:** Do not allow babies and young children to play with the packaging materials. Risk of suffocation!
7. If you do not intend to use the device for a long time, remove the battery before storage to avoid fluid leakage.

SPECIFICATIONS

- Digital clock display in 12/24 hour format
- LCD with blue LED backlight
- Daily Alarm Function
- Snooze Function
- Battery powered: 2 x AA (not included)

PARTS IDENTIFICATION

1. SNOOZE / LIGHT button
2. Time display
3. Minute display
4. ON / OFF switch
5. Rotary switch
6. Battery compartment



INITIAL OPERATION


- Open the battery compartment cover at the rear side of the clock.
- Insert 2 x AA batteries (not included) following the polarity marks “+” and ”-“.
- When you insert the batteries, all the icons on the LCD will light up for 3 seconds, and a beep tone will be heard.

TIME SETTING

- Press and hold for 2 seconds the rotary knob (SET) and the 12/24 hour format display will start to flash.

- Rotate the knob to the “+” or “_” to set the time format. Press the rotary knob (SET) to confirm your setting.
- The Hour display will start to flash. Rotate the knob to the “+” or “-” to set the hour. Press the rotary knob (SET) to confirm your setting.
- The Minute display will start to flash. Rotate the knob to the “+” or “_” to set the minutes.
- Press the rotary knob (SET) to confirm your setting and to end the setting procedure. The clock will enter the clock mode.
- **NOTE:** After 20 seconds without pressing any button, the clock switches automatically from Set Mode to Normal Time Mode.

DAILY ALARM SETTING

- Push the “ON / OFF” switch at the rear side of the clock to the ON position. The alarm symbol “()” will be indicated on the display and the alarm function will be activated.
- Press the rotary knob (SET), and the Alarm hour display will start to flash. Rotate the knob to the “+” or “-” to set the hour.
- Press the rotary knob (SET) to confirm your setting and the Minute display will start to flash.
- Rotate the knob to the “+” or “-” to set the minutes.
- Press the rotary knob (SET) to confirm the setting and to end the setting procedure. The clock will enter the clock mode.

NOTE: After 30 seconds without pressing any button the clock switches automatically from setting mode to Normal clock mode.

- The alarm will sound for 1 minute if you do not deactivate it by pressing any button. In this case, the alarm will be repeated automatically after 24 hours.
- To activate or deactivate the daily alarm, push the “ON / OFF” switch to the ON or OFF position.
- The rising alarm sound changes the volume level 3 times while the alarm is ringing (crescendo, duration: 1 minute).

SNOOZE FUNCTION

- Press the “SNOOZE/LIGHT” button when the alarm signal sounds to get into SNOOZE mode. The alarm signal will ring again after 5 minutes.

BACKGROUND LIGHTING

- Press the “SNOOZE/LIGHT” button and the backlight will light up for 8 seconds.

CLEANING AND CARE

1. Never immerse the device in water or any other liquid.
2. Wipe the housing and the screen of the device with a soft cloth.

STORAGE

1. Always store the device in a safe and clean place. For the better protection of the device, store it in its original packaging.
2. If you do not intend to use the device for a long time, remove the battery before storing it to prevent leakage of the battery fluid.

DISPOSAL OF APPLIANCE AND ACCESSORIES

- This symbol appearing on the product, its accessories or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other household trash.
- To avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.



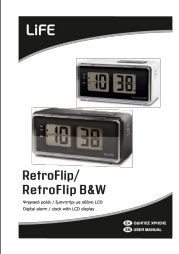
DISPOSAL OF BATTERIES

This marking on the battery, manual or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.

CONTACT

- Icovias Kaloxwpi, 570 09 @sooalovikn, ЕлЛаба, ТНЛ. +30 2310 700.777
- Ionias Kalochori, 570 09 Thessaloniki, Greece, TEL. +30 2310 700.777
- e-mail: info@sun.gr – www.life.gr.

Documents / Resources

	<p>LiFE B and W RetroFlip Alarm Clock [pdf] User Manual</p> <p>B and W RetroFlip Alarm Clock, B and W, RetroFlip Alarm Clock, Alarm Clock, Clock</p>
---	--

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.