

# LIFE RetroFlip II Digital Alarm Clock with LCD Display User **Manual**

Home » LIFE » LIFE RetroFlip II Digital Alarm Clock with LCD Display User Manual



## **Contents**

- 1 LIFE RetroFlip II Digital Alarm Clock with LCD **Display**
- **2 USER MANUAL SYMBOLS**
- **3 SAFETY INSTRUCTIONS**
- **4 SPECIFICATIONS**
- **5 PARTS IDENTIFICATION**
- **6 OPERATION OF DEVICE**
- 7 CLEANING
- **8 DISPOSAL**
- 9 Contacts
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts



LIFE RetroFlip II Digital Alarm Clock with LCD Display



## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

## **USER MANUAL SYMBOLS**

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

- WARNING: This sign warns you of dangers to your health and indicates possible injury risks.
- CAUTION: This sign refers to possible hazards to the machine or other objects.
- **I NOTE:** This sign highlights tips and information

### SAFETY INSTRUCTIONS


The device must be used with due care and you must follow the basic safety instructions as follows:

- 1. Keep it the device away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges.
- 2. Do not immerse the device in water or any other liquid.
- 3. The device is designed exclusively for private, domestic use and for the envisaged purpose.
- 4. This device is not suitable for commercial use.
- 5. To ensure the safety of your children, please keep away from all packaging materials such as plastic bags, boxes, foil etc.
- 6. **CAUTION:** Do not allow babies and young children to play with the packaging materials. Risk of suffocation!
- 7. If you do not intend to use the device for a long time, remove the battery before storage to avoid a fluid leakage.

## **SPECIFICATIONS**

- Digital clock display in 12/24 hour format
- · LCD display with LED backlight
- · Daily Alarm Function
- Snooze Function
- Input voltage: Input voltage: DC SV via USB cable or DC 3V with 2x AA batteries
  - (USB cable, adaptor and batteries are not not included)

# PARTS IDENTIFICATION

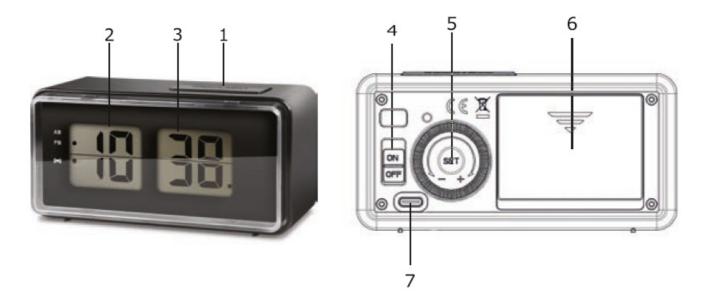

- 1. SNOOZE / LIGHT button
- 2. Time display
- 3. Minute display
- 4. ON / OFF switch
- 5. Rotary switch
- 6. Battery compartment
- 7. USB Type-C port

# **OPERATION OF DEVICE**

- Open the battery compartment cover at the rear side of the clock.
- Insert 2 x AA batteries (not included) following the polarity marks"+" and"-".
- Once you plug in the power adapter (not included) or insert the batteries, all the icons on the LCD display will light up for 3 seconds, and a beep tone will be heard.

# There are two device operating modes available

- 1. Operation using USB power supply
- 2. Operation using batteries

#### **OPERATION USING USB POWER SUPPLY**

- Connect the device to a USB power adapter using a USB Type-C cable. Then connect the power supply to the outlet after making sure that your mains voltage is the same as the voltage indicated on the device's rating label. All icons on the LCD screen will light up for 3 seconds and a beep will sound.
- When using the device using the power adapter, the backlight remains permanently on.

## **NOTE**

• During operation of the device with the power adapter and as long as batteries are installed, in the event of a power failure, the device will continue to operate normally using batteries.

## **BATTERY OPERATION**

- Open the battery compartment cover on the back of the watch, according to the arrow, and then insert 2 AA batteries (not included) following the correct "+" and "-" polarity. Once you insert the batteries, all icons on the LCD screen will light up for 3 seconds and a beep will sound.
- When using the device using batteries, the backlight turns on for 8 seconds after pressing the SNZ/LIGHT button and then turns off.

# **TIME SETTING**

- Press and hold for 2 seconds the rotary knob (SET) and the 12/24 hour format display will start to flash. Rotate the knob to the "+" or"-" to set the time format. Press once the rotary knob (SET) to confirm your setting.
- The Hour display will start to flash. Rotate the knob to the "+" or"-" to set the hour. Press once the rotary knob (SET) to confirm your setting.
- The Minute display will start to flash. Rotate the knob to the "+" or"-" to set the minutes.
- Press once the rotary knob (SET) to confirm your setting and to end the setting procedure. The clock will enter the clock mode.

**NOTE:** After 20 seconds without pressing any button, the clock switches automatically from Set Mode to Normal Time Mode.

## **DAILY ALARM SETTING**

- Push the "ON / OFF" switch at the rear side of the clock to ON position. The alarm symbol
- "(www)" will indicate on the display and the alarm function will be activated.
- Press once the rotary knob (SET), and the Alarm hour display will start to flash. Rotate the knob to the "+" or"-"
  to set the hour.
- Press once the rotary knob (SET) to confirm your setting and the Minute display will start to flash. Rotate the knob to the "+" or "-" to set the minutes.
- Press once the rotary knob (SET) to confirm the setting and to end the setting procedure. The clock will enter the clock mode.
- NOTE: After 20 seconds without pressing any button the clock switches automatically from setting mode to

Normal clock mode.

- The alarm will sound for 1 minute if you do not deactivate it by pressing any button. In this case the alarm will be repeated automatically after 24 hours.
- To activate or deactivate the daily alarm, push the "ON / OFF" switch to ON or OFF position.
- Rising alarm sound changes the volume level 3 times while the alarm is ringing (crescendo, duration: 1 minutes).

## **SNOOZE FUNCTION**

• Press the "SNOOZE/LIGHT" button when the alarm signal sounds to get into SNOOZE mode. The alarm signal will ring again after 5 minutes.

#### **BACKGROUND LIGHTING**

• Press the "SNOOZE/LIGHT" button and the backlight will light up for 8 seconds.

#### **NOTE**

• When using the power adapter, the backlight will be permanently on.

#### **CLEANING**

 
- 1. Never immerse device in water or in any other liquid.
- 2. Wipe the housing and the screen of the device with a soft cloth.

## **STORAGE**

- 1. Always store the device in a safe and clean place. For the better protection of the device, store it in its original packaging.
- 2. If you do not intend to use the device for a long time, remove the battery before storing it to prevent leakage of the battery fluid.

## **DISPOSAL**

#### **DISPOSAL OF APPLIANCE AND ACCESSORIES**



- In order to avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

#### **DISPOSAL OF BATTERIES**

This marking on the battery, manual or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.

## **Contacts**

#### **Iwviac**

- Ka>-oxwp1, 570 09 0EOOOAOViKrJ, EMMa, THA.
- +30 2310 700.777

#### Ionias Kalochori

- 570 09 Thessaloniki, Greece,
- TEL. +30 2310 700.777
- e-mail: info@sun.gr
- www.life.gr

Made In China



## **Documents / Resources**



LIFE RetroFlip II Digital Alarm Clock with LCD Display [pdf] User Manual RetroFlip II Digital Alarm Clock with LCD Display, RetroFlip II, Digital Alarm Clock with LCD Display, Clock with LCD Display, LCD Display

## References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.