

**LiFE**  
**RetroFlip**  
**II LCD**  
**Display**  
**Clock**



## LiFE RetroFlip II LCD Display Clock User Manual

[Home](#) » [LiFE](#) » LiFE RetroFlip II LCD Display Clock User Manual 

### Contents

- 1 LiFE RetroFlip II LCD Display Clock
- 2 PRODUCT INFORMATION
- 3 USER MANUAL SYMBOLS
- 4 SAFETY INSTRUCTIONS
- 5 SPECIFICATIONS
- 6 PARTS IDENTIFICATION
- 7 OPERATION OF DEVICE
- 8 CONTACT INFORMATION
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

**LiFE**

### LiFE RetroFlip II LCD Display Clock



## PRODUCT INFORMATION



- PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.
- Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt, and, if possible, the box with the internal packing.
- If you give this device to other people, please also pass on the operating instructions.

## USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions to avoid accidents and prevent damage to the machine:



- **WARNING:** This sign warns you of dangers to your health and indicates possible injury risks.




- **CAUTION:** This sign refers to possible hazards to the machine or other objects.



- **NOTE:** This sign highlights tips and information

## SAFETY INSTRUCTIONS

The device must be used with due care and you must follow the basic safety instructions as follows:


1. Keep the device away from sources of heat, direct sunlight, humidity (never dip it into any liquid), and sharp edges.
2. Do not immerse the device in water or any other liquid.
3. The device is designed exclusively for private, domestic use and the envisaged purpose.
4. This device is not suitable for commercial use.
5. To ensure the safety of your children, please keep away from all packaging materials such as plastic bags, boxes, foil, etc.
6.  **CAUTION:** Do not allow babies and young children to play with the packaging materials. Risk of suffocation!
7. If you do not intend to use the device for a long time, remove the battery before storage to avoid fluid leakage.

## SPECIFICATIONS

- Digital clock display in 12/24 hour format
- LCD with blue LED backlight
- Daily Alarm Function
- Snooze Function
- **Input voltage:** Input voltage: DC 5V via USB cable or DC 3V with 2x AA batteries (USB cable, adaptor, and batteries are not included)

## PARTS IDENTIFICATION

1. SNOOZE / LIGHT button
2. Time display
3. Minute display
4. ON / OFF switch
5. Rotary switch
6. Battery compartment
7. USB Type-C port

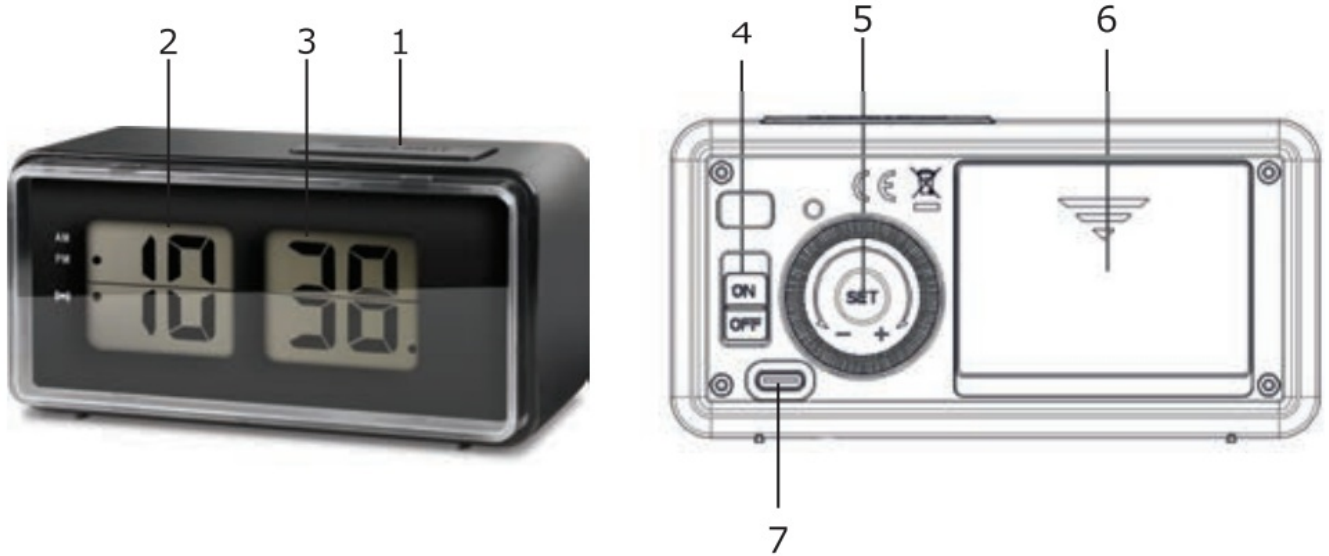

## OPERATION OF DEVICE

- Open the battery compartment cover at the rear side of the clock.
- Insert 2 x AA batteries (not included) following the polarity marks “+” and “-”.
- Once you plug in the power adapter (not included) or insert the batteries, all the icons on the LCD will light up for 3 seconds, and a beep tone will be heard.

### There are two device operating modes available

1. Operation using USB power supply
2. Operation using batteries

## OPERATION USING USB POWER SUPPLY


- Connect the device to a USB power adapter using a USB Type-C cable. Then connect the power supply to the outlet after making sure that your mains voltage is the same as the voltage indicated on the device's rating label. All icons on the LCD screen will light up for 3 seconds and a beep will sound.
- When using the device using the power adapter, the backlight remains permanently on.
- **NOTE:** During the operation of the device with the power adapter and as long as batteries are installed, in the event of a power failure, the device will continue to operate normally using batteries.

## BATTERY OPERATION


- Open the battery compartment cover on the back of the watch, according to the arrow, and then insert 2 AA batteries (not included) following the correct “+” and “-” polarity.
- Once you insert the batteries, all icons on the LCD screen will light up for 3 seconds and a beep will sound.
- When using the device using batteries, the backlight turns on for 8 seconds after pressing the SNZ/LIGHT button and then turns off.


## TIME SETTING

- Press and hold for 2 seconds the rotary knob (SET) and the 12/24 hour format display will start to flash. Rotate the knob to the “+” or “-” to set the time format. Press the rotary knob (SET) to confirm your setting.
- The Hour display will start to flash. Rotate the knob to the “+” or “-” to set the hour. Press the rotary knob (SET) to confirm your setting.
- The Minute display will start to flash. Rotate the knob to the “+” or “-” to set the minutes.
- Press the rotary knob (SET) to confirm your setting and to end the setting procedure. The clock will enter the clock mode.

-  **NOTE:** After 20 seconds without pressing any button, the clock switches automatically from Set Mode to Normal Time Mode.

## DAILY ALARM SETTING

- Push the “ON / OFF” switch at the rear side of the clock to the ON position. The alarm symbol “” will be indicated on the display and the alarm function will be activated.
- Press the rotary knob (SET), and the Alarm hour display will start to flash. Rotate the knob to the “+” or “-” to set the hour.
- Press the rotary knob (SET) to confirm your setting and the Minute display will start to flash. Rotate the knob to the “+” or “-” to set the minutes.
- Press the rotary knob (SET) to confirm the setting and to end the setting procedure. The clock will enter the clock mode.


-  **NOTE:** After 20 seconds without pressing any button the clock switches automatically from setting mode to Normal clock mode.
- The alarm will sound for 1 minute if you do not deactivate it by pressing any button. In this case, the alarm will be repeated automatically after 24 hours.
- To activate or deactivate the daily alarm, push the “ON / OFF” switch to the ON or OFF position.
- The rising alarm sound changes the volume level 3 times while the alarm is ringing (crescendo, duration: 1 minute).

## SNOOZE FUNCTION

- Press the “SNOOZE/LIGHT” button when the alarm signal sounds to get into SNOOZE mode. The alarm signal will ring again after 5 minutes.

## BACKGROUND LIGHTING

- Press the “SNOOZE/LIGHT” button and the backlight will light up for 8 seconds.

-  **NOTE:** When using the power adapter, the backlight will be permanently on.

## CLEANING


1. Never immerse the device in water or any other liquid.
2. Wipe the housing and the screen of the device with a soft cloth.

## STORAGE

1. Always store the device in a safe and clean place. For the better protection of the device, store it in its original packaging.
2. If you do not intend to use the device for a long time, remove the battery before storing it to prevent leakage of the battery fluid.

## DISPOSAL OF APPLIANCE AND ACCESSORIES



-  This symbol appearing on the product, its accessories, or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other household trash.
- In order to avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.


## DISPOSAL OF BATTERIES

- This marking on the battery, manual, or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.

## CONTACT INFORMATION

- Ionias Kalochori, 570 09 Thessaloniki, Greece,
- **TEL.** +30 2310 700.777
- **e-mail:** [info@sun.gr](mailto:info@sun.gr).
- [www.life.gr](http://www.life.gr).

## Documents / Resources

	<p><a href="#">LiFE RetroFlip II LCD Display Clock</a> [pdf] User Manual</p> <p>221-0408, RetroFlip II LCD Display Clock, RetroFlip II, LCD Display Clock, Display Clock, Clock</p>
--	---

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.