



LIFETIME 92100 Height Adjustable Folding Table Instructions

[Home](#) » [LifeTime](#) » LIFETIME 92100 Height Adjustable Folding Table Instructions 

Contents

- [1 LIFETIME 92100 Height Adjustable Folding Table](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 CLEANING & CARE](#)
- [5 USE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



LIFETIME 92100 Height Adjustable Folding Table



Product Information

Specifications

- Material: Polyethylene top, metal frame
- Top: Stain and solvent-resistant
- Cleaning Method: Mild soap and soft-bristled brush
- Frame Repair: Lightly sand the affected area, use rust-preventative spray primer, spray with lead-free, high-gloss spray enamel paint
- Intended Use: Residential/Domestic
- Not Suitable for: Supporting a parasol/umbrella

Product Usage Instructions

Cleaning & Care

The polyethylene top of the product is stain and solvent-resistant. To clean the surface, follow these steps:

1. Prepare a mild soap solution by mixing a small amount of soap with water.
2. Dip a soft-bristled brush into the soap solution.
3. Gently scrub the surface of the polyethylene top using the brush.
4. Rinse off the soap solution with clean water.
5. Dry the surface thoroughly before using the product again.

Note: Avoid using abrasive cleaning materials as they may scratch the plastic. It is recommended to use a soft-bristled brush for cleaning.

Frame Repair

If you notice any scratches or rust spots on the metal frame, you can repair them by following these steps:

1. Lightly sand the affected area using fine-grit sandpaper to remove any loose rust or debris.
2. Apply a rust-preventative spray primer to the sanded area according to the manufacturer's instructions.
3. Allow the primer to dry completely.
4. Once the primer is dry, spray a lead-free, high-gloss spray enamel paint over the primed area.
5. Ensure an even coat of paint and allow it to dry completely before using the product.

Note: It is important to use a rust-preventative spray primer and a lead-free, high-gloss spray enamel paint for the best results in repairing scratches or rust spots on the metal frame.

Frequently Asked Questions (FAQ)

- Q: Can I use this product for commercial purposes?
A: No, this product is intended for residential/domestic use only.
- Q: Can I place a parasol or umbrella on this product?
A: No, this product is not designed to support a parasol or umbrella. Please avoid placing any additional weight on the top surface.

IMPORTANT! RETAIN FOR FUTURE REFERENCE—READ CAREFULLY

CLEANING & CARE

The polyethylene top is stain and solvent-resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal frame by lightly sanding the affected area, using a rust-preventative spray primer and, finally, spraying with a lead-free, high-gloss spray enamel paint.


USE

For residential/domestic use. Not intended to support a parasol/umbrella.

www.lifetime.com

PO Box 160010 Clearfield, UT 84016-0010

Documents / Resources

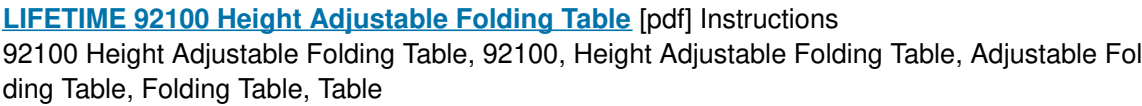

- [!\[\]\(ce446959e8e277ae6a5e0cecf0aa59c5_img.jpg\) Lifetime: Tables, Chairs, Sheds, Basketball, Swing Sets, Kayaks](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)