

Liftmaster 1702E Emergency Key Switch Instructions

Home » LiftMaster » Liftmaster 1702E Emergency Key Switch Instructions





Outside Quick Release


Contents


1 1702E Emergency Key


2 Documents / Resources


2.1 References


1702E Emergency Key Switch

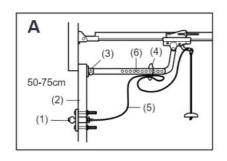


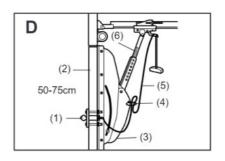


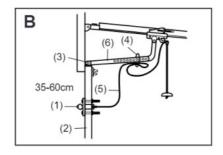

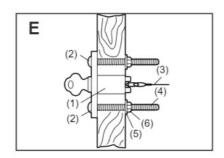

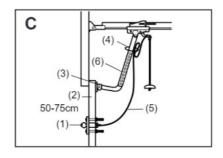

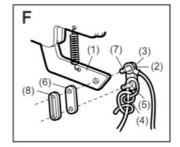

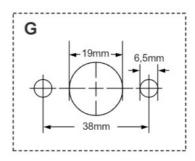

As you proceed with the installation of Model 1702E Outside Quick Release, refer to door types shown in Figures A, B, C and D:

Figure A: One-piece door with horizontal track only

Figure B: One-piece door without track

Figure C: Sectional Door with curved track

Figure D: Canopy and one-piece door with horizontal

and vertical track with "The Chamberlain Arm" installed

Locate the Quick Release on the outside of your garage door (2).

For doors A, B and C, center the Quick Release (1) below the opener door bracket (3). For door style D. locate Quick Release (1) approximately 10cm on either side of the door's centerline.

For one-prece doors without track (B), position lock 35-60cm below top of door For all other door types (A, C and D), position the lock 50-75cm below the top of the door (refer to illustrations). If door construction is metal, refer to special instructions contained in the "NOTE".

Figure E — Install Outside Quick Release:

Fasten template G at marked location. From outside of door, drill a 19mm diameter hole for the lock (1) and two 6,5mm side holes (2) for the 1/4""-20×2-1/2" mounting bolts (4). Drill all holes completely through the door.

Uncoil cable attached to end of tumbler. Guide cable (3) through the 19mm diameter hole from outside the door. Insert lock assembly and position flush with door Insert the two mounting bolts into the side holes from outside of door.

Fasten from the inside with 1/4" washers (§) and hex nuts (6). Tighten nuts securely

NOTE: On a metal door, the template must be positioned so that all the drilled holes will pass through the inside reinforcement stile of the door, if possible.

Figure F — Remove rope from trolley release arm (1). Place free cable loop (2) over one pin of the master link outside bar (3) as shown. Securely tie a loop (4) at free end of release rope and place over second pin in outside bar (5).

Push pin holding cable loop through hole in the release arm of the trolley Push cap (6) onto the pins and into pin notches (7). Be sure cable loop and manual rope are secured to pins. Slide clip-on spring (8) over cap and lock onto pin notches.

Refer to Figures A, B, C and D; use plastic ties (4) to loosely secure the excess cable to door arm.

To Operate the Quick Release: Insert the key into lock and tum clockwise. Remove the key AND tumbler from the lock. Pull firmly on the cabie. Do not pull on the key or tumbler. The outer trolley will disconnect from the inner

trolley so the door can be opened manually.

Trolley sections will reconnect automatically when the opener is started Replace tumbler in the lock. Turn the key counterclockwise. Remove the key.

114A2371 ©1999 All Rights Reserved Printed in Mexico



Documents / Resources



<u>Liftmaster 1702E Emergency Key Switch</u> [pdf] Instructions 1702E Emergency Key Switch, 1702E, Emergency Key Switch, Key Switch, Switch

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.