



LiftMaster 371LM Security Plus Single Button Remote Control Owner's Manual

[Home](#) » [LiftMaster](#) » LiftMaster 371LM Security Plus Single Button Remote Control Owner's Manual 

LiftMaster 371LM Security Plus Single Button Remote Control

 


Only for use with 315MHz Security+™ garage door openers and universal receivers that have a purple "learn" button.

Contents

- [1 Instructions are Described and Illustrated Below](#)
- [2 To Erase All Codes From Motor Unit Memory](#)
- [3 The Remote Control Batteries](#)
- [4 Customer Support](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)


Instructions are Described and Illustrated Below

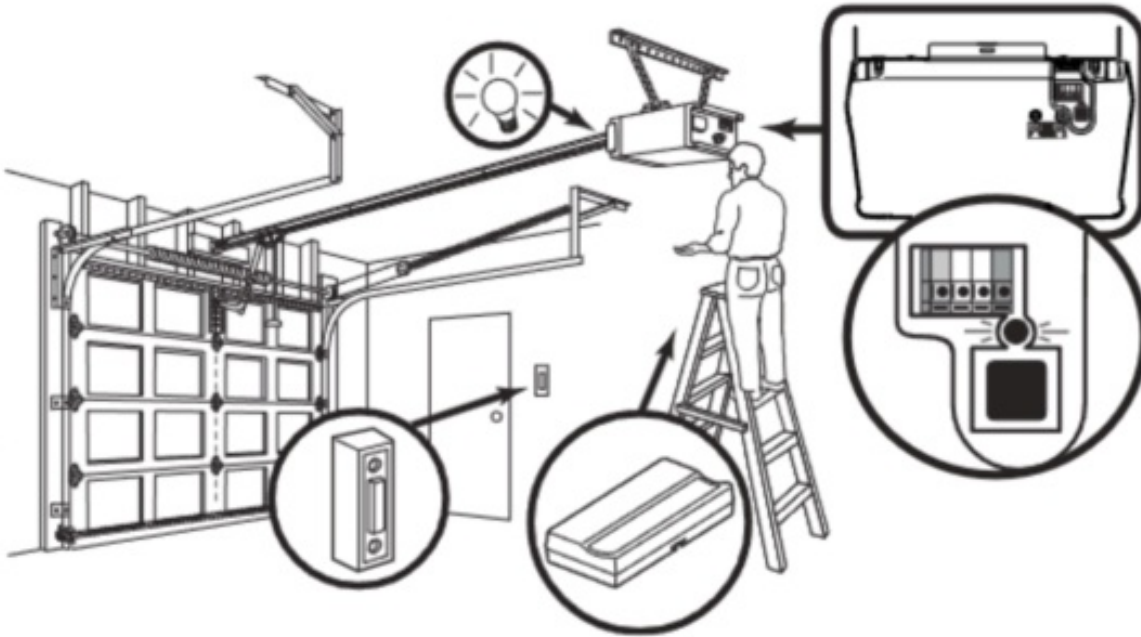

1. Press and release the “learn” button on the motor unit. The learn indicator light will glow steadily for 30 seconds.



 2. Within 30 seconds, press and hold the button on the hand-held remote.

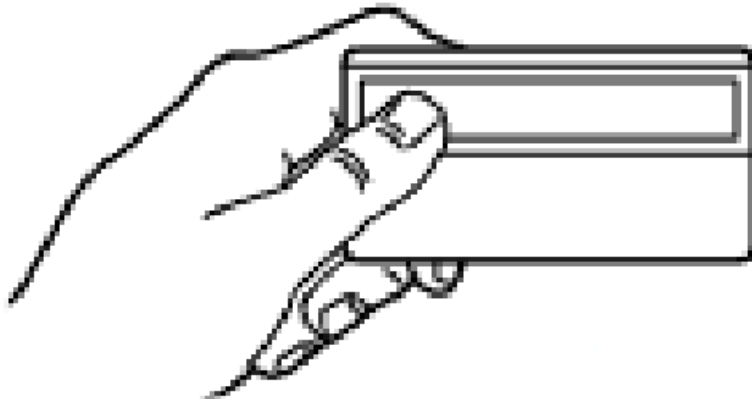

3. Release the button when the motor unit light blinks. It has learned the code. If light bulbs are not installed, two clicks will be heard.



To Erase All Codes From Motor Unit Memory

To deactivate any unwanted remote, first erase all codes:

Press and hold the “learn” button on motor unit until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote or keyless entry you wish to use.



WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- **ALWAYS** keep remote controls out of reach of children. **NEVER** permit children to operate, or play with remote control transmitters.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- **ALWAYS** keep gate or garage door in sight until completely closed. **NEVER** permit anyone to cross path of moving gate or door.

The Remote Control Batteries

 


WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

The lithium batteries should produce power for up to 5 years. To replace, pry open case with visor clip or screwdriver, as shown. Inset batteries positive side up (+). Dispose of old batteries properly.

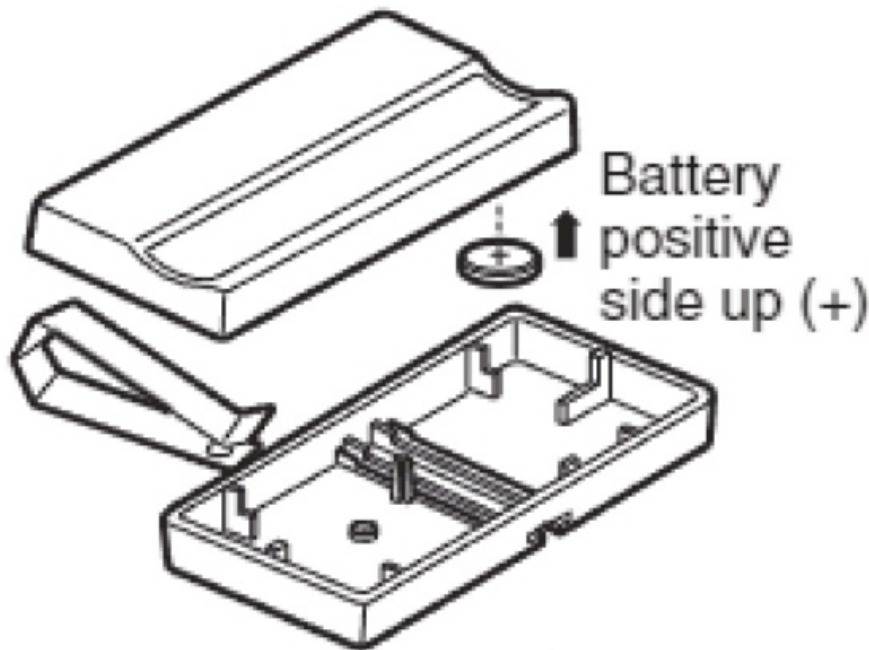

NOTICE: To comply with FCC and or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS. Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Customer Support


FOR SERVICE DIAL OUR TOLL FREE NUMBER:

1-800-528-9131

©2006, Chamberlain Group Inc. All Rights Reserved



Documents / Resources

	<p>LiftMaster 371LM Security Plus Single Button Remote Control [pdf] Owner's Manual 371LM, 371LM Security Plus Single Button Remote Control, Security Plus Single Button Remote Control, Single Button Remote Control, Button Remote Control, Remote Control, Control</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.