



Light Widow FRSLV1 Filter Reading Matte Box System User Manual

[Home](#) » [Light Widow](#) » Light Widow FRSLV1 Filter Reading Matte Box System User Manual 

Contents

- [1 Light Widow FRSLV1 Filter Reading Matte Box System](#)
- [2 FCC STATEMENT](#)
- [3 FCC Radiation Exposure Statement](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Light Widow FRSLV1 Filter Reading Matte Box System



FCC STATEMENT

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: This equipment has been tested and found to comply with the limits for a Cass B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, f not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Documents / Resources

	<p>Light Widow FRSLV1 Filter Reading Matte Box System [pdf] User Manual FRSLV1, 2A8WP-FRSLV1, 2A8WPFRLV1, FRSLV1 Filter Reading Matte Box System, FRSLV1, Filter Reading Matte Box System, Reading Matte Box System, Matte Box System, Box System</p>
---	---