




## Contents [ [hide](#) ]

- [1 LIGHTSHARE B0B4B1BW7W Decorative String Light](#)
- [2 Specification Details](#)
- [3 PRODUCT INTRODUCTION](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 BATTERY WARNING](#)
- [6 TROUBLESHOOTING](#)
- [7 Warranty](#)
- [8 FAQ's](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



## LIGHTSHARE B0B4B1BW7W Decorative String Light

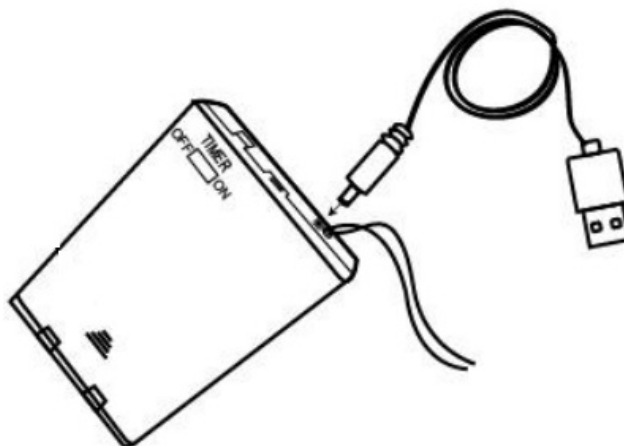

## Specification Details

- **LED Count & Length:** 300 LED lights over approximately 99 ft (30 m) of string.
- **Power & Voltage:** 30 V low-voltage plug-in power adapter.
- **Lighting Modes & Remote:** 9 lighting modes (steady-on, flash, twinkle, sequential, etc.) with remote control and memory function to retain the last used mode after power-off.
- **Usage:** Suitable for both indoor and outdoor decoration.
- **Color Options:** Available in warm white or multicolor depending on the version.

## PRODUCT INTRODUCTION

No need of any other tools to install. Batteries or USB plug-in operated. Simple operation will provide your home with a beautiful decorative string light.

### Power option

- **3XAA Batteries**
- Take the product out of the box.
- Pull off the battery compartment cover and insert 3 “AA” alkaline batteries ( not included )= into the battery compartment.

### Power option 2: USB plug-in

1. Use USB plug-in
2. This USB Plug can plug into smart phone's charger, laptop's charger, USB wall charger, and any other USB charger that come with 5V output to get powered.
  - Smart phone's USB charger USB Wall charger Laptop's USB charger



Smart phone's USB charger



USB Wall charger



Laptop's USB charger

**NOTE:** By plugging in USB, the timer will be reset to original setting. When switch back toWith battery power, the timer will be reset again.

## USE

1. Turn switch to "ON" to be able to activate functions.
2. This unit includes Timer Control function, When you turn the switch to "TIMER", the lights will automatically light up for 6 hours then turn off for 18 hours.
3. To deactivate turn switch to "OFF"
4. Only suitable for indoor use.
5. Bulbs cannot be replaced.
6. Do not connect this light set electrically to another one.
7. Avoid any damage to the isolation of the wiring

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Please read and follow all instructions and warnings both on the instructions and on the product carefully before use.
2. Retain these instructions for future reference.
3. This product is to be used only as intended its use.
4. For indoor use.
5. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
6. Do not secure the wiring of this product with staples or nails, or place on sharp hooks, nails or in a manner that can cut or damage the wire or insulation.
7. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
8. Do not close doors or windows on the product or extension cords as this may damage the wire and insulation.

## **BATTERY WARNING**

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).

- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The battery supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose batteries in a fire • batteries may leak or explode.

## **TROUBLESHOOTING**

1. If the whole set doesn't light up. Please kindly check if the batteries are intalled properly.
2. If one or more of the branches don't light up. Please check each bulb on the unlighted branch has been well welded by toughing slightly, or bending the branch slightly,
3. If the lights get dim. This may be caused by low battery, please try to change the batteries.
4. Any problem not mentioned above or unsolved. please contact us for assistance.

## **Warranty**

Lightshare guarantees that this product is free of defects in material and workmanship, and provides a one-year limited hardware warranty for the product commencing from the date of purchase. Please keep your receipt for proof of purchase. This product is designed for light or decoration usage only. Using this device in any other capacity voids the warranty. The warranty offered covers normal use. Defects or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of Lightshare, are excluded from warranty coverage.

E HOME INTERNATIONAL INC. 725 Old Norcross Rd, Ste D Lawrenceville, GA 30046

Customer Service Line: [888-997-9468](tel:888-997-9468)

[www.ehomeinc.com](http://www.ehomeinc.com) [service@ehomeinc.com](mailto:service@ehomeinc.com)

## **FAQ's**

**Q: Can these string lights be used outdoors?**

A: Yes, they are suitable for both indoor and outdoor decoration, but the adapter should be kept dry.


**Q: Does it remember the last lighting mode used?**

A: Yes, the memory function saves the last mode even after turning off.

**Q: How many lighting modes are available?**

A: There are 9 different lighting effects including steady-on, twinkle, and sequential.

## Documents / Resources

	<a href="#">LIGHTSHARE B0B4B1BW7W Decorative String Light [pdf]</a> Instructions B0B4B1BW7W Decorative String Light, B0B4B1BW7W, Decorative String Light, String Light, Light
---	--

## References

- [User Manual](#)

■ LIGHTSHARE

◆ B0B4B1BW7W, B0B4B1BW7W Decorative String Light, Decorative String Light, Light, LIGHTSHARE, String Light

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

---

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.