




[Home](#) » [LIGHTSHARE](#) » **LIGHTSHARE SSXTSD36B-WW 16Inch Blossom Bonsai Light User Manual** 

## Contents [ [hide](#) ]

- [1 LIGHTSHARE SSXTSD36B-WW 16Inch Blossom Bonsai Light](#)
- [2 INTRODUCTION](#)
- [3 KEY FEATURES](#)
- [4 INSTALL BATTERIES](#)
- [5 INSTALL ELECTRIC ADAPTOR](#)
- [6 USE](#)
- [7 SPECIFICATIONS](#)
- [8 WHAT'S IN THE BOX](#)
- [9 TROUBLESHOOTING](#)
- [10 PROS & CONS](#)
- [11 WARRANTY](#)
- [12 FREQUENTLY ASKED QUESTIONS](#)
- [13 VIDEO – PRODUCT OVERVIEW](#)
- [14 References](#)



**LIGHTSHARE SSXTSD36B-WW 16Inch Blossom Bonsai Light**



## INTRODUCTION

The LIGHTSHARE SSXTSD36B-WW 16-Inch Blossom Bonsai Light is a decorative lighting element that seamlessly combines versatility and elegance, illuminating your space with its delicate charm. This 16-inch bonsai tree is compact and perfect for desktops, tables, and nightstands, boasting 36 warm white LED blossoms. It is perfect for creating a festive atmosphere or a comfortable home decor. This model, designed by LIGHTSHARE, a brand that is renowned for its innovative lighting answers, provides dual power options: a 6V DC adapter (included) or 4 AA batteries (not included), providing versatility for both interior and outdoor use. It is a distinctive choice for everyday ambience or special occasions such as Thanksgiving, Valentine's Day, and Christmas due to its adjustable branches and built-in timer (6 hours on, 18 hours off). This bonsai light, which was introduced to the market for **\$23.74**, offers an exceptional value. It is enclosed in a portable, waterproof, and energy-efficient design. It is a radiant


companion for any season or event, and it was initially available on [date unspecified, based on data].

## **KEY FEATURES**

- 4AA batteries are required to use the battery-operated feature (not included), or a 6V DC 3.6W power adapter as an option
- It is easy to install and portable. The water-resistant iron base even makes it ideal for outdoor use, such as a garden, pool deck table (but the adapter is for indoor use)
- Built-in 24-hour timer operates 6 hours on, 18 hours off.
- Please note, when converting the power options between battery-powered and electricity, the timer will be reset.

## **BATTERY OPERATED WITH ELECTRIC OPTION**

## **INSTALL BATTERIES**

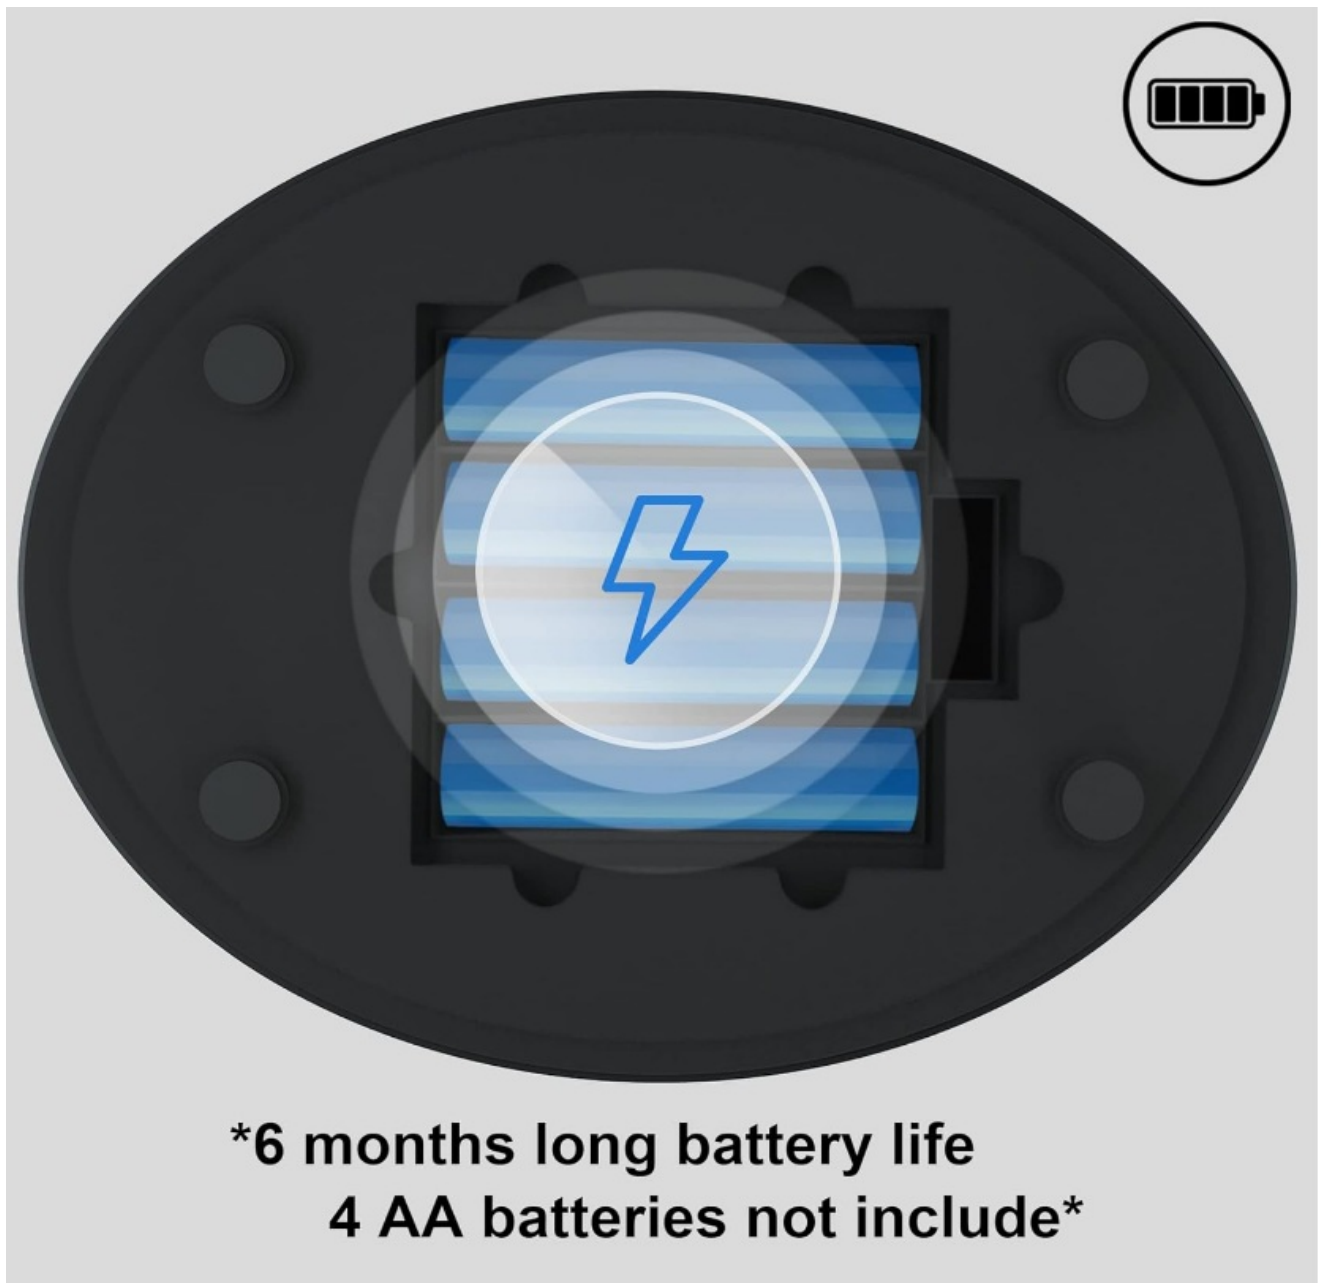

**\*6 months long battery life  
4 AA batteries not include\***

1. Need a screw driver to install. Four AA batteries will give you a lovely table light.
2. Take the product out of the box.
3. Pull off the battery compartment cover with a cross screwdriver and insert 4 “AA” alkaline batteries (not included) into the battery compartment.

## **INSTALL ELECTRIC ADAPTOR**

- Remove the rubber cap from the adaptor plug on the base of the tree.
- Connect a 6VDC 3.6W adaptor (only for indoor use).

## **NOTE:**

When using the electric adaptor, the tree can not be used outdoors, and the time

function is restart time

## USE

- Press the ON / OFF / TIMER switch (I = ON, O=OFF I|=TIMER) on the base of the tree to operate the lights.



- Press the switch to TIMER if you want the lights to come on each day. The lights will glow for 6 hours, then automatically go off, then the next day they will come on and go off at the exact same time you set them for. It is 6 hours on, 18 hours off.
- Press the switch to ON to turn the lights on manually.
- Available to DIY the branch shape according to your demand.

# SPECIFICATIONS

Product Name	Lightshare 16-Inch 36LED Cherry Blossom Bonsai Light
Price	\$23.74
Brand	LIGHTSHARE
Model Number	SSXTSD36B-WW
Dimensions	4.9" D x 7.9" W x 14.5" H
Color	Warm White
Material	Plastic (with metal base)
Item Weight	1.6 lbs
Power Source	Battery (4AA, not included) or DC adapter (6V, 3.6W included)
Voltage	6 Volts
LED Count	36 LED lights
Light Type	Cherry Blossom
Special Features	Built-in timer (6h on/18h off), adjustable branches, waterproof (tree only), energy efficient
Base Material	Metal (water resistant for outdoor placement, adapter for indoor use only)
Seasons	All Seasons
Occasions	Christmas, Birthday, Valentine's, Easter, Anniversary, Thanksgiving, Wedding
Usage Locations	Indoor and outdoor (covered), ideal for table, bar, room, office, balcony, pool deck

<b>Design Appeal</b>	Bonsai-style with flexible shaping; romantic, festive, and handmade aesthetic
<b>Installation</b>	Easy to assemble and portable
<b>Country of Origin</b>	China
<b>Discontinued</b>	No
<b>Shade Color &amp; Material</b>	White, metal
<b>Notable Use</b>	Works as a night light, decorative accent, or festive piece for daily and holiday ambiance
<b>User Note</b>	Switching power sources resets the timer



WEIGHT: 1.7 LB

# WHAT’S IN THE BOX

- Bonsai Light Lamp
- User Manual

# TROUBLESHOOTING

Issue	Possible Cause	Solution
Light won’t turn on	Power source not connected properly	Check the adapter connection or replace AA batteries
Timer not working	Power switch toggled manually	Reset the timer and let it auto-cycle
Flickering or dim lights	Low battery power or poor contact	Replace batteries and ensure correct polarity
Cannot shape branches	Branches are too stiff or cold	Warm slightly and bend gently to the desired shape
The adapter gets warm	Normal during extended use	Unplug when not in use for safety
The tree won’t stand steady	Uneven placement or loose base	Place on flat surface and tighten base connection
The timer resets randomly	Switching between power modes	Avoid frequent toggling; set timer once after a power change
Lights stay on past 6 hours	The timer is not engaged properly	Reset by turning off and switching back on
The adapter is not powering the tree	Faulty adapter or internal wiring issue	Test with new adapter or switch to battery mode
LED bulbs appear dull	Dust buildup or ageing batteries	Clean LED surface and install fresh batteries



## PROS & CONS

### PROS

- Dual power source: battery or adapter
- Built-in 6H/18H timer for hassle-free use
- Compact, elegant design perfect for small spaces
- Waterproof bonsai structure for indoor/outdoor décor
- Adjustable branches for custom styling

### CONS

- Batteries are not included in the package
- The timer resets when switching power sources
- The adapter is not rated for outdoor use
- Limited brightness for large areas
- No remote control included

### WARRANTY

The LIGHTSHARE SSXTSD36B-WW Blossom Bonsai Light includes a **1-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal, intended use. It excludes damage from misuse, water exposure to the adapter, unauthorised modifications, or mishandling. Keep your proof of purchase and product packaging to facilitate any warranty claim. LIGHTSHARE is known for responsive customer service and usually resolves issues within 24 hours of contact.

### FREQUENTLY ASKED QUESTIONS

What are the power options available for the LIGHTSHARE SSXTSD36B-WW 16-Inch Bonsai Light?

The LIGHTSHARE SSXTSD36B-WW model can be powered either by 4AA batteries (not included) or through the included 6V DC 3.6W adapter for plug-in use.

Is the LIGHTSHARE SSXTSD36B-WW Cherry Blossom Light waterproof?

The bonsai tree itself is water-resistant, suitable for outdoor use, but the power adapter is for indoor use only.

What type of LED lights are included in the LIGHTSHARE SSXTSD36B-WW model?

This model comes with 36 warm white LED lights arranged across flexible cherry blossom-style branches for a cozy, festive glow.

Why is my LIGHTSHARE SSXTSD36B-WW Bonsai Light not turning on with batteries?

Ensure all 4 AA batteries are inserted correctly with proper polarity. Check that the battery compartment is clean and the switch is turned ON.

What should I do if the LIGHTSHARE SSXTSD36B-WW timer isn't working properly?

The timer resets every time you switch power sources between battery and adapter. To re-enable the timer, restart the unit and leave it in your preferred mode for at least 24 hours.

Why do the lights on my LIGHTSHARE SSXTSD36B-WW tree flicker or dim when using batteries?

This often indicates low battery power. Replace all 4 AA batteries with fresh ones to restore consistent brightness.

What should I check if the LIGHTSHARE SSXTSD36B-WW Bonsai Light doesn't

turn on using the adapter?

Confirm the adapter is firmly plugged into a working outlet and securely connected to the light. Check the outlet with another device to rule out power issues.

## VIDEO – PRODUCT OVERVIEW

<https://manuals.plus/wp-content/uploads/2025/05/LIGHTSHARE-SSXTSD36B-WW-16Inch-Blossom-Bonsai-Light-User-Manual.mp4>

## References

- [User Manual](#)

📁 LIGHTSHARE

🔍 16Inch Blossom Bonsai Light, B00KAS8G26, LIGHTSHARE, LIGHTSHARE SSXTSD36B-WW, SSXTSD36B-WW, user manual

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.