



**Contents** [ [hide](#) ]

- [1 LIGHTSHARE XTHS5FT-RGB Cherry Blossom Lighted Tree](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)



## **LIGHTSHARE XTHS5FT-RGB Cherry Blossom Lighted Tree**



## INTRODUCTION

Enhance the ambience of your festivities with the LIGHTSHARE XTHS5FT-RGB Cherry Blossom Lighted Tree, a 5-foot LED display that is sure to impress. This tree provides a customizable experience that is suitable for any occasion, holiday, or emotion, thanks to its flexible, lifelike branches and 16 colour-changing modes. This cherry blossom tree is a favourite among home decorators and event coordinators, as it is manufactured by LIGHTSHARE, a brand that is renowned for its ability to combine functionality with creativity. Its RGB LED lights, which are available in warm white, create a breathtaking ambience in both indoor and covered outdoor spaces, whether for birthdays, weddings, Christmas, or Thanksgiving. It is effortless to assemble, store, and relocate, weighing only 3.53 pounds and priced at approximately **\$62.99**. This model has maintained its status as a top choice for individuals who desire a décor that is both elegant and whimsical since its introduction on June 10, 2015. Incorporate a touch of enchantment, beauty, and light into your space with this crowd-pleasing centrepiece.

## SPECIFICATIONS

<b>Product Name</b>	Lightshare Cherry Blossom Lighted Tree 5 Feet, RGB with Remote Control
<b>Price</b>	\$62.99
<b>Brand</b>	LIGHTSHARE
<b>Model Number</b>	XTHS5FT-RGB
<b>Dimensions</b>	5.5" D x 39.4" W x 3.5" H (5 ft tall)
<b>Material</b>	Metal
<b>Color</b>	RGB (16 colour-changing modes)
<b>Weight</b>	3.53 lbs
<b>Item Package Quantity</b>	1
<b>LED Type</b>	Prelit cherry blossom lights with warm white & RGB color-changing LEDs
<b>Remote Control</b>	Yes – for color and lighting mode control
<b>Branches</b>	Flexible for custom decoration
<b>Power Supply</b>	Corded
<b>Usage Locations</b>	Safe for indoor and sheltered outdoor use
<b>Recommended Uses</b>	Decorations for Farewell, Christmas, Birthday, Thanksgiving, Wedding & Engagement
<b>Seasons</b>	All Seasons

<b>Special Features</b>	Collapsible from the middle for easy storage, remote controlled, highly customizable
<b>Design Appeal</b>	Festive, creative, ambient glow; popular for adding magic to parties , holidays, and room corners
<b>Country of Origin</b>	China
<b>Date First Available</b>	June 10, 2015
<b>Support</b>	24-hour customer service for queries or concerns

## WHAT'S IN THE BOX

- Blossom Lighted Tree
- Remote Control
- User Manual




## FEATURES

- **Ideal Height:** It is the ideal dimension for indoor decoration, standing at a height of 5

feet.

- **Flexible Branches:** Branches can be bowed and shaped to create a personalized display.
- **RGB Lighting Modes:** Features 17 color-changing modes that are commanded by a remote: RGB color-changing LED lights.

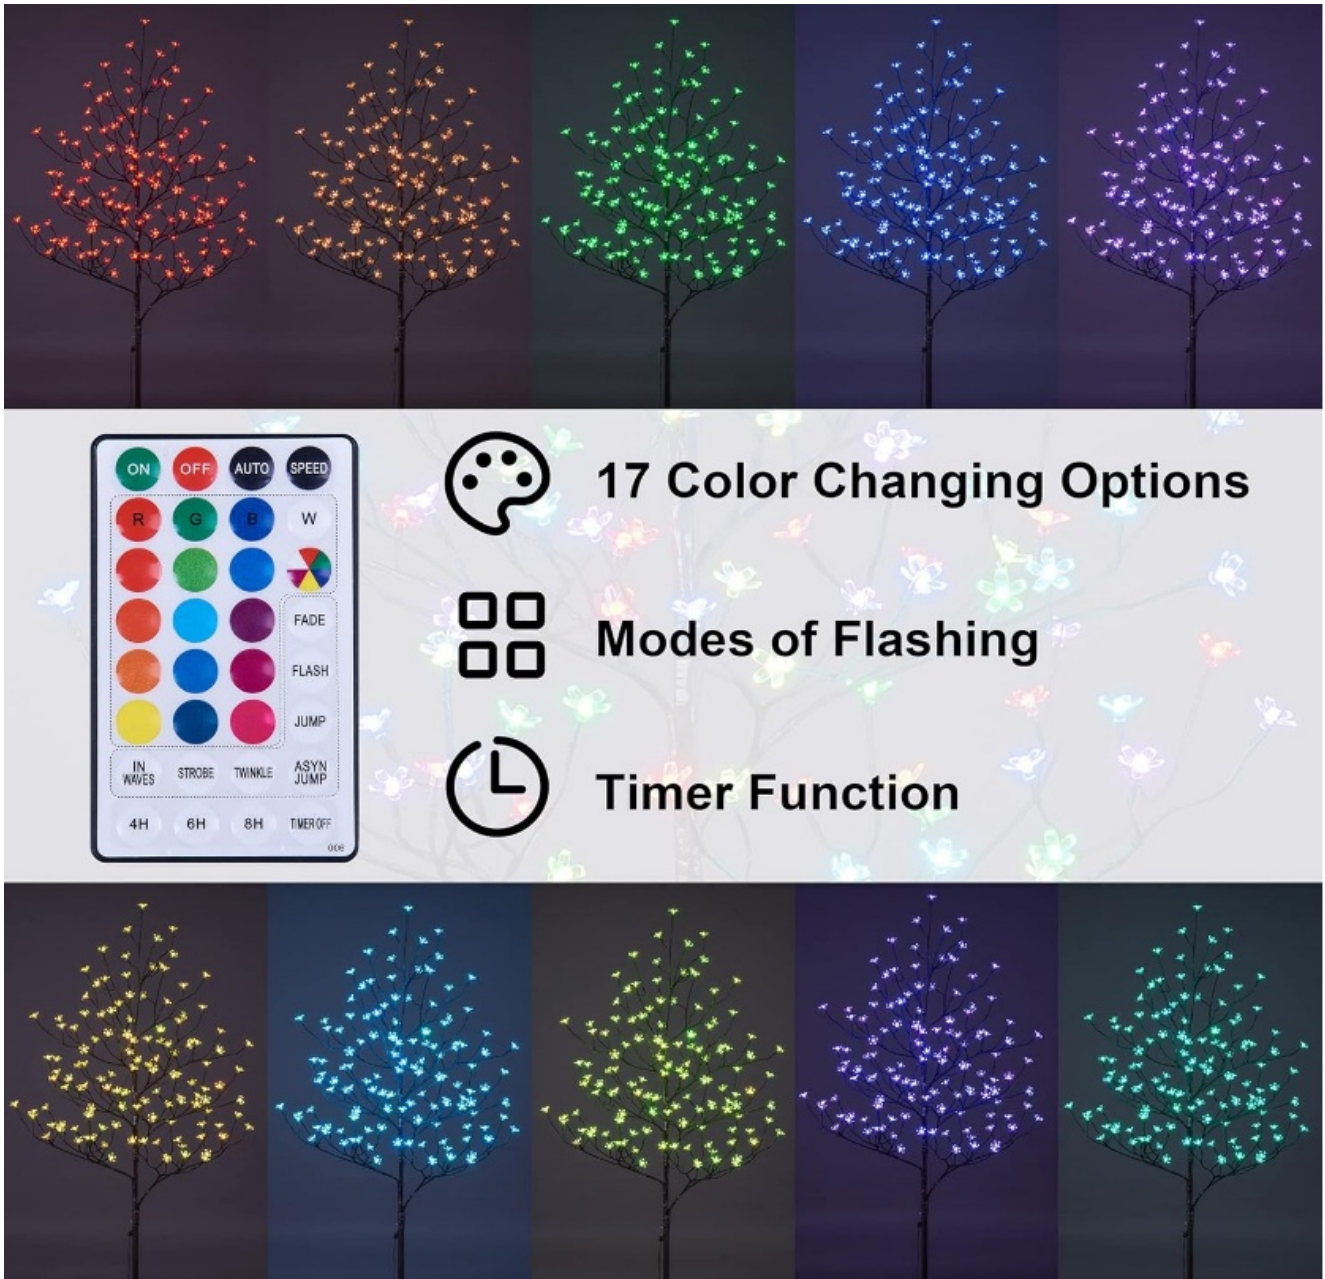

- **Warm White Option:** A warm white light option is included to create a comfortable, elegant ambiance.
- **Prelit Design:** Equipped with integrated LED lights, eliminating the necessity for additional wiring.
- **Lightweight Design:** Weighing only 3.53 pounds, it is effortless to relocate and adjust.

- **Sturdy Metal Frame:** The sturdy metal construction guarantees stability and durability.
- **Compact Dimensions:** An approximate 5.5" D x 39.4" W x 3.5" H footprint, which is well-suited for compact spaces or corners.
- **Remote Control Included:** Effortlessly change between illumination modes and colors from a distance.
- **Indoor and Sheltered Outdoor Use:** Safe for indoor and covered outdoor environments.
- **Versatile Decoration:** Suitable for a variety of occasions, including anniversaries, birthdays, Christmas, Thanksgiving, and other celebrations.
- **Knock-Down Design:** Allows for effortless stowage and transportation by separating at the midpoint.
- **Energy-Efficient LEDs:** Utilizes low-energy LED lights to provide enduring illumination.
- **Festive and Creative:** Enhances the festive and enchanting ambiance of any space or event.
- **Brand Reliability:** Produced by LIGHTSHARE, a company renowned for its innovative decorative lighting.





## SETUP GUIDE

- **Unbox Carefully:** Remove the tree and remote control from the packaging with care.
- **Inspect Components:** Verify that there are no missing or damaged components.
- **Construct the Tree:** Securely join the two halves of the tree.
- **Tree Positioning:** Position the tree on a horizontal, stable surface in a sheltered outdoor area or indoors.
- **Shape Branches:** Bend and arrange the malleable branches to achieve the desired appearance.
- **Connect Power:** Connect the tree's power cord to an appropriate electrical receptacle.
- **Turn on the Tree:** Utilize the switch or remote to activate the lights.
- **Choose a Lighting Mode:** Choose from 17 colour-changing modes or select a fixed

color.

- **Brightness Control:** Utilise the remote control to regulate the brightness or deactivate the lighting.
- **Set Timer:** Set the timer function if it is available to ensure automatic on/off with your model.
- **Prevent Overcrowding:** Ensure that the tree has an adequate amount of space to allow for ventilation and visibility.
- **Keep Away from Water:** If used outdoors, avoid exposure to precipitation or rain.
- **Secure Power Cable:** Arrange the cable to prevent tripping hazards.
- **Remote Control Range Test:** Guarantee that the remote operates within the specified range.
- **Safely Store the Remote:** When the remote is not in use, it should be stored in a secure location.

## CARE & MAINTENANCE

- **Unplug Before Cleaning:** Before cleansing the tree, ensure that the power is disconnected.
- **Dust Consistently:** Utilize a soft cloth or duster to eliminate dust from branches and lighting.
- **Prevent Moisture:** Ensure that the tree is kept dry and refrain from directly applying water or cleansers to it.
- **Gently Clean:** If required, use a dry or barely damp cloth to wipe.
- **Inspect Lights Periodically:** Verify that all LEDs are functioning correctly.
- **Replace Damaged Parts:** If necessary, contact the manufacturer to obtain replacement components.
- **Proper Storage:** Disassemble and store in the original packaging or a sturdy package.
- **Handle Branches Gently:** To prevent wiring damage, handle branches delicately and avoid sharp bends.
- **Inspect Power Cord:** Inspect the power cord for fraying or damage on a regular basis.
- **Prevent Overheating:** Do not leave the tree on for extended periods.
- **Remote Protection:** Ensure that the batteries in the remote control are in good



condition and replace them as necessary.

- **Avoid Flammable Materials:** Position the tree at a distance from paper or draperies.
- **Avoid Direct Rain Exposure:** Avoid exposure to direct rain or severe weather; use only indoors or in sheltered areas.
- **Handle with Caution:** Prevent lowering or rough handling during the setup or storage process.
- **Store Remote Safely:** Keep the remote in a dry, secure place when not in use.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Tree does not light up	Power cord not properly plugged in	Check outlet and connection; ensure adapter is securely attached
Remote not working	Battery dead or not aligned correctly	Replace or adjust battery in remote
Only one color showing	Incorrect mode selected	Use remote to cycle through RGB modes
Flickering lights	Loose connection or unstable power source	Reconnect plug and test in a stable outlet
Branches won't hold shape	Not fully adjusted after unboxing	Gently bend and shape branches as needed
Tree leans or wobbles	Base not placed on level surface	Ensure flat setup surface; add weight to base if needed
LED color looks dim	Bright ambient lighting	Test in a darker room for full effect
Lights turning off randomly	Adapter overheating or faulty wiring	Let it cool, then test again; replace adapter if necessary

Issue	Possible Cause	Solution
Color modes won't change	Remote sensor blocked	Point remote directly at receiver within range
Tree not storing compactly	Not disassembled at midpoint	Separate from center as per instructions before storing

## PROS & CONS

### PROS

- Vibrant 16-color RGB lighting with remote control
- Lightweight and easy to store with knock-down design
- Flexible branches for customizable shaping
- Ideal for year-round events and holidays
- Energy-efficient and safe for indoor/sheltered outdoor use

### CONS

- Not suitable for fully exposed outdoor areas
- Remote may lose sensitivity over distance
- Limited brightness for large open spaces
- Base may require extra support on uneven surfaces
- No built-in timer or dimmer feature

## WARRANTY

The LIGHTSHARE XTHS5FT-RGB Cherry Blossom Tree is covered by a **1-year** limited manufacturer's warranty. This warranty protects against defects in materials and workmanship under normal usage. It does not cover damage due to misuse, exposure to weather, or unauthorized modifications. Retain your receipt and original packaging for warranty service. For any warranty claims or product assistance, LIGHTSHARE's customer support typically responds within 24 hours.

## FREQUENTLY ASKED QUESTIONS

What is the total height of the LIGHTSHARE XTHS5FT-RGB Cherry Blossom Lighted Tree?

The LIGHTSHARE XTHS5FT-RGB model stands 5 feet tall, making it an ideal centerpiece for decorative indoor and sheltered outdoor spaces.

What type of lighting effects are available with the LIGHTSHARE XTHS5FT-RGB model?

It features a mix of RGB color-changing lights and warm white LEDs, giving you versatile lighting for various moods and occasions.

Is the LIGHTSHARE XTHS5FT-RGB tree suitable for outdoor use?

This tree is safe for indoor or sheltered outdoor use it should not be left in exposed weather conditions like heavy rain or snow.

What is the weight of the LIGHTSHARE XTHS5FT-RGB model?

The tree weighs approximately 3.53 pounds, making it lightweight and easy to move and install.

How flexible are the branches on the LIGHTSHARE XTHS5FT-RGB Cherry Blossom Tree?

The branches are designed to be flexible, allowing you to shape them creatively for the look you want.

What should I do if my LIGHTSHARE XTHS5FT-RGB tree doesn't respond to the remote?

First, ensure the remote has fresh batteries. Then, point it directly at the receiver. If it still doesn't respond, check the power connection and replace the remote battery if necessary.

Why aren't the lights on my LIGHTSHARE XTHS5FT-RGB tree turning on?

Make sure the tree is plugged into a functioning power outlet, and the adapter is properly connected. If it still doesn't light up, try unplugging and reconnecting the adapter securely.

## VIDEO – PRODUCT OVERVIEW

### References

- [User Manual](#)

■ LIGHTSHARE

🔍 B075M94T6F, Cherry Blossom Lighted Tree, LIGHTSHARE, LIGHTSHARE XTHS5FT-RGB, user manual, XTHS5FT-RGB

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.