


LIGHTWARE MMX2-4×1-H20 HDMI 2.0 Switcher High-Definition Interface User Guide

[Home](#) » [LIGHTWARE](#) » LIGHTWARE MMX2-4×1-H20 HDMI 2.0 Switcher High-Definition Interface User Guide 

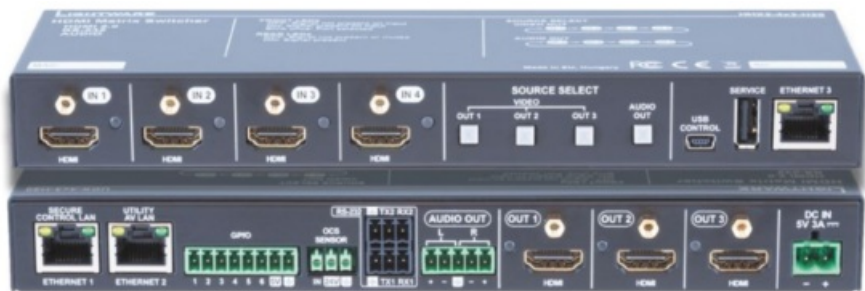

Quick Start Guide
MMX2-4×1-H20

Contents

- [1 Important Safety Instructions](#)
- [2 Button Functionality](#)
- [3 Port Diagram \(MMX2-4×3-H20\)](#)
- [4 OCS \(Occupancy\) Sensor](#)
- [5 GPIO \(General Purpose Input/Output Ports\)](#)
- [6 Audio Cable Wiring Guide](#)
- [7 RS-232 Port](#)
- [8 Typical Application Diagram](#)
- [9 Further Information](#)
- [10 Contact Us](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Important Safety Instructions

Please read the supplied safety instruction document before using the product and keep it available for future reference.

Introduction

Lightware's MMX2 switcher series enhances and extends the possibilities of a meeting room and allows meeting participants to easily use their own devices such as laptops. MMX2-H20 series models offer 4K signal switching with numerous control interfaces (secure Ethernet, OCS sensor, GPIO, Audio, and RS-232 options). The device is the right choice for customers who need cost-effective 4×3 and 4×1 HDMI-only switchers with audio de-embedding, GPIO, Ethernet, and RS-232 but without USB transmission. MMX2-4×3-H20.

Front View (MMX2-4×3-H20)



1. HDMI input port for sources.

The applied cable shall not be longer than 5m (22AWG) when signal resolution is 4K.
Use cables certified for HDMI 2.0 (3x6Gbps) applications.

2. Input status

LED on: there is a valid signal on the port
LED blink (once): the port is selected by a button press
LED off: there is no valid signal on the port

3. Front panel buttons

For more details about the buttons see the Button Functionality section. When LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.

4. USB mini-B port

Reserved for service functions.


5. USB-A port

Reserved for future developments.

6. Configurable

Ethernet port RJ45 connector for configurable 100 Base-T Ethernet communication.

Front View (MMX2-4×3-H20)

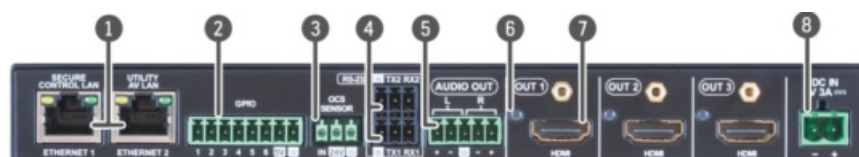


1. Ethernet ports	RJ45 connectors for 100Base-T Ethernet omunication.	5
2 GPIO port	8-pole Phoenix ® connector for configurable general purpose. Max. input/output voltage is 5 V, see the details on the next page	6
3 OCS sensor	3-pole Phoenix ® connector (male) for connecting an occupancy sensor. The port provides 24V output voltage (50mA).	7
4 RS-232 port	3-pole Phoenix ® connector for bi-directional RS-232 communication.	8

Button Functionality

MMX2-4×1-H20

Use IN1, IN2, IN3, or IN4 button for selecting the video source to the HDMI output.

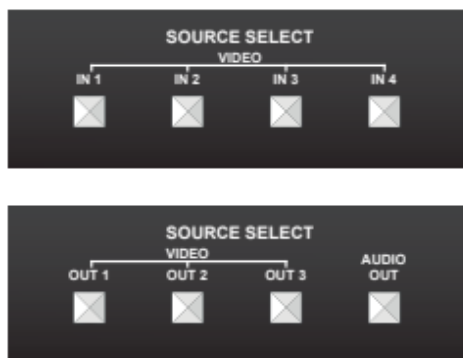


MMX2-4×3-H20


Use the OUT1, OUT2, or OUT3 button for selecting the video source for the specific output. Push OUT1 to select the video input for the HDMI OUT1 port (OUT2 for HDMI OUT2 and OUT3 for HDMI OUT3). The sequence of each output button is the following: OUT 1



Use the **AUDIO OUT** button for switching the audio source to the analog audio output. The sequence is the same as above.

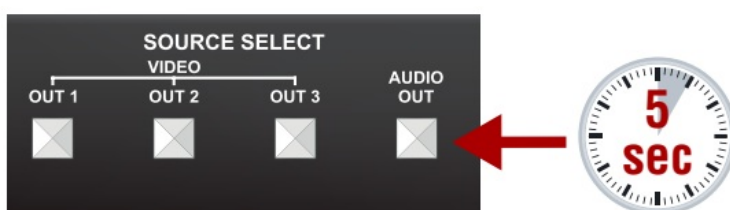


Setting a Dynamic IP Address (DHCP)

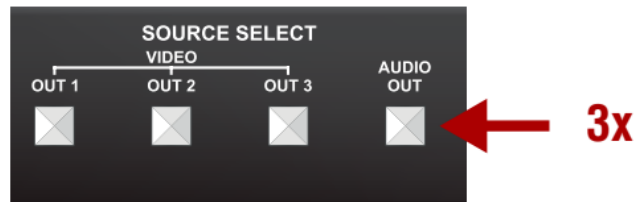

1. Keep the button on the right (AUDIO OUT on MMX2-4×3-H20; IN4 on MMX2-4×1-H20 model) button pressed for 5 seconds; all front panel LEDs start to blink.
2. Release the button, then press it 3 times quickly. DHCP is now enabled.

Restore the Factory Default Settings

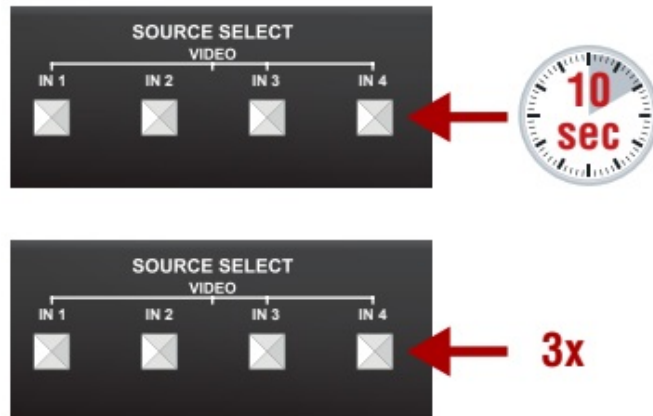

1. Keep the button on the right (AUDIO OUT on MMX2-4×3-H20; IN4 on MMX2-4×1-H20 model) pressed for 10 seconds.
2. If the LEDs blink fast, release the button, press it again 3 times quickly, then the device restores the factory default settings and reboots.

Lock/Unlock Buttons

Press the left and right buttons together (within 100 ms) (IN1 and IN4 buttons in MMX2-4×1-H20 model, OUT1 and AUDIO OUT on MMX2-4×3-H20 model) to disable/ enable front panel buttons; front panel LEDs blink 4 times when locking/ unlocking.

Software Control – Using Lightware Device Controller (LDC)


The device can be controlled from a computer using the Lightware Device Controller software. The application is available at www.lightware.com, install it on a Windows PC or a macOS and connect to the device via LAN.




Firmware Update

Lightware Device Updater v2 (LDU2) is an easy and comfortable way to keep your device up-to-date. Establish the connection via Ethernet. Download and install LDU2 software from www.lightware.com where you can find the latest firmware package as well.

Box Contents

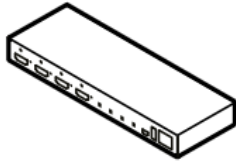


MMX2 switcher

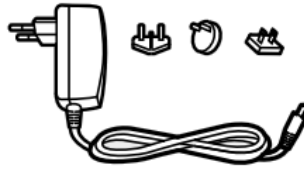


5V DC power adaptor




Phoenix Combicon®
3-pole flat connector *

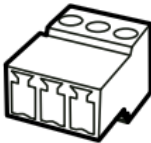

Phoenix Combicon®
3-pole male connector

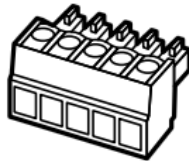

Phoenix Combicon®
5-pole connector

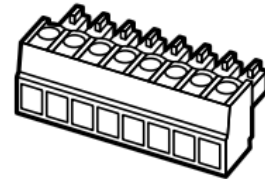

Phoenix Combicon®
8-pole connector




M3x6 flat head screw
for mounting (2x)



Safety and warranty info,
Quick Start Guide

* 2 pcs. for MMX2-4×3-H20 and 1 pc. for MMX2-4×1-H20 model (for RS-232 port)


Connecting Steps (example for MMX2-4×3-H20)

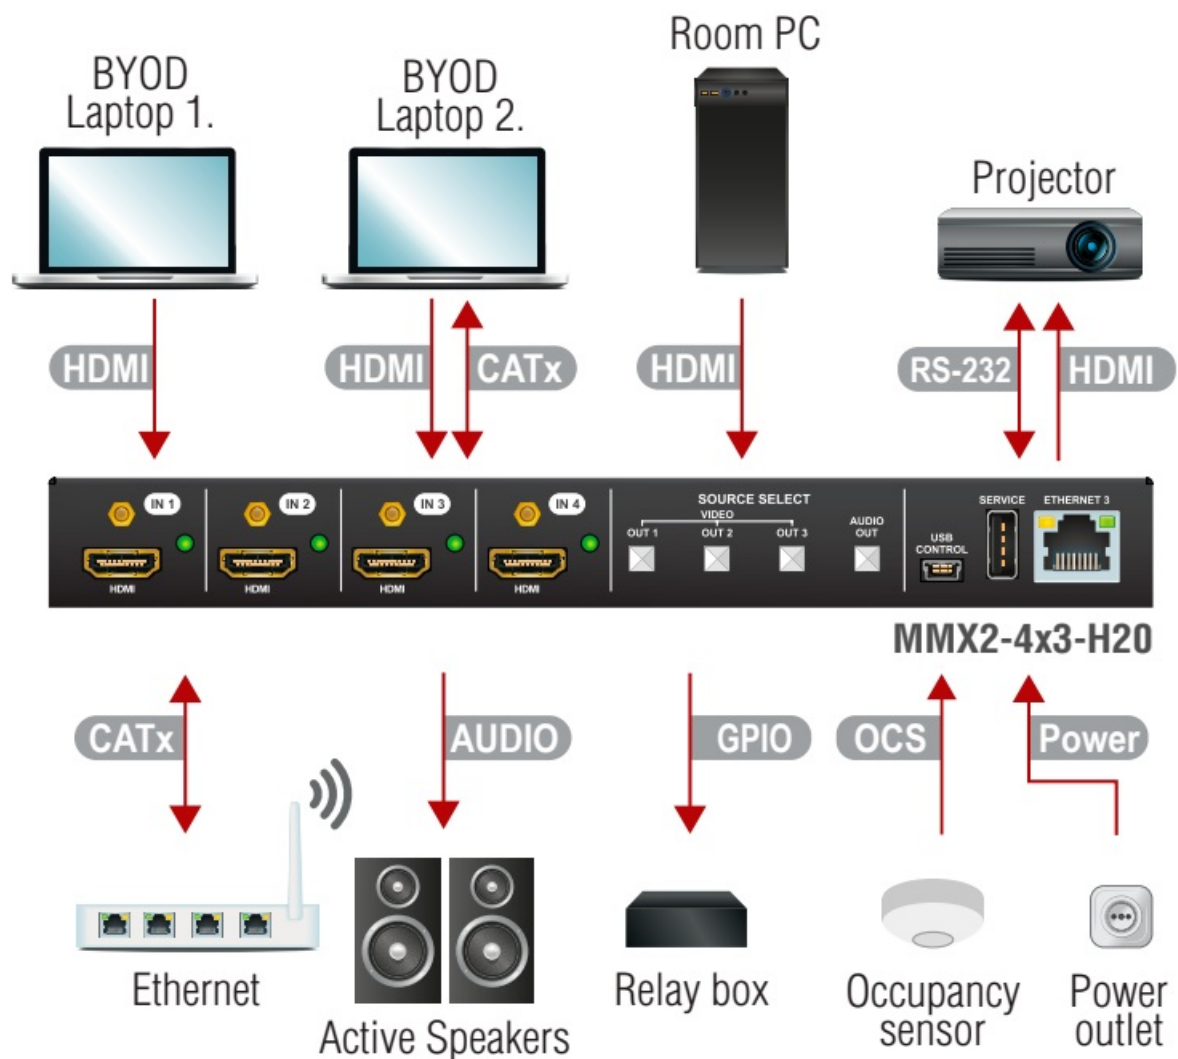

HDMI	Connect an HDMI source (e.g. BYOD laptop or room PC) to the HDMI input port.
CATx	Connect the Ethernet port to a Local Network Switch to provide an Ethernet connection for device configuration and/or for a source device (only on MMX2-4x3-H20).
CATx	Connect the switcher to an Ethernet Ethernet port to access the local network.
HDMI	Connect an HDMI sink (e.g projector) to the HDMI output port.
RS-232	Optionally connect a controller/controlled device (e.g. projector) to the RS-232 port.
Audio	Optionally connect an audio device (e.g. active speakers) to the analog audio output port by an audio cable.
GPIO	Optionally connect a device (e.g. Relay box) to the GPIO port.
OCS	Optionally connect an occupancy sensor to the OCS port.
Power	Connect the external power supply to the AC power socket and then to the switcher unit.


i Powering the device is recommended as the final step.

Port Diagram (MMX2-4x3-H20)

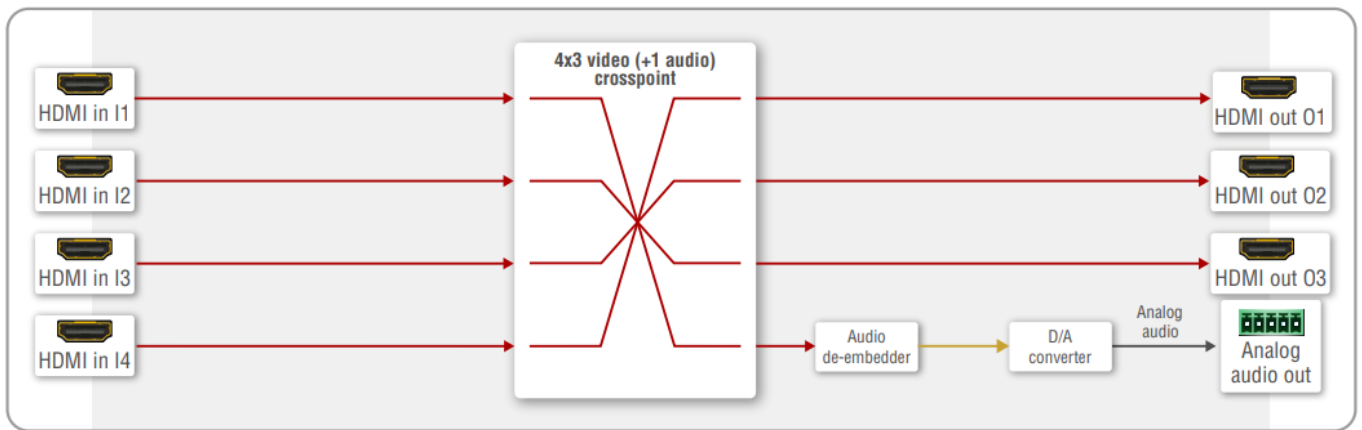

Mounting the Device (with optionally available accessory)

The below example demonstrates the application of the UD Kit double accessory (to order mounting accessories please contact sales@lightware.com):

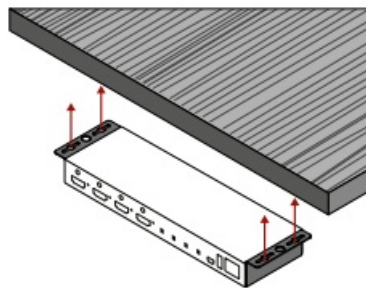

! Using different (e.g. longer) screws may cause damage to the device.

i The transmitter is half-rack-sized.

Factory Default Settings

The settings can be restored by front panel buttons as written on the previous page or by software tools. The factory default values are the following:

IP address	Dynamic (DHCP is enabled)
Hostname	FlightAware-<serialno>
Video Crosspoint (MMX2-4×3-H20)	I1@O1, I2@O2, I3@O3
Video Crosspoint (MMX2-4×1-H20)	I1@O1
HDCP mode (output)	Auto
Signal type	Auto
Emulated EDID	F47 – (Universal HDMI with PCM audio)
Analog audio output	I1 is selected
Analog audio output levels	Volume (dB): 0.00; Balance: 0 (center)
Audio Autoselect	Follow video O1
RS-232 port setting	9600 BAUD, 8, N, 1
RS-232 serial over IP	Enabled
HTTP, HTTPS	Enabled
HTTP, HTTPS authentication	Disabled

OCS (Occupancy) Sensor

The switcher is supplied with a 3-pole Phoenix® connector (male) for connecting an OCS sensor.



Connector Pin Assignment

Pin nr	
1	input with logic low/high level
2	24V (max 50mA)
3	ground

Signal Levels

The signal levels for the Pin 1	Input voltage (V)	Max. current (mA)
Logic low level	0 – 0.8	30
Logic high level	5-Feb	18



The occupancy sensor connector and GPIO port are not compatible with each other because of the voltage level difference, please do not connect them directly.

GPIO (General Purpose Input/Output Ports)

The device has seven GPIO pins which operate at TTL digital signal levels and can be set to high or low levels (Push-Pull). The direction of the pins can be input or output (adjustable).

Connector Pin Assignment



Pin nr	
6-Jan	configurable
7	5V (max. 500mA)
8	ground

Signal Levels

	Input voltage (V)	Output voltage (V)	Max. current (mA)
Logic low level	0 – 0.8	0 – 0.5	30
Logic high level	5-Feb	4.5 – 5	18

Plug pin assignment 1-6: Configurable, 7: 5V (max. 500 mA); 8: Ground



The recommended cable for the connectors is the AWG24 (0.2 mm² diameters) or the generally used 'alarm cable' with 4×0.22 mm² wires.



The maximum total current for the six GPIO pins is 180 mA, the max. supported input/output voltage is 5V.

Audio Cable Wiring Guide

The device is built with 5-pole Phoenix output connectors. See below a few examples of the most common assembling cases.
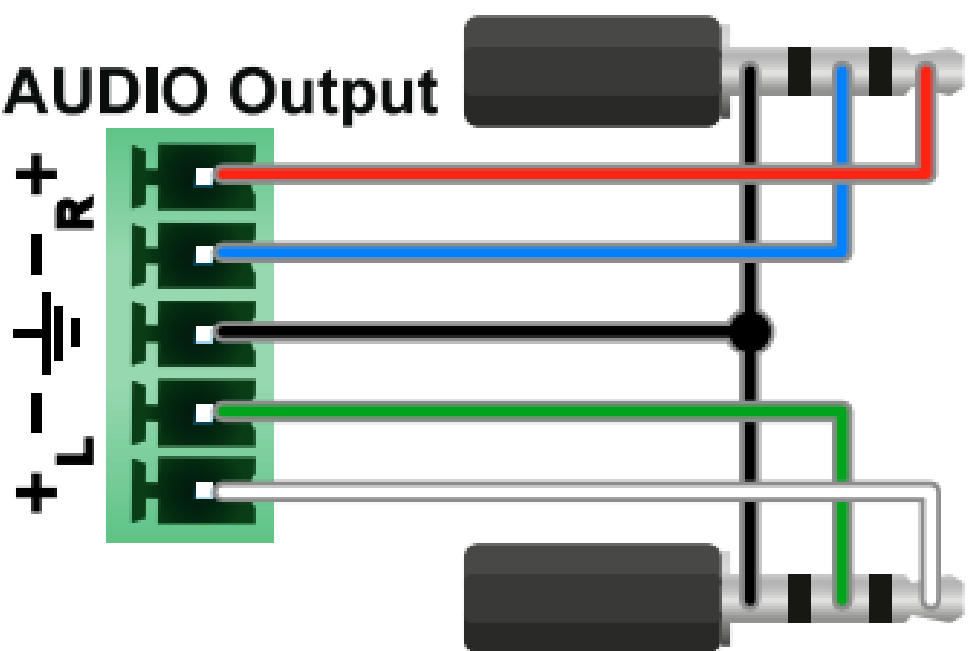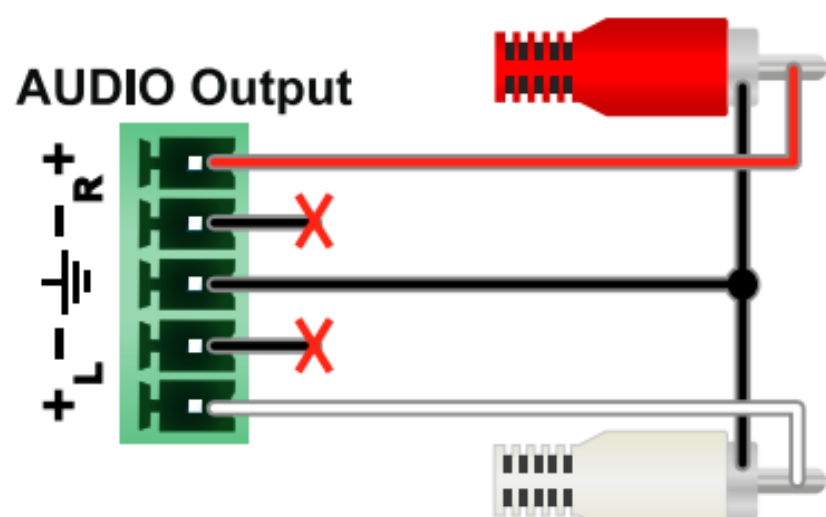
<div>Balanced output to balanced input Phoenix – 2x6.3 (1/4") TRS</div>	
<div><div>AUDIO Output</div></div>	
<div>Balanced output to an unbalanced input Phoenix – 2x RCA</div>	
<div><div>AUDIO Output</div></div>	

RS-232 Port



The switcher provides a 3-pole Phoenix connector for bi-directional serial communication. Connector Pin Assignment The switcher provides a 3-pole Phoenix connector for bi-directional serial communication.


Connector Pin Assignment

Pin nr.	Function
1	ground
2	TX data
3	RX data

Signal Levels

Logic low level
Logic high level

Typical Application Diagram

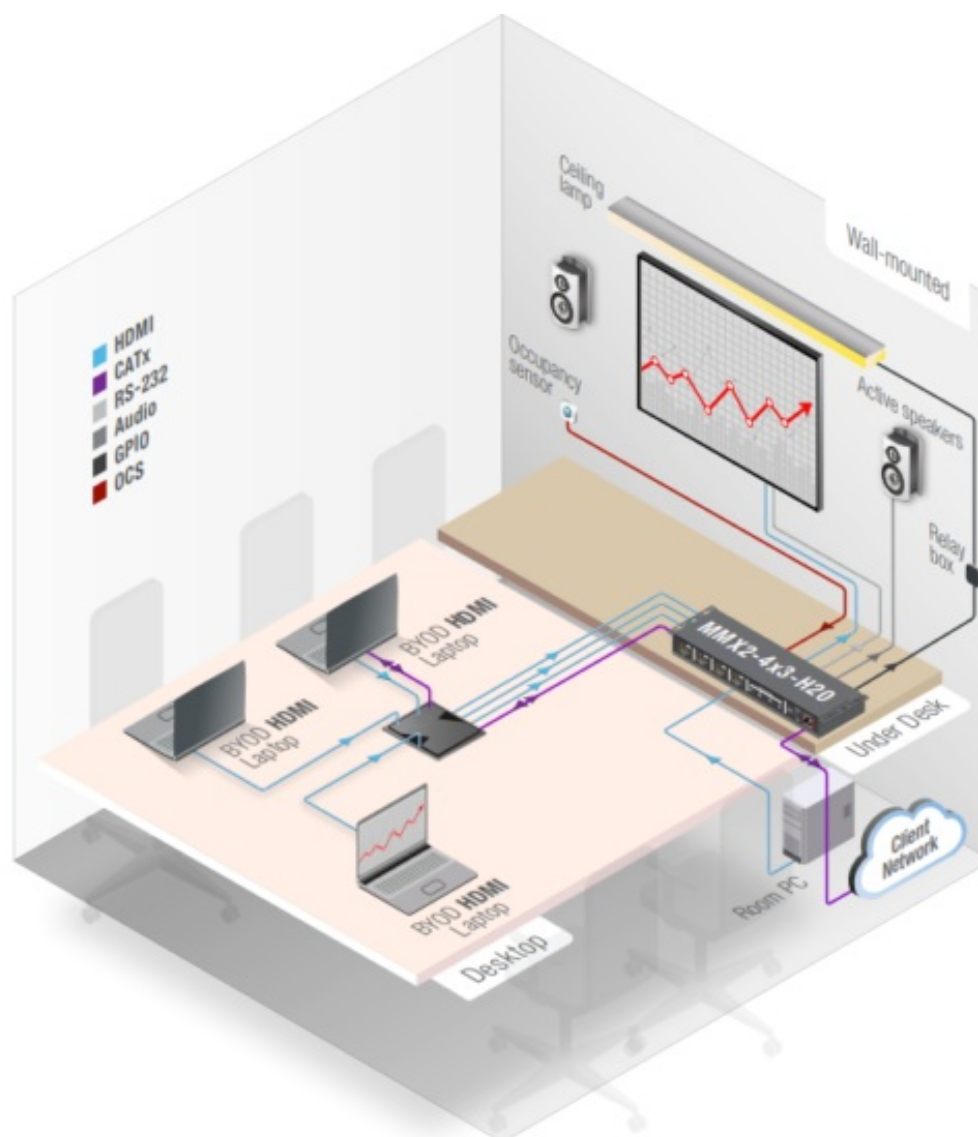

Further Information

The document is valid with the following firmware version: 1.3.0 The User's manual for this appliance is available on www.lightware.com. See the Downloads section on the dedicated product page.

Contact Us

sales@lightware.com

+36 1 255 3800


support@lightware.com

+36 1 255 3810



Lightware Visual Engineering LLC.
Peterdy 15, Budapest H-1071, Hungary
Doc. ver.: 1.2
19200188

Documents / Resources

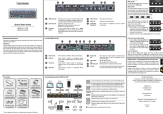	<p>LIGHTWARE MMX2-4x1-H20 HDMI 2.0 Switcher High-Definition Interface [pdf] User Guide MMX2-4x1-H20, MMX2-4x3-H20, MMX2-4x1-H20 HDMI 2.0 Switcher High-Definition Interface, MMX2-4x1-H20, HDMI 2.0 Switcher High-Definition Interface</p>
---	--

References

-  [Lightware Visual Engineering](#)