



LIGHTWARE MX2-24×24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher User Guide

[Home](#) » [LIGHTWARE](#) » LIGHTWARE MX2-24×24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher User Guide

Contents [[hide](#)]

- [1 LIGHTWARE MX2-24×24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher](#)
- [2 Introduction](#)
- [3 Port Diagram](#)
- [4 Contact Us](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

LIGHTWARE

LIGHTWARE MX2-24×24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher



Introduction


The Lightware MX2 standalone matrix switcher series is equipped with mixed DisplayPort and HDMI ports, and supports uncompromised 4K UHD resolution at 60Hz with RGB 4:4:4 colorspace and with down-conversion capabilities to 4:2:2. The DisplayPort inputs on the MX2 DPi series routers allow connecting DisplayPort 1.2 video sources directly, without the need for adapters or dongles. Additional analog audio input and output connectors allow embedding a different audio signal in the video stream or break out the audio signal from the HDMI stream on the output.

Important Safety Instructions


Please read the supplied safety instruction document before using the product and keep it available for future reference.

Front Panel Operations – LCD Menu and Navigation


The front panel has a color LCD showing the most important settings and parameters (E.g. network settings, video settings, port status, crosspoint state). The jog dial control knob can be used to navigate between the menu items or change the value of a parameter. The knob can be pressed to enter a menu or edit/set a parameter

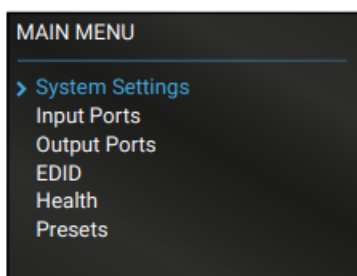


Menu navigation
& change parameter

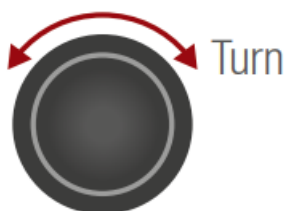

Menu selection
& set parameter

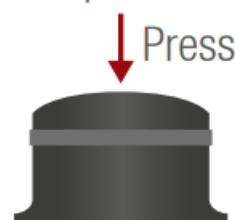


Front View of MX2-8x8-DH-8DPi-A and MX2-24x24-DH-24DPio-A-R

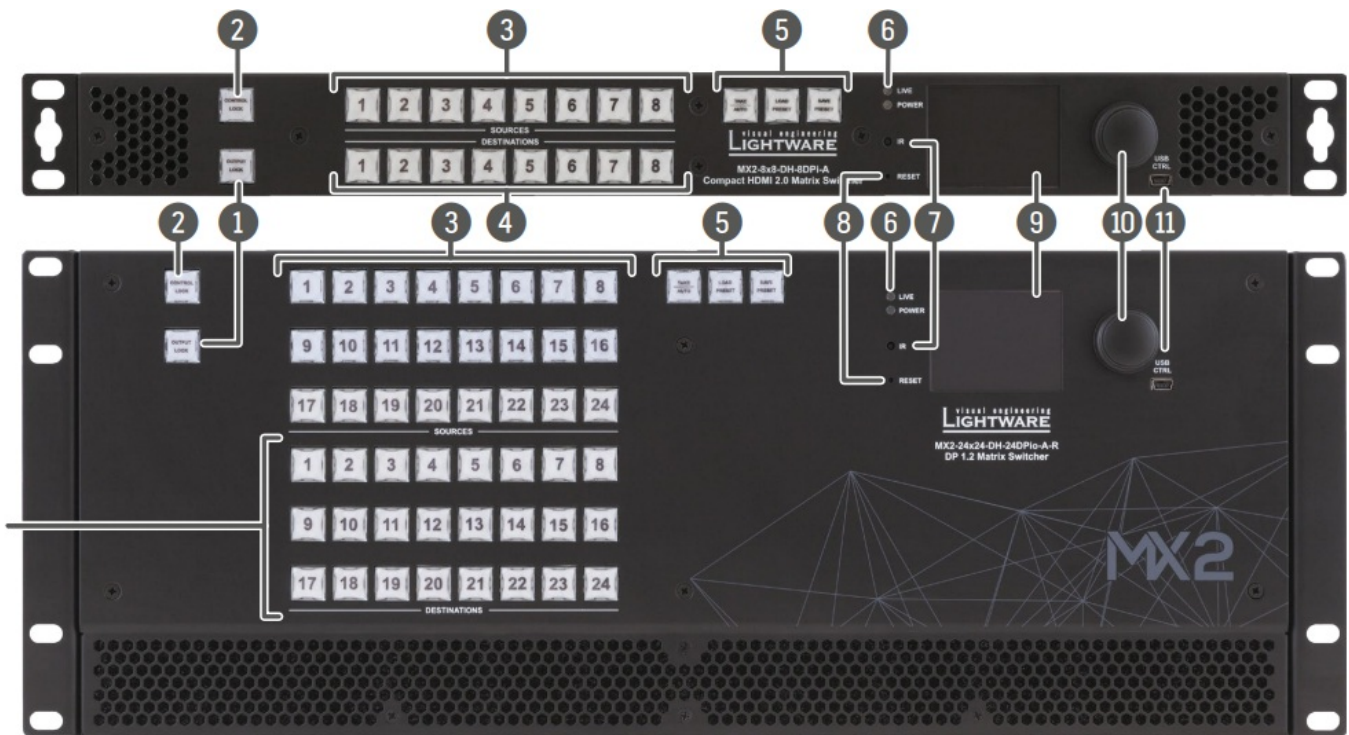

1. Output Lock
 - Locks one or more outputs.
2. Control Lock
 - Disables or enables front panel operations. Red light means the switching and function buttons are disabled.
3. Sources
 - Buttons to select an input, to select a preset number or to view the state of the selected input port.
4. Destinations
 - Buttons to select an output or to see the state of an output.
5. Function Buttons
 - Function buttons switch between working modes (Take / Autotake) and perform Preset operations.
6. Status LEDs
 - Blinking LIVE LED indicates normal operation; POWER LED is dark in the case of an internal voltage problem.
7. IR detector LED
 - Reserved for future developments.
8. Reset Button
 - Reboots the matrix (the same as disconnecting from the power source and reconnecting again).
9. Color Display
 - LCD screen shows the most important settings and parameters in the front panel menu.
10. Jog Dial Control Knob
 - Easy setting and menu navigation by the jog dial control.
11. USB Control
 - USB connector for local control functions (e.g. Lightware Device Controller (LDC) software).

Rear View of MX2-8x8-DH-8DPi-A and MX2-24x24-DH-24DPio-A-R

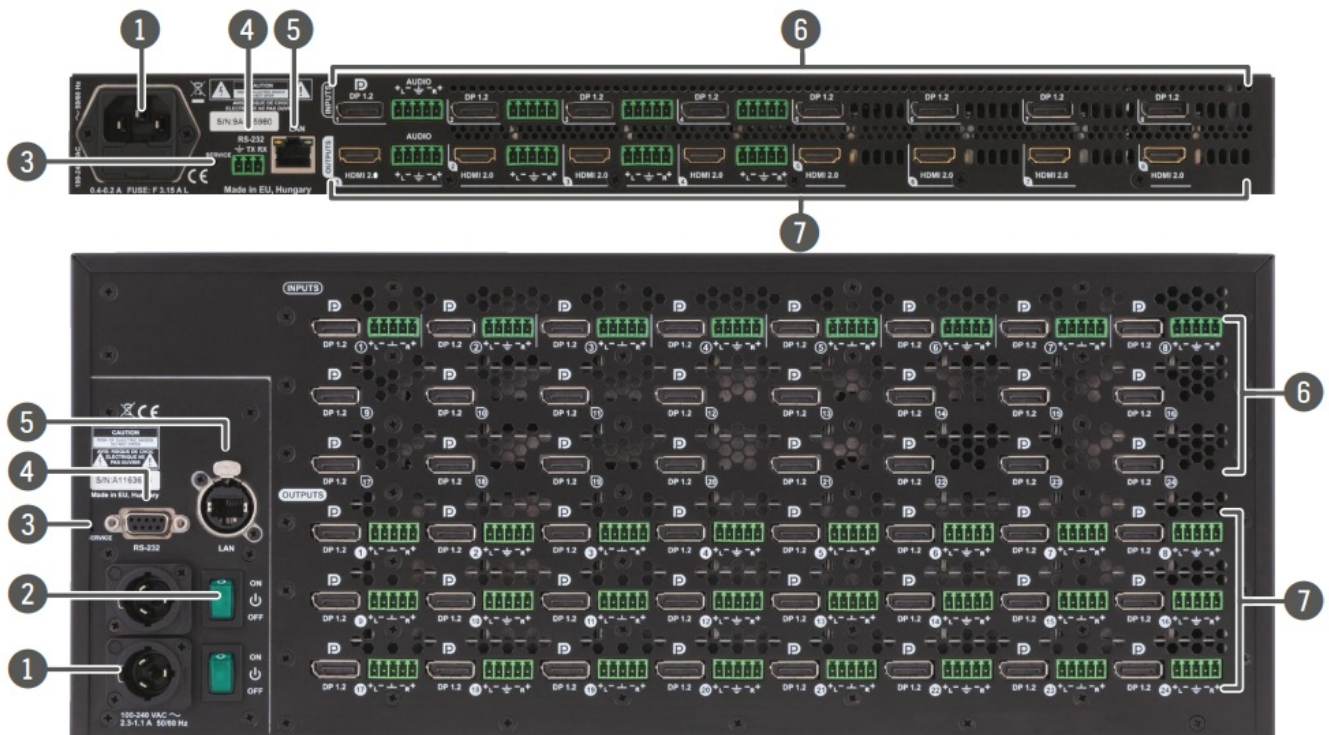

1. AC Connector

- R suffixed models: Neutrik powerCON connector accepting 100-240 V, 50 or 60 Hz
- In the other models: Standard IEC connector accepting 100-240 V, 50 or 60 Hz.

2. Power Switch

- The matrix can be switched on/off by the power switch.

3. Service Button

- Hidden button for special operations.

4. RS-232 Port

- R suffixed models: 9-pole D-SUB connector.
- Other models: 3-pole Phoenix connector.

5. LAN

- R suffixed models: Neutrik etherCON connector for Ethernet/LAN connection.
- Other models: RJ45 connector to control the matrix via LAN/Ethernet.

6. Input Ports

- HDMI input ports are able to receive HDMI 2.0 video signal. DP input ports for DP 1.2 video signal. Audio input ports (5-pole Phoenix) for balanced analog audio input signal (in -A suffixed models).

7. Output Ports

- DP or HDMI output ports for connecting sink devices. Audio output ports (5-pole Phoenix) for balanced analog audio output signal. The signal is de-embedded from the given video port (in -A suffixed models).

Powering On

- Connect the power cords to the AC input of the Power Supply Units (PSU). The 1RU- high models are immediately powered on.
- After the self-test (about 20 seconds), the router reloads its last configuration and it is ready to use.
- After switching ON, the router reloads the latest settings that were used before it was switched off.
- The router has an internal emergency memory that stores all current settings and the configuration.


Redundant Power Supplies

- The -R suffix in the model name shows that the model has redundant PSUs, which can be switched on and off without interrupting the video transmission.
- Using one or both of the PSUs at the same time is also possible.
- The double PSU allows to connect them to two different AC power lines to ensure the continuous power for the matrix.








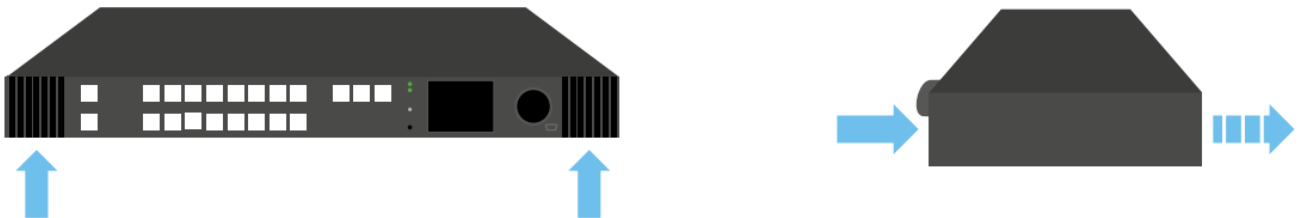


Ventilation

 - To ensure the correct ventilation and avoid overheating, leave enough free space around the appliance.
- Do not cover the appliance, leave the ventilation holes free.
- The following pictures show the direction of the airflow

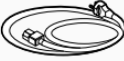

Box Contents

	 Matrix switch	 Safety and warranty info, QSG	 IEC power cable	 Neutrik powerCON power cable	 Serial data cable (male-female)	 Phoenix® combicon 3-pole connector	 Phoenix® combicon 5-pole connector	 Handle pair with 4 pcs M5 flat head screws
MX2-8x8-DH-4DPi-A	✓	✓	✓	-	-	✓	✓ (2x)	-
MX2-8x8-DH-8DPi-A	✓	✓	✓	-	-	✓	✓ (8x)	-
MX2-8x8-DH-4DPio-A	✓	✓	✓	-	-	✓	✓ (16x)	-
MX2-8x8-DH-8DPio-A	✓	✓	✓	-	-	✓	✓ (16x)	-
MX2-16x16-DH-8DPi-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (16x)	-
MX2-24x24-DH-12DPi-R	✓	✓	-	✓ (2x)	✓	-	-	-
MX2-24x24-DH-12DPi-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (20x)	-
MX2-24x24-DH-24DPio-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (20x)	-
MX2-32x32-DH-16DPi-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (28x)	✓
MX2-48x48-DH-24DPi-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (32x)	✓
MX2-48x48-DH-48DPi-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (32x)	✓
MX2-48x48-DH-48DPio-A-R	✓	✓	-	✓ (2x)	✓	-	✓ (32x)	✓

Front Panel Operations

Press and hold the Take button for two seconds to change between Take and Autotake modes. When the Take button continuously shines green, Autotake mode is selected.







Switching and Locking Operations in AUTOTAKE Mode

Autotake mode is useful when immediate actions must be taken, or fast switching is needed between sources on a particular destination. In this mode switching occurs immediately upon pressing one of the input selector buttons

Switching Operations	1. Press and release the desired destination button . The pressed destination button and the currently connected source button light up green. If no source is connected (the output is muted), no source button will light up.	
	2. Press and release the desired source button . The switch action will be executed immediately. Switching between sources to the selected destination can be done directly.	
Locking an Output	1. Press and release the required destination button . Now the selected destination button and the currently configured source button light up (view mode).	
	2. Press and release the Output Lock button; it lights up in red, and lock function is activated at once. No source can be changed at the locked destination.	

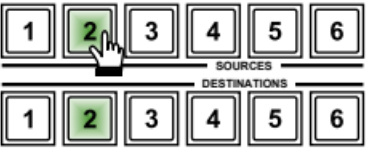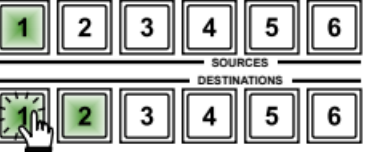
Switching and Locking Operations in TAKE Mode

Take mode allows the user to connect or disconnect multiple outputs to an input at once. This mode is useful when time delay is not allowed between multiple switching. The commands are only realized when the Take button is pressed.

Switching Operations	1. First press and release the desired source button . The pressed source button and all destination buttons that are currently connected to the source light up.	
	2. Press and release the desired destination buttons that have to be (dis)connected from/to the selected source. The preselected destination buttons will blink.	
	3. Press and release the Take button. The selected input is switched to the selected output(s).	
Locking an Output	1. Press and release the Output Lock button. It starts to blink and all the buttons of any locked destinations light up (view state).	
	2. Press and release a destination button . It starts to blink (more destinations can be selected sequentially).	
	3. Press and release the Take button. The selected destinations are now locked.	

Mounting Options

- M4x8 size is the longest allowed screw for fixing the ears to the housing. Longer screws may touch internal parts.
- Mounting as a Standard Rack Installation – with front rack ears
- All models can be mounted into the rack cabinet.
- Two rack ears are supplied with the product, which are fixed on the left and the right side. The default position allows mounting the device as a standard rack unit installation.

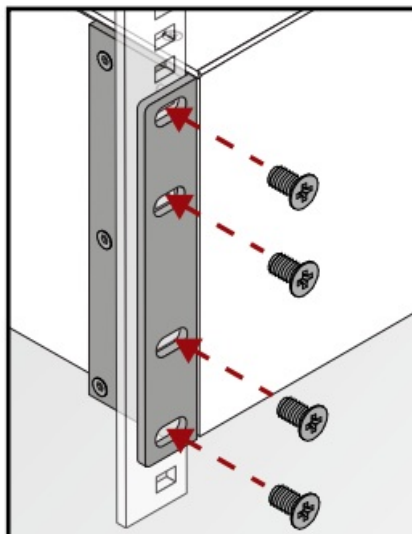


- Under-desk Mounting – with front and rear rack ears
- Under-desk mounting is available for the 1U-high models.
 - Release and remove the fixing screws of both rack ears from the matrix.
 - Rotate the rack ears by 90° to the desired direction.

- Insert the screws into the holes and fix the front ears to the matrix.
- Fix the two other rear ears (not supplied with the product) by the screws on both sides.
- Fix the matrix by the rack ears to the desired surface (screws not supplied).
- Two rack ears are supplied with the product; further rack ears can be purchased separately.

Fixing the Handles


Two handles can be mounted on the rack ears of the 8 RU-sized matrix switchers. Fasten the 2 x 2 pcs fixing screws to fix the handles to the rack ears..

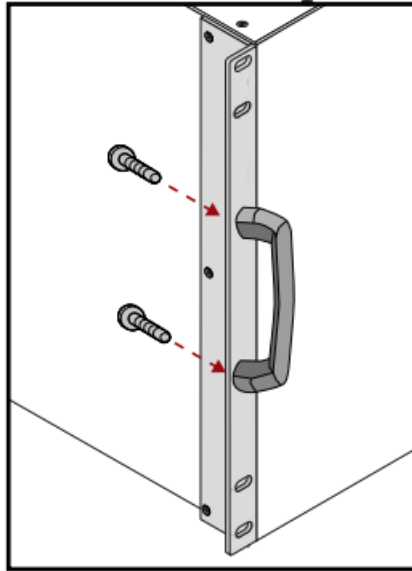

Factory Default Settings

IP address	Dynamic (DHCP is enabled)
RS-232 port setting	57600 BAUD
RS-232 port control protocol	LW3 protocol
Crosspoint setting	I1 to all
Emulated EDID	F49 – (Universal HDMI, all audio, deep color support)
EDID memory storage	144 factory / 100 User memory slots
HDMI ports	
HDCP enable (in)	Allow HDCP 2.2 and HDCP 1.4
Audio source (in)	HDMI
HDCP (out)	Depends on input
Signal type (out)	Auto
Conversion mode (out)	Passthrough
Audio mode: HDMI port (out)	HDMI
Audio mode: HDMI with a. audio (out)	HDMI+ANALOG
DP ports	
HDCP enable (in)	Allow HDCP 2.2 and HDCP 1.4
Link data rate (in)	Max. HBR2 (5.4 Gbps)
Link lane count (in)	Max. 4 lane
Audio source (in)	DisplayPort

Connecting Steps – MX2-24×24-DH-12DPi-A-R

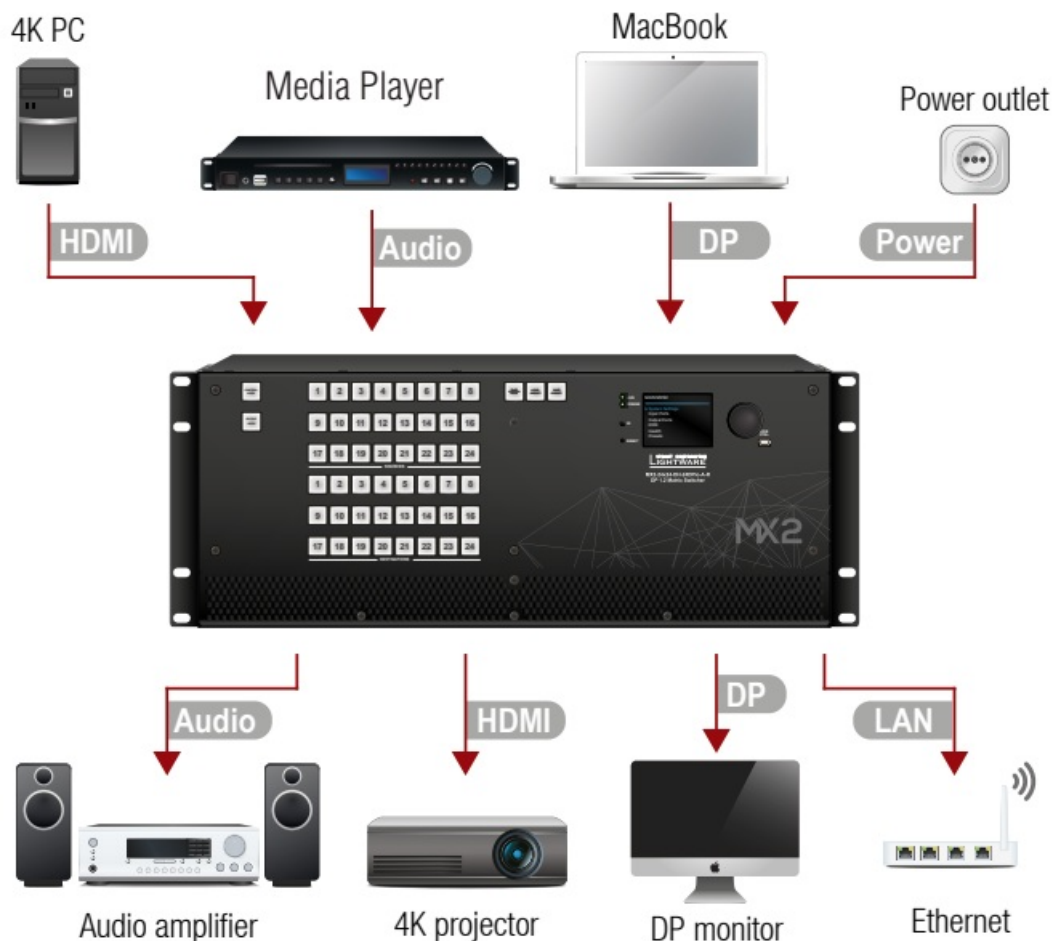


- | | |
|--------------|--|
| HDMI | Connect the desired source to an HDMI input port. |
| Audio | Optionally connect an audio source to the Audio input port, which is located next to the connected HDMI input port.* |
| DP | Connect the desired source to a DP input port. |
| Audio | Optionally connect an audio device (e.g. amplifier) to the Phoenix Audio output port, which is located next to the connected HDMI output port.* |
| LAN | In order to control the matrix via Ethernet, connect the device to a LAN switch/router, and connect a controller (e.g. Touch panel). |
| HDMI | Connect a sink device to an HDMI output port. |
| DP | Connect a sink device to an DP output port. |
| Power | Connect the power cord to the AC power socket and to the matrix. |

DP ports

DP ports	
Power (in, out)	Enabled
HDCP (out)	Depends on input
Link training mode (out)	Auto
Audio mode: DP port (out)	DP
Audio mode: DP with analog audio (out)	DP+Analog

Audio Cable Wiring Guide

The -A suffixed models have analog audio input and output ports, which are built with 5-pole Phoenix input and output connectors. See below a few examples of the most common assembling cases.

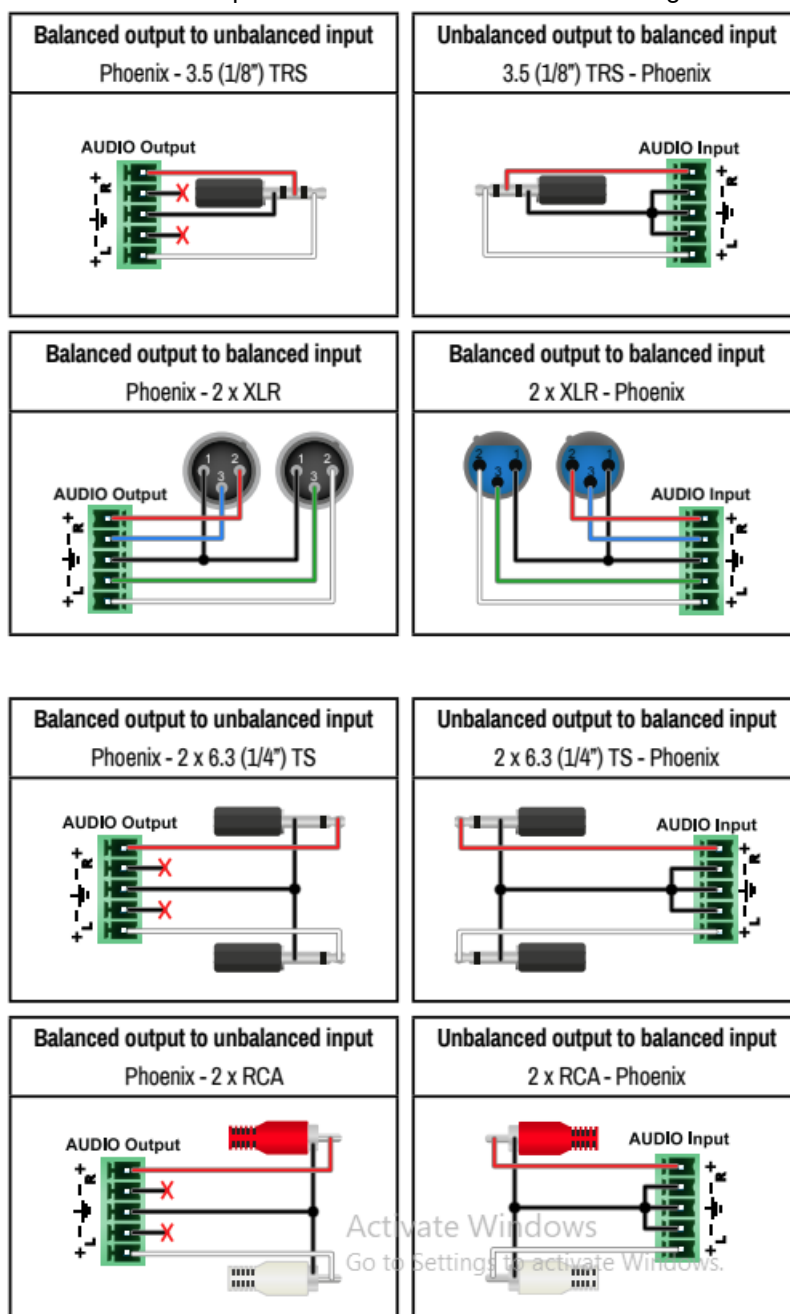

Control Lock

- If the button shines in red, the switching and function buttons, and the jog dial control knob are disabled. Press

and hold the Control lock button for three seconds to toggle the state.

- When the front panel buttons are locked, remote control (RS-232, USB, Ethernet) is still available.

Software Control – Using Lightware Device Controller (LDC)

The device can be controlled from a computer using the Lightware Device Controller software. The application is available at www.lightware.com (Support / Downloads section), install it on a Windows PC or a macOS and connect to the device via LAN, USB, or RS-232.



Software Control – Built-in Web


The built-in website of the matrix allows to connect and control the matrix via a web browser. Open a web browser (Mozilla Firefox or Google Chrome is recommended) and connect the device by writing the IP address of the matrix into the address bar. The built-in web and Lightware Device Controller Software have the same look and functionality.

Firmware Upgrade

Lightware Device Updater2 (LDU2) is an easy and comfortable way to keep your device up-to-date. Establish the connection to the device via Ethernet. Download and install LDU2 software from the company's website www.lightware.com, where you can find the latest firmware package as well.



Port Diagram

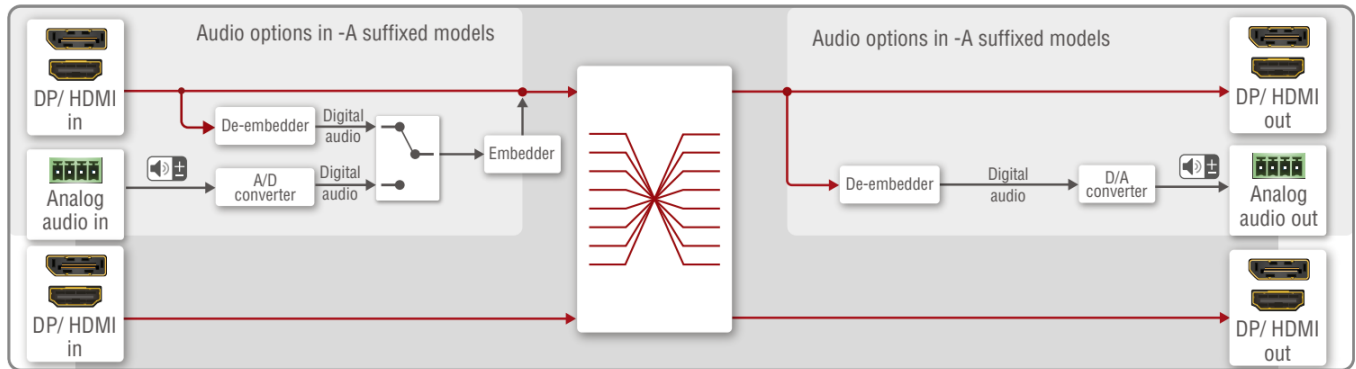


Video Options

DisplayPort signals over 18Gbps will be converted down by either truncating bit depth or by converting RGB signal to YCbCr 4:2:2 12-bit signal based on user selection. The second option will not reduce the color depth, instead it results in loss of chroma information. The test pattern generator feature makes it possible to transmit the analog audio without any video signal.

Analog Audio Options

The -A suffix in the model name refers to the analog audio option. An external audio signal can be embedded in the HDMI stream by the Analog Audio input port. In this case the audio from the analog input port is converted and embedded into the HDMI stream. Furthermore, the Analog audio output ports allow to de-embed the audio of the HDMI output stream. Please note that only stereo LPCM can be de-embedded from the HDMI signal.

Wiring Guide for RS-232 Data Transmission

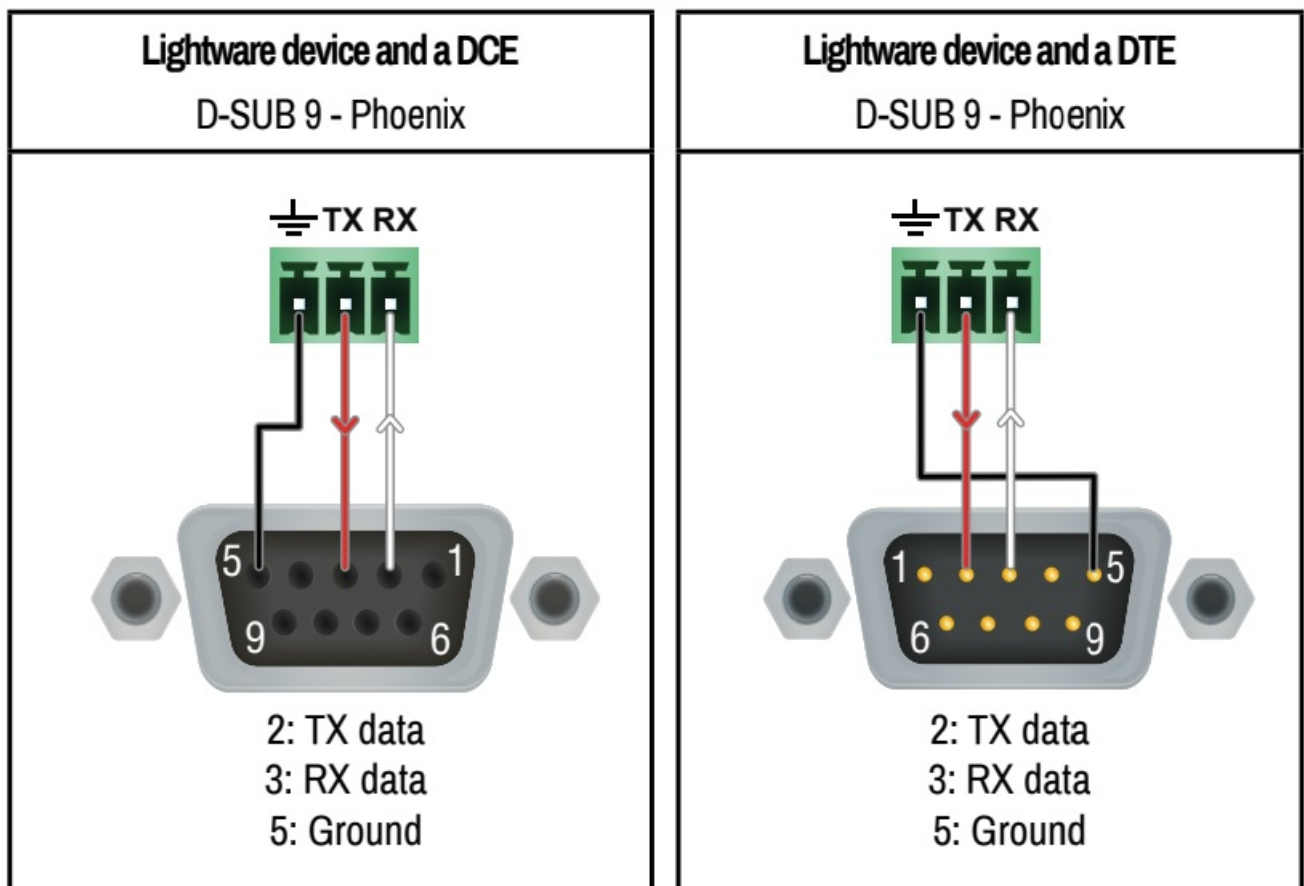

Certain models are built with a 3-pole Phoenix connector. See the examples below of connecting to a DCE (Data Circuit-terminating Equipment) or a DTE (Data Terminal Equipment) type device:

For more information about the cable wiring, see the user's manual of the device or the Cable Wiring Guide on our website www.lightware.com/support/guides-and-white-papers

Further Information

The User's manual of this appliance is available at www.lightware.com See the Downloads section on the dedicated product page.

Contact Us

sales@lightware.com


+36 1 255 3800

support@lightware.com

+36 1 255 3810

Lightware Visual Engineering LLC. Peterdy 15, Budapest H-1071, Hungary Doc. ver.: 1.5 19200218

Documents / Resources

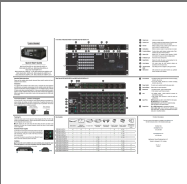	<p>LIGHTWARE MX2-24x24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher [pdf] User Guide MX2-24x24-HDMI20, DP12 Series, HDMI 2.0 Standalone Matrix Switcher, DP12 Series HDMI 2.0 Standalone Matrix Switcher, MX2-24x24-HDMI20 DP12 Series HDMI 2.0 Standalone Matrix Switcher</p>
---	--

References

-  [Lightware Visual Engineering](#)
-  [Guides and White Papers](#)