



LIGHTWARE UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher User Guide

[Home](#) » [LIGHTWARE](#) » LIGHTWARE UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher User Guide 

Contents

- [1 LIGHTWARE UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Important Safety Instructions](#)
- [5 Box Contents](#)
- [6 Overview](#)
- [7 Status LEDs](#)
- [8 Port Diagram](#)
- [9 Audio Cable Wiring Guide](#)
- [10 Connecting steps](#)
- [11 Powering options](#)
- [12 Factory default settings](#)
- [13 Button Functionality](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



LIGHTWARE UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher



Product Information

The product is the UCX-TPX-TX20, which is a transmitter/receiver device. It has various ports and LEDs for video and audio signal transmission, USB connectivity, and Ethernet communication. The device supports HDMI input and output, as well as USB data transfer.

Front View

- **1:** Video Input Status LED (the upper one)
 - **on:** There is a valid video signal on this port.
 - **off:** There is no valid video signal on this port.

Rear View

- **1:** DC input
- **2:** USB-A ports
- **3:** TPX output port
- **4:** HDMI output ports
- **5:** Status LEDs
 - **Blinking:** The device is powered on and operational.
 - **Off:** The device is not powered or out of operation.
- **6:** Analog Audio output port
- **7:** RS-232 ports
- **8:** GPIO port
- **9:** Configurable Ethernet ports

Product Usage Instructions

1. Connect the DC input to a power source using the 2-pole Phoenix connector.
2. Use the USB-A ports for connecting USB peripherals such as a camera, keyboard, or multitouch display.
3. Connect the TPX output port to an AVX output signal transmission using the RJ45 connector.
4. Use the HDMI output ports to send video and audio signals to the receiver.
5. Connect USB host devices (e.g. computer) to the USB-B ports for upstream USB connectivity.
6. Connect HDMI input sources to the HDMI input port for receiving video and audio signals.
7. Use the input selection buttons to choose the desired video signal.
8. Refer to the table provided for button functionality and front panel lock enabling.

9. The USB-C ports receive video and audio signals, as well as USB data, from the host device.
10. For configurable Ethernet communication, use the RJ45 connectors labeled as Configurable Ethernet ports.
11. Refer to the provided safety instruction document before using the product.
12. For more detailed information on powering options, refer to the next page of the user manual.


Important Safety Instructions

Please read the supplied safety instruction document before using the product and keep it available for future reference.

Introduction

- Lightware's universal matrix Transmitter switcher exploits the USB-C connectivity for a simplified extension of up to 100m of 4K video, audio, control signals and power providing meeting participants with easy host switching, utilizing data speeds of up to 5 Gbps under the USB 3.1 Gen1, providing video resolution capabilities up to 4K@60Hz at 4:4:4, as well as comprehensive and secure Ethernet features.
- The Receiver extender with AVX technology allows users to extend HDMI 2.0 signals up to 4K60 4:4:4 video resolution through a single CATx cable over distances of up to 100 meters. They also support independent USB host switching with USB 2.0, making the pair excellent for meeting room setups.
- The Transmitter / Receiver pair is featured with audio de-embedding function via the 5-pole Phoenix® Combicon analog audio ports.
- Beyond the benefits of sending high-resolution video over long distances, the pair is also capable of handling various connectivity standards, including bi-directional RS-232, GPIO and OCS as well.
- The Gigabit Ethernet port is also a valuable addition, allowing users to connect an additional device to the network directly through the TPX extender.
- The Transmitter is also capable of powering the Receiver remotely over Ethernet, as the Receiver is PoE compatible.


Box Contents

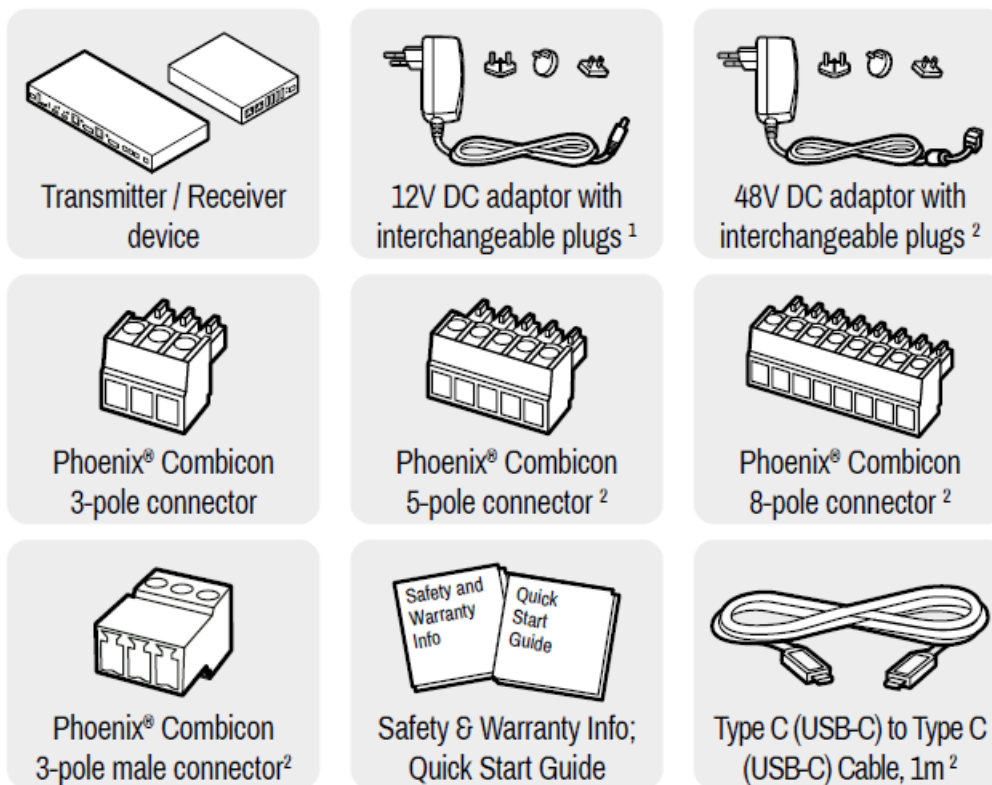



1. Only for the HDMI-UCX-TPX-RX107 device.
2. Only for the UCX-4×3-TPX-TX20 device

Overview

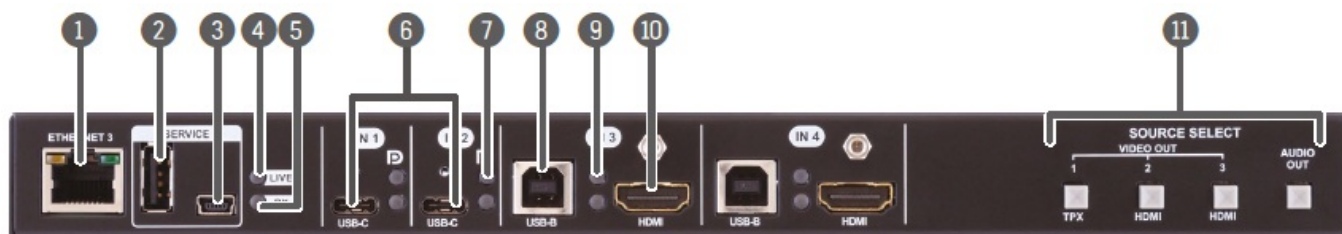Front view (UCX-TPX-TX20)



1. **Configurable Ethernet port** RJ45 connector for configurable 100Base-T Ethernet communication.
2. **USB-A port** The SERVICE-labelled USB-A connector is designed for service functions.
3. **Micro USB port** The SERVICE-labelled USB mini-B port is designed for service functions.
4. **LIVE LED**
 -  blinking The device is powered on and operational.
 -  off The device is not powered or out of operation.
5. **RX LED** Function will be implemented in a later release.
6. **USB-C ports** USB-C port for receiving video and audio signals, as well as USB data from the host device.
7. **Status LEDs** For the details, see the table on the right.
8. **USB-B ports** Upstream ports for connecting USB host devices (e.g. computer).
9. **Status LEDs** For the details, see the table on the right.

10. **HDMI input ports** HDMI input port for receiving video and audio signals.

11. **Input selection buttons** For more details on the button functionality, see the table on the other side. When the LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.

Always use the supplied power supply. Warranty void if damage occurs due to use of a different power source.


Rearview (UCX-TPX-TX20)




1. **DC input** for local powering. Connect the output to the 2-pole Phoenix connector. For more details, see the powering options on the next page.
2. **USB-A ports** Downstream ports for connecting USB peripherals (e.g. camera, keyboard, multitouch display).
3. **TPX output port** RJ45 connector for AVX output signal transmission. See more details about the connector in the Power Supply Options and the Status LEDs sections.
4. **HDMI output ports** for sending video and audio signals to the receiver.
5. **Status LEDs** For more information, see the table on the right.
6. **Analog Audio output port** (5-pole Phoenix®) for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
7. **RS-232 ports** 3-pole Phoenix® connectors for bi-directional RS-232 communication.
8. **GPIO port** 8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details on the next page.
9. **Configurable Ethernet ports** RJ45 connectors for configurable 100Base-T Ethernet communication.

The overall power supply of the USB-A connectors is beyond 1.5A, which makes it possible to supply devices with higher voltage requirements.

Front view (HDMI-UCX-TPX-RX107)

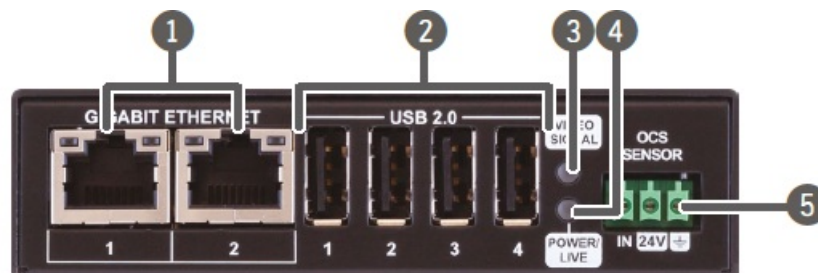

1. **Gigabit Ethernet ports** 1Gbase-T RJ45 connectors for user Ethernet purpose.
2. **USB-A ports** Downstream ports for connecting USB peripherals (e.g. camera, keyboard, multitouch display).
3. **Video signal LED** For more information, see the table on the right.
4. **Power/LIVE LED**


-  **off** Device is not powered.

-  **blinking between 50% and 100% brightness (green)** Device is powered on and operational.

5. **OCS sensor** 3-pole Phoenix® connector (male) for connecting an occupancy sensor. The port provides 24V output voltage (50mA).


 
 




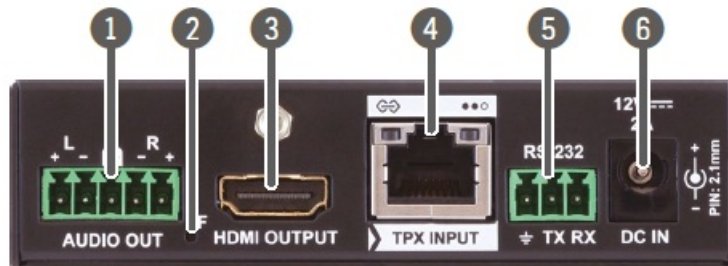











The overall power supply of the USB-A connectors is beyond 1.5A, which makes it possible to supply devices with higher voltage requirements.

  Rear view (HDMI-UCX-TPX-RX107)


 


1. **Analog audio output port** Audio output port (5-pole Phoenix®) for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
2. **Factory reset button** Hidden button for setting the device to factory default values.
3. **HDMI output port** HDMI output ports for connecting sink devices (e.g. displays).
4. **TPX input port** RJ45 connector for AVX input signal transmission. See more details about the connector in the Power Supply Options and the Status LEDs sections.
5. **RS-232 port** 3-pole Phoenix® connector for bi-directional RS-232 communication.
6. **DC input** DC input for local powering. For more details, see the powering options next page.

Status LEDs


Video Input Status LED (the upper one)		
	on	There is a valid video signal on this port.
	off	There is no valid video signal on this port.
	blink once	The port is selected by a button press.
USB Status LED (the lower one)		
	on	The USB Host is connected and selected.
	off	No USB Host or deselected port.
	blink once	Port selected by a button press.
VIDEO SIGNAL		Transmitter / Receiver
	off	No video signal detected on the HDMI input (TX) or HDMI output (RX) port.
	on (green)	Video signal is detected on the HDMI input (TX) or HDMI output (RX) port.
TPX INPUT/OUTPUT		Transmitter / Receiver
		
	off	No connection is established between the transmitter and the receiver units.
	on (green)	Connection is established with 10G / 5G / 2.5G bandwidth.
	blinking (yellow)	Link training is in progress.
TPX INPUT/OUTPUT		Transmitter / Receiver
		
	off	No data transmission on the port.
	blinking (green)	Data transmission is active.
GIGABIT ETHERNET - LEFT LED		Transmitter / Receiver
	on (green)	Connection is established with 100Mbps bandwidth.
	blinking (green)	Data transmission is active.
GIGABIT ETHERNET - RIGHT LED		Transmitter / Receiver
	on (green)	Connection is established with 1Gbps bandwidth.
	blinking (green)	Data transmission is active.

Rear Panel LEDs


Video Output Status		Transmitter
	on	The video signal is present.
	off	The signal is not present or muted.

Port Diagram

Port diagram for video/audio (UCX-TPX-TX20)

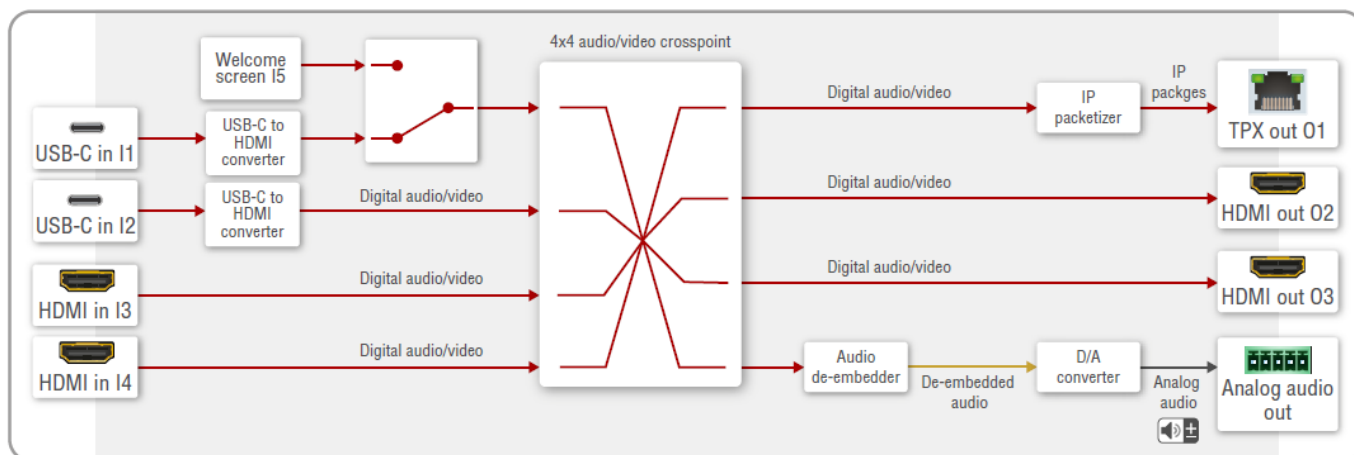


Port diagram for video/audio (HDMI-UCX-TPX-RX107)

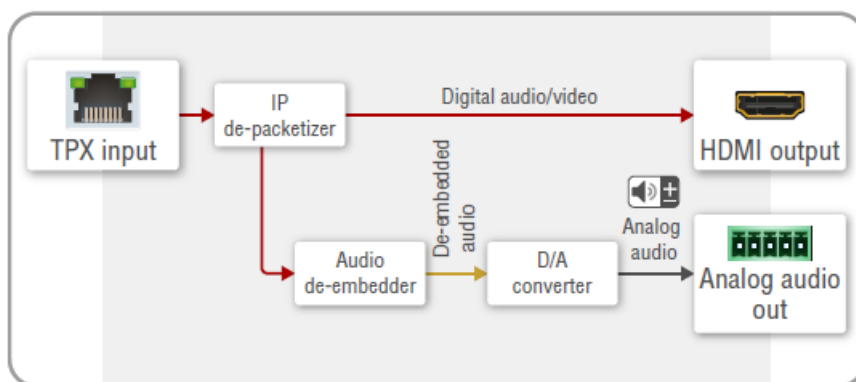


Audio Cable Wiring Guide

The Taurus UCX series is built with a 5-pole Phoenix® output connector. See a few examples below of the most common assembling cases.

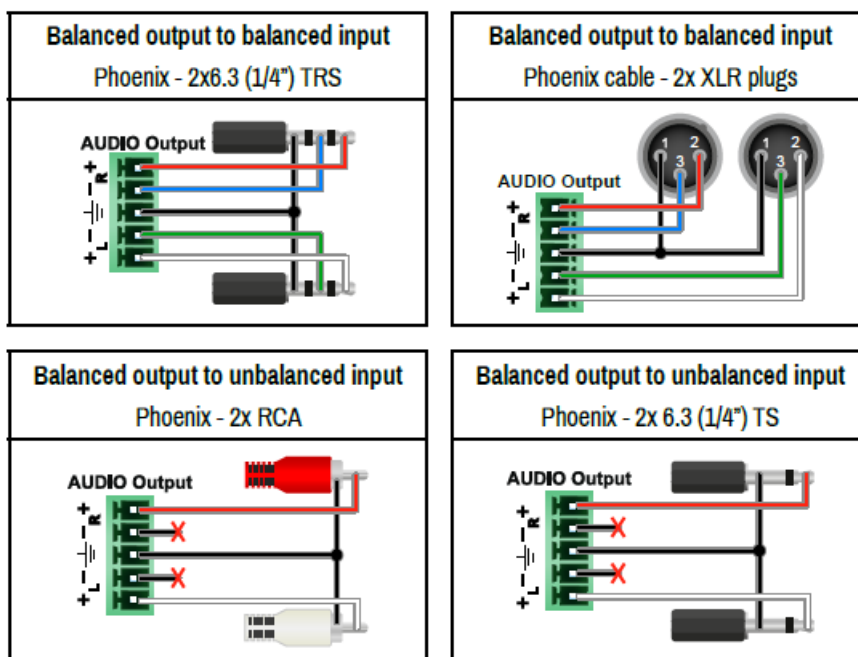

Connecting steps

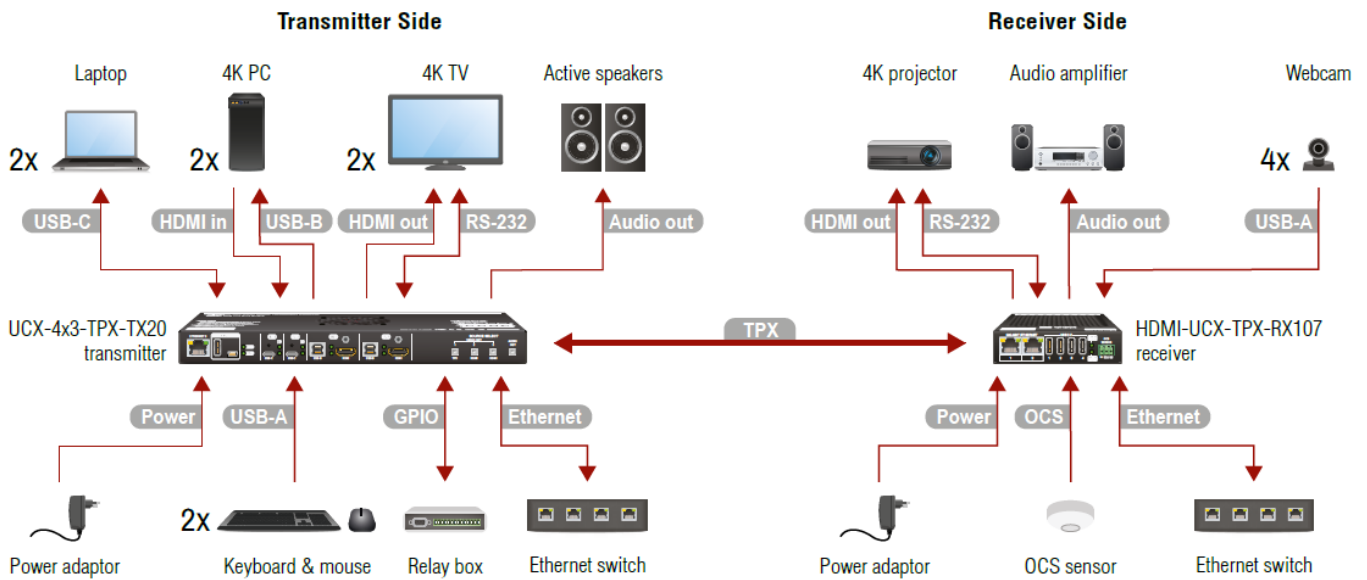

Transmitter Side

- **TPX** Connect a CATx cable between the TPX output port of the transmitter and the TPX input port of the receiver.
- **USB-C** Connect a USB-C source to the USB-C input port. The applied cable shall be certified for USB 3.1 Gen1 (5Gbps) and Displayport Alternate mode HBR2 (4x5.4Gbps) applications.
- **HDMI in** Connect a source to the HDMI input port of the transmitter by a HDMI cable.
- **USB-B** Optionally connect the USB host.
- **HDMI out** Connect a sink to the HDMI input port of the transmitter by a HDMI cable.
- **RS-232** Optionally for RS-232: connect a device to the RS-232 port.
- **Audio out** Optionally for analog output: connect an audio device to the analog audio output port by an audio cable.
- **USB-A** Optionally connect USB peripherals to the USB-A ports with USB cables.
- **GPIO** Optionally connect a controller/controlled device to the GPIO port.
- **Ethernet** Connect the device to a LAN network.
- **Power** Powering on the devices is recommended to do as the final step during the installation. Please check the Power Supply Options section for the details.

Receiver Side

- **TPX** Connect a CATx cable between the TPX output port of the transmitter and the TPX input port of the receiver.
- **HDMI out** Connect the sink to the HDMI output port of the receiver by a HDMI cable.
- **RS-232** Optionally for RS-232: connect a device to the RS-232 port.
- **Audio out** Optionally for analog output: connect an audio device to the analog audio output port by an audio cable.
- **USB-A** Optionally connect USB peripherals to the USB-A ports with USB cables.
- **OCS** Optionally connect an occupancy sensor to the OCS port.
- **Ethernet** Connect the device to a LAN network.
- **Power** Powering on the devices is recommended to do as the final step during the installation. Please check


the Power Supply Options section for the details.

Powering options


- The UCX-4x3-TPX-TX20 is capable of charging a device with 100W over one USB-C port and another device with 60W over the other USB-C port.
- It is also capable of providing the HDMI-UCX-TPX-RX107 device with remote power through the TPX ports.

The devices can be powered in any of the following ways:

1. Local adaptor for both TX and RX

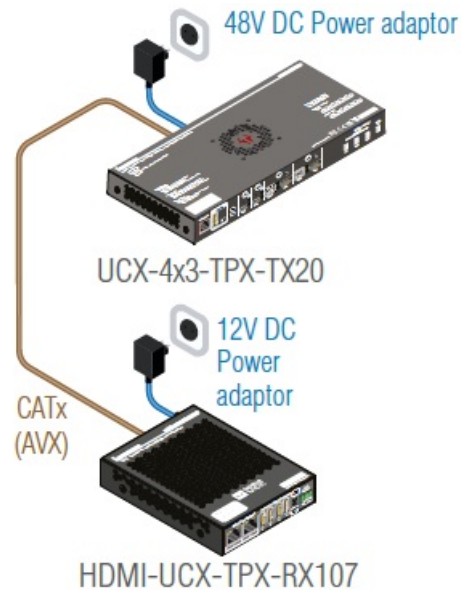

2. Local adaptor for TX and remote power to RX

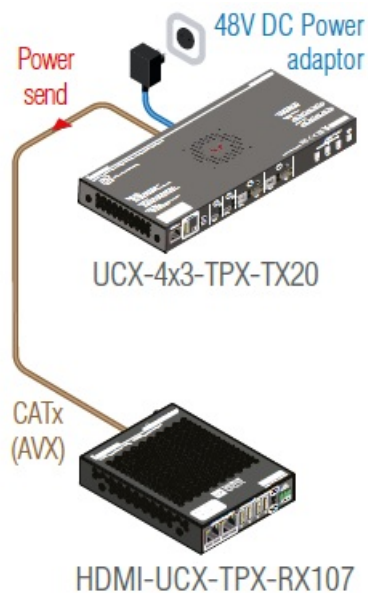

Factory default settings

- IP address Dynamic (DHCP is enabled)
- Hostname lightware-<serialno>
- Video Crosspoint setting I1 on O1, I2 on O2, I3 on O3
- HDCP mode (in) HDCP 2.2

- HDCP mode (out) Auto
- Signal type Auto
- Emulated EDID F47 – (Universal HDMI with PCM audio)
- Audio Crosspoint setting I1 on O4
- Analog audio output levels Volume (dB): 0.00; Balance: 0 (center)
- Video Autoselect Disabled
- USB-C Power Limit P1:100W, P2:60W
- DP Alternate Mode Policy Auto
- Port Power Role Dual Role
- USB Autoselect Follow video O1
- D1-D4 Power 5V Mode Auto
- RS-232 port setting (UCX-4×3-TPX-TX20) 9600 BAUD, 8, N, 1
- RS-232 port setting (HDMI-UCX-TPX-RX107) 115200 BAUD, 8, N, 1
- RS-232 serial over IP Enabled
- HTTP, HTTPS Enabled
- HTTP, HTTPS authentication Disabled
- LARA Disabled

GPIO (General Purpose Input/Output Ports)



The device has seven GPIO pins that operate at TTL digital signal levels and can be set to high or low level (Push-Pull). The direction of the pins can be input or output (adjustable). The signal levels are the following:


	Input voltage (V)	Output voltage (V)	Max. current (mA)
Logic low level	0 - 0.8	0 - 0.5	30
Logic high level	2-5	4.5 - 5	18

Plug pin assignment 1-6: Configurable, 7: 5V (max. 500 mA); 8: Ground

The recommended cable for the connectors is the AWG24 (0.2 mm² diameter) or the generally used 'alarm cable' with 4×0.22 mm² wires.

- The maximum total current for the six GPIO pins is 180 mA, the max. supported input/ output voltage is 5V.

RS-232

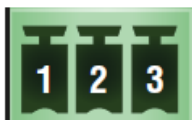

The switcher provides a 3-pole Phoenix® connector for bi-directional serial communication. The signal levels are the following:

	Output voltage (V)
Logic low level	3 - 15
Logic high level	-15 - 3

Plug pin assignment: 1: Ground, 2: TX data, 3: RX data

OCS (Occupancy) Sensor

The switcher is supplied with a 3-pole Phoenix® connector (male), which is for connecting an OCS sensor.




Plug pin assignment: 1: Configurable; 2: 24V (max. 50 mA); 3: Ground


The signal levels for the Pin 1	Input voltage (V)	Max. current (mA)
Logic low level	0 - 0.8	30
Logic high level	2 - 5	18

The occupancy sensor connector and the GPIO port are not compatible with each other because of the voltage level difference, please do not connect them directly.

Button Functionality

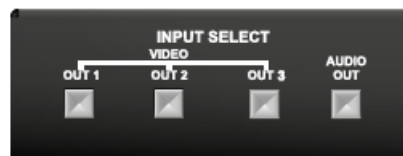

 - Push the OUT1 button to set the video input to the TPX OUT1 port.
- Push the OUT2 button to set the video input to the HDMI OUT2 port.
- Push the OUT3 button to set the video input to the HDMI OUT3 port.
- Push the AUDIO OUT button to set the audio source of the analog audio output. The sequence is the following (both for the video and audio switching):



TAKE CARE OF ME

I AM THE ONE AND ONLY USER DOCUMENT FOR THIS PRODUCT

Lightware Visual Engineering PLC.

Budapest, Hungary


- sales@lightware.com +36 1 255 3800
- support@lightware.com +36 1 255 3810

©2023 Lightware Visual Engineering. All rights reserved. All trademarks mentioned are the property of their respective owners. Specifications are subject to change without notice.

Further information on the device is available at www.lightware.com.

Doc. ver.: 1.0
19210081

Documents / Resources

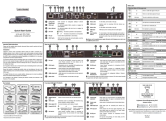	<p>LIGHTWARE UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher [pdf] User Guide UCX-4x3-TPX-TX20, HDMI-UCX-TPX-RX107, UCX-4x3-TPX-TX20 Universal Matrix Transmitter Switcher, UCX-4x3-TPX-TX20, Universal Matrix Transmitter Switcher, Matrix Transmitter Switcher, Transmitter Switcher, Switcher</p>
---	---

References

-  [Lightware Visual Engineering](#)