


linarie LIN60C4Z Bellac Induction Hob Instruction Manual

[Home](#) » [Linarie](#) » [linarie LIN60C4Z Bellac Induction Hob Instruction Manual](#) 

linarie LIN60C4Z Bellac Induction Hob

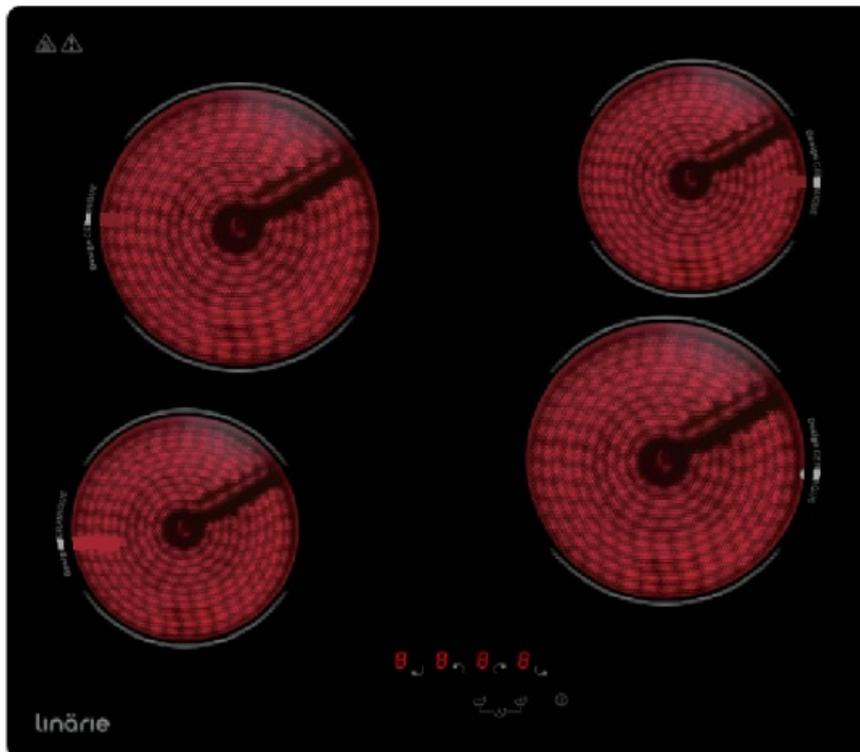

Contents

- 1 Congratulations
- 2 Safety warnings
- 3 Overview of product
- 4 Using your Ceramic Hob
- 5 Using the child lock function
- 6 Use of the timer
- 7 Maintenance and Care
- 8 Cleanliness of equipment
- 9 Trouble shooting
- 10 Specifications
- 11 Installation
- 12 Installation Diagram
- 13 Warnings
- 14 Disposal of the Appliance
- 15 Warranty & After Sales Service
- 16 Like to Know More?
- 17 Customer Support
- 18 Documents / Resources
 - 18.1 References
- 19 Related Posts

Congratulations

Congratulations and thank you for choosing Linărie to introduce a new comfort of cooking in your home. We are sure you will find your new appliance a pleasure to use and a great asset to your kitchen.

This appliance complies with all relevant safety requirements in Australia. Inappropriate use can, however, lead to personal injury and damage to property.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage. This user manual which provides you with all required instructions related to safety, installation, use and maintenance of the appliance.

For future reference, please store this booklet in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.



IMPORTANT

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury and property damage. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on Linărie's manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

Correct Conditions of Use

- The appliance is intended for use in the home and similar environments only. It is not intended for commercial use.
- The appliance is not suitable for outdoor use, non-stationary installation.
- This product is used for cooking and extracting.

i The electricity connection must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

Additional information on products, accessories, warranty, replacement parts and services can be found at www.linarie.com.au

Safety warnings

Your safety is important to us. Please read this information before using your hob.

- The appliance must not be used by persons (including children) with reduced physical, sensory or mental capabilities, or who lack experience and knowledge, unless they have been given supervision or instructions. Children must be supervised and must not play with the appliance. Cleaning and maintenance by the user must not be carried out by unsupervised children.
- **WARNING:** The appliance and its accessible parts become hot during use.
- Take care not to touch the heating elements.
- Children under the age of 8 should be kept out of the way if they are not supervised at all times.
- **Warning:** If the surface is cracked, switch off the appliance to avoid the risk of electric shock. For glass-ceramic cooktops – or cooktops made of similar materials that protect live parts – we recommend that you switch off the appliance.
- **Warning:** It is forbidden to use a steam cleaner.
- That the appliance is not intended for use with an external timer or a separate remote-control system.
- Risk of fire: do not store any objects on the cooking surfaces.
- **CAUTION:** The cooking process must be monitored. A short cooking process must be constantly monitored.
- **WARNING:** Unattended cooking on a hob with grease or oil can be dangerous and cause a fire.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any danger.
- Never try to extinguish a fire with water, but switch off the appliance and cover the flame, for example with a lid or fire blanket.
- **WARNING:** Only use hob guards designed by the manufacturer of the cooking appliance or indicated by the appliance manufacturer in the operating instructions as being suitable, or hob guards incorporated into the appliance. The use of inappropriate guards may cause accidents.
- The power cord is not accessible after installation.
- For installation, please read the section on installation.

Read all the safety instructions carefully before using the appliance and keep this instruction and installation manual for future reference.


Overview of product

View from top

Power of the heating zone


1. Power max. 1200W

2. Power max. 1800W
3. Power max. 1200 W
4. Power max. 1800 W
5. Control panel

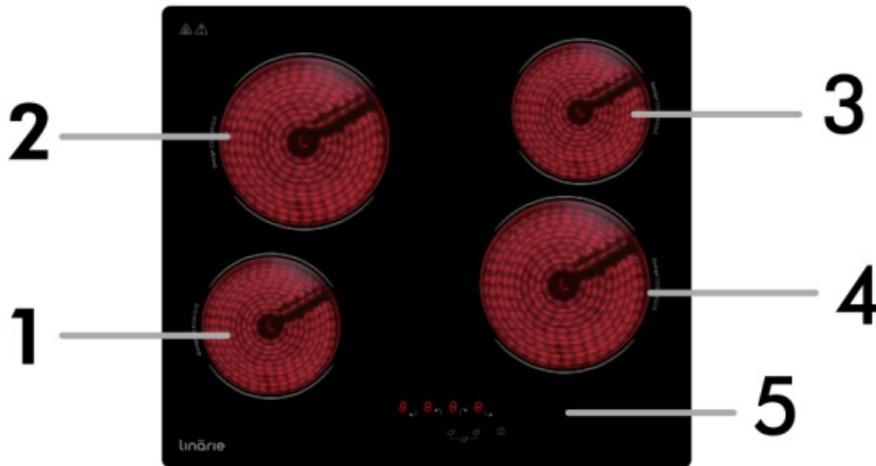

User interface

| Reference | Description |
|-----------|-----------------------------|
| 1 | Zone select key |
| 2 | ON/OFF key |
| 3 | Power/ Timer Regulating Key |

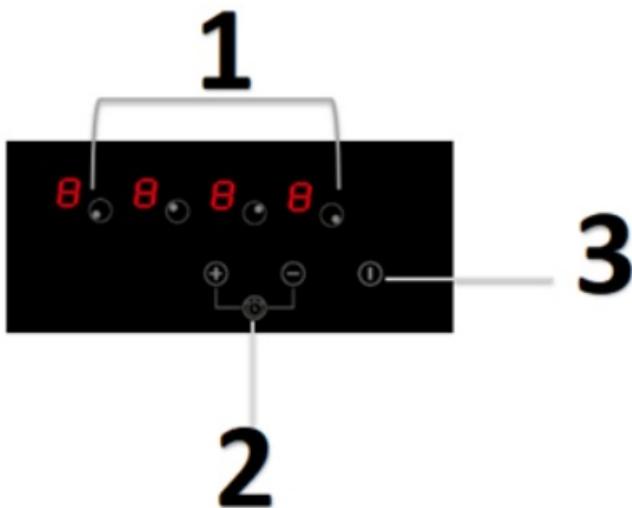

Functions of product

- The ceramic hob is ideal for all types of cooking, with its radiant heat cooking zones, touch-sensitive electronic controls and multiple functions, making it the ideal choice for the modern family.
- The ceramic hob is extremely user-friendly, durable and safe.

Protection against overheating

A sensor monitors the temperature in the cooking zones. When the temperature exceeds a safety level, the cooking zone is automatically deactivated.

Residual heat indicator

When the hob has been in operation for some time, some residual heat is produced. The letter “H” appears to warn you that it is too hot to touch the surface.

Protection against automatic shut down

Automatic shut-off is a protection function for your glass ceramic hob. It stops automatically if you forget to switch off cooking. The default operating times for the different power levels are shown in the table below:

| | | | | |
|-----------------------------|-------|-------|-----|-------|
| Power level | 1 ~ 2 | 3 ~ 4 | 5 | 6 ~ 9 |
| Default working timer (min) | 360 | 300 | 240 | 9~ 0 |

Protection against involuntary operations.

If the electronic control detects a button held down for approximately 20 seconds, it switches off automatically. The control emits an error signal to warn that the sensors have detected the presence of an object. If the hob is still hot, the display will show “H”.

Before use


Read this guide, paying particular attention to the “Safety warnings” section.

- Remove any protective film that may still be on your glass ceramic hob.

Using the touch controls


- The controls react to touch, so there’s no need to exert any pressure.
- Use the ball of your finger, not the tip.
- You will hear a beep each time a key is saved.
- Make sure that the controls are always clean and dry and that no objects (such as utensils or cloths) cover them.

Even a thin film of water can make the controls difficult to use.

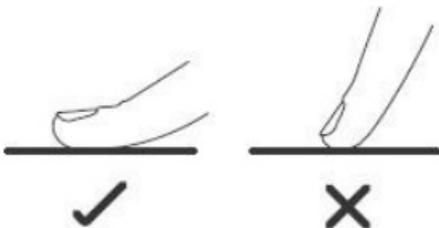


Choosing the right kitchen utensils


Do not use cooking utensils with irregular edges or curved bases.

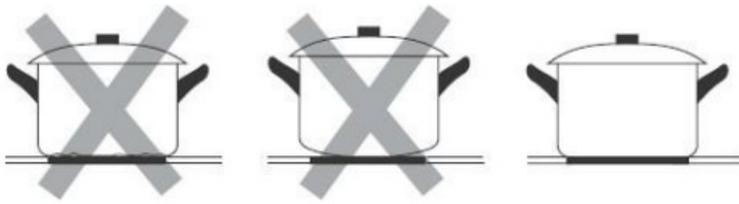

Make sure the base of your pan is smooth, lies flat against the glass and is the same size as the cooking zone. Use saucepans with a diameter as large as the graph of the selected zone. By using a slightly larger pan, the energy will be used to the maximum. If you use a smaller pan, the efficiency may be lower than expected. Always center your pan over the cooking zone.

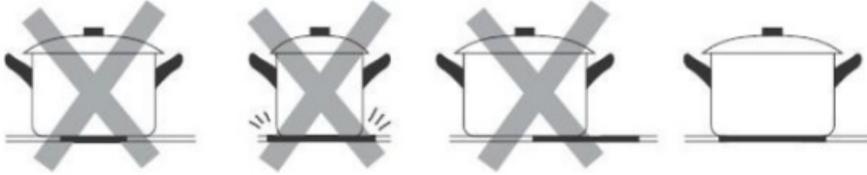


Always lift the saucepans off the ceramic hob – do not let them slide as this could scratch the glass.

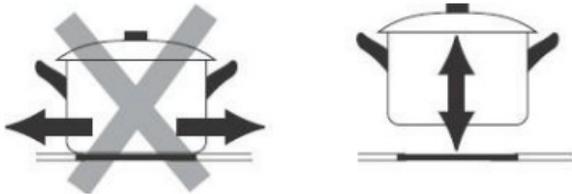

Using your Ceramic Hob


To start cooking

1. Place a suitable pan on the cooking zone you wish to use.
 - Make sure that the bottom of the pan and the surface of the cooking area are clean and dry. are well covered.

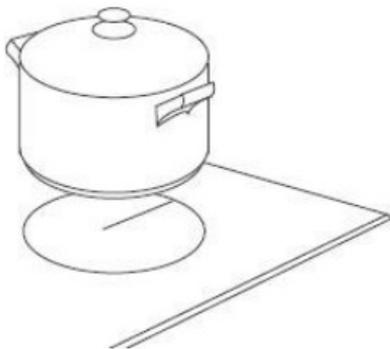


2. Touch the ON/OFF button for 2 seconds.

When the appliance is switched on, it emits a beep and all the screens are displayed. displays "0", indicating that the hob has entered standby mode.

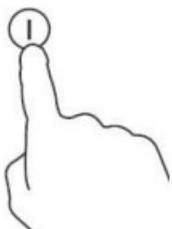

3. Depending on which heating zone the pan is in, press the “+” or “-” buttons, starting with “9”.

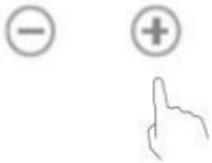

4. Select the power level from 0 to 9 by pressing the “+” or “-” buttons

- If you do not select a heat setting within 20 seconds, the glass ceramic hob will switch off automatically and you will have to start again from step 2.
- You can change the heat setting at any time during cooking.

Using the child lock function

- You can lock the controls to prevent inadvertent use (for example, a child accidentally switching on the cooking zones).
- When the controls are locked, all controls except OFF are disabled.


To lock the controls

Touch the child lock button for 3 seconds. The timer indicator displays “Lo”.

To unlock the controls

1. Make sure the hob is turned on.
2. Simultaneously press the “-” and the furthest right zone select key.
3. You can now start using your ceramic hob.

When the hob is in the lock mode, all the controls are disabled except OFF, you can always turn the hob off with the OFF control in an emergency, but you shall unlock the hob first in the next operation.

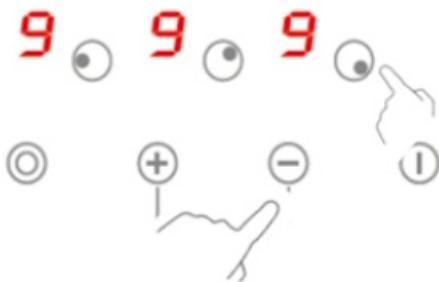


Use of the timer

- You can program a cooking zone to stop at the end of the programmed time.
- You can set the timer from 0 to 99 minutes.

1. select the cooking zone that is operating.



- press the timer, the timer indicators will display "00".
- Use the "+" or "-" buttons to set the time from 0 to 99 minutes.
- when the time is set, the countdown starts immediately. the indicator returns to the power level display after 5 seconds.

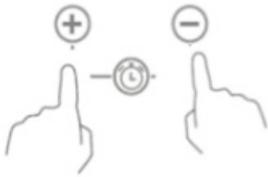


- If you need to check the time remaining, you can repeat steps 1 and 2. **5**
- When the cooking time has elapsed, the corresponding cooking zone switches off automatically. The other cooking zones continue to operate if they were previously switched on.
 - The timer function only works when cooking is activated.**

Maintenance and Care

-  Damaged power cables must be replaced by a competent person or a qualified electrician.
-  For domestic use only.
-  Never place an empty saucepan on the hob, as an error message will be displayed on the control panel.
-  When a cooking zone has been activated for a long time, the surface remains hot for some time. The surface remains hot for some time. Do not touch the ceramic surface.
-  For sealed foods, please do not heat them before opening them by removing the lid to avoid any risk of explosion due to heat expansion.
-  If the surface of the hob is cracked, disconnect it from the hob. to avoid any risk of electric shock.
-  Do not place rough or uneven pans on the hob, as they could damage the ceramic surface. Avoid banging pots and pans on the hob.

Warning

Always switch off the power supply before carrying out any maintenance work. In the event of a fault, contact customer service.

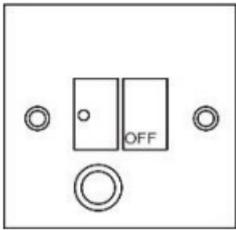


Cleanliness of equipment

Warning

- Avoid scrubbing with an abrasive product or with the bottom of pans, etc., as this will wear away the marks on the top of the ceramic hob over time.
- Clean the glass ceramic hob regularly to prevent the build-up of food residues.
- The appliance must be cleaned after use.
- The surface of the glass ceramic hob can be easily cleaned as follows:

| Type of dirt | Cleaning method | Cleaning products |
|-----------------|--|------------------------------|
| Lime scale | Apply white vinegar to the surface, then wipe it dry with soft cloth | Special cleaner for ceramics |
| Burnt-on stains | Clean with damp cloth and dry it with a soft cloth | Special cleaner for ceramics |
| Light stains | Clean with damp cloth and dry it with a soft cloth | Cleaning sponge |
| Melted plastics | Use a scraper suitable for ceramic glass to remove residue | Special cleaner for ceramics |

By means of a scraper immediately remove any aluminum foil bits, food spills, grease splashes, sugar marks and other high sugar content food from the surface in order to avoid damaging the hob. Subsequently clean the surface with some towel and appropriate product, rinse with water and dry by means of a clean cloth. Under no circumstance should sponges or abrasive cloths be used, also avoid using aggressive chemical detergents such as oven sprays and spot removers.

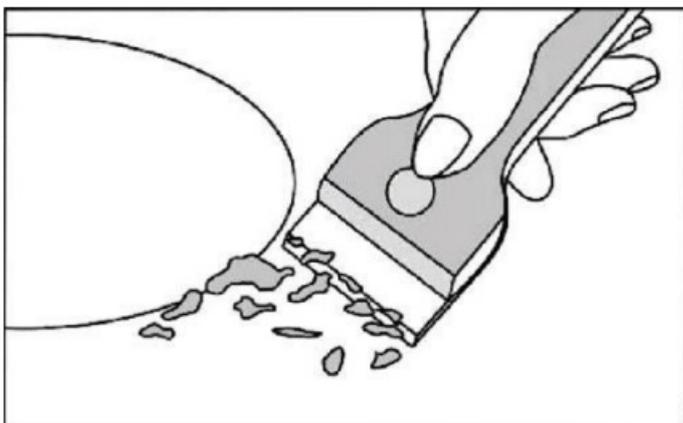

Trouble shooting

- Before calling the after-sales service, check that the appliance is in good condition. correctly connected, the following cases are not covered by the guarantee directive
- Damage caused by improper use, storage or maintenance.
- Damage caused by unauthorized dismantling and repair.
- Damage caused by misuse.
- Use of the glass ceramic hob for commercial purposes.

If an abnormality comes up, the ceramic hob will enter the protective state automatically and display corresponding protective codes:

| Error Message | Possible Cause | What to do |
|---------------|---|--|
| ER03 | Water or pot on the glass over the control | Clean the user interface |
| E | The thermocouple was loose or broken | Please contact the supplier to reconnect the thermocouple. |
| ER21 | The temperature inside the produce was too high | The produce must be stopped and cooling. |

The above are the judgment and inspection of common failures.

Please do not disassemble the unit by yourself to avoid any dangers and damages to the ceramic hob and please contact the supplier.

Specifications

| | |
|-------------------------------|--------------|
| Cooking hob | LIN60C4Z |
| Cooking zones | 4 Zones |
| Supply voltage | 220-240V~ |
| Installed electrical power | 6000W(230V~) |
| Product size L× W× H(mm) | 590X520X52 |
| Built-in dimensions A× B (mm) | 560X490 |

Weights and dimensions are approximate. Because we continually strive to improve our products, we may change specifications and designs without notice.


Installation

Equipment selection installation

Cut the worktop to the dimensions shown in the drawing. For the purposes of installation and use, a minimum space of 5 cm must be left around the hole.

Ensure that the thickness of the worktop is at least 30 mm Choose a heat-resistant work surface material to avoid significant deformation caused by the heat radiation from the hotplate. As shown below:

| L (mm) | W (mm) | H (mm) | D (mm) | A (mm) | B (mm) | X (mm) |
|--------|--------|--------|--------|--------|--------|----------|
| 590 | 520 | 52 | 48 | 560 | 490 | 50 minis |

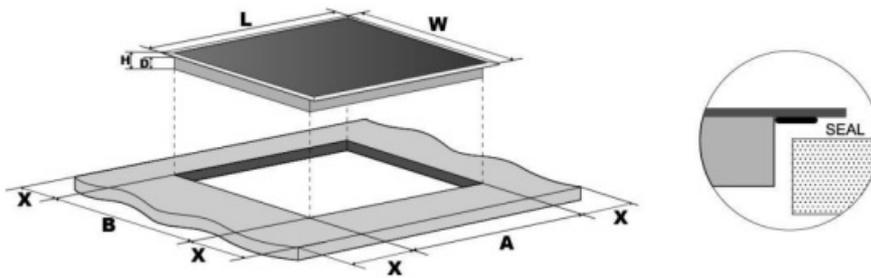


In all circumstances, make sure that the ceramic hob is well ventilated and that the air inlet and outlet are not obstructed. Make sure that the ceramic hob is in good working order. As shown below

| A (mm) | B (mm) | C (mm) | D | E |
|--------|----------|----------|-----------|----------------|
| 650 | 50 minis | 20 minis | Air inlet | 5mm air outlet |



Note: The safety distance between the hob and the cabinet above the hob must be at least 650 mm.

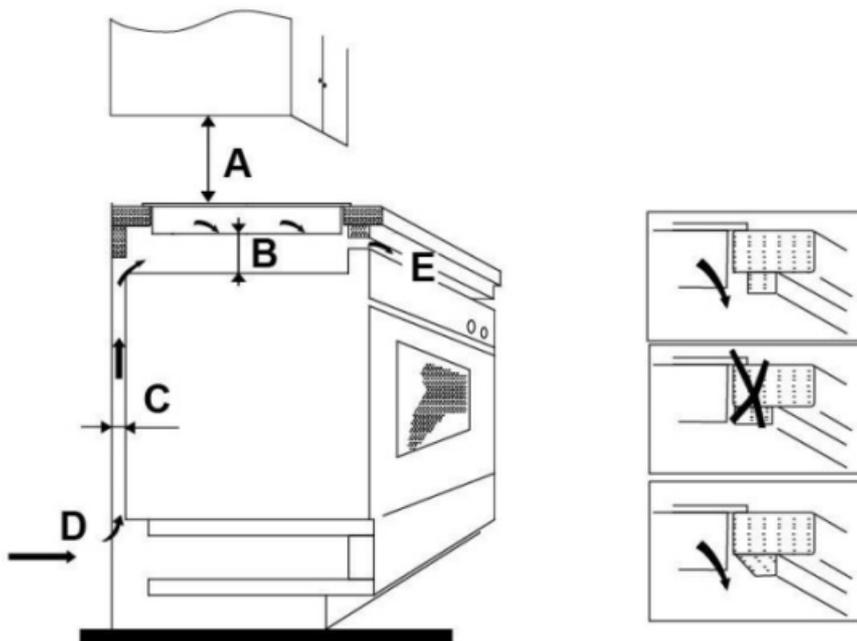

Before installing the hob, check that

- The worktop is square and level, and no structural elements interfere with the space required.
- The work surface is made from heat-resistant material.
- If the hob is installed above an oven, the oven is fitted with a built-in cooling fan.
- The installation will comply with all clearance requirements and applicable standards and regulations.
- A suitable disconnecting switch allowing total disconnection from the mains supply shall be incorporated into the permanent wiring, fitted and positioned in accordance with local wiring rules and regulations. The isolating switch shall be of an approved type and shall provide a contact separation of 3mm air gap in all poles (or in all

active [phase] conductors if local wiring regulations permit this variation of requirements).

- The isolation switch should be easily accessible to the customer when the hob is installed.
- If you are in any doubt about installation, consult your local building authorities and regulations.
- You use finishes that are heat-resistant and easy to clean (such as tiles) for the wall surfaces surrounding the hob.

Once the hob has been installed, check that


- The power cable is not accessible through cupboard doors or drawers.
- There is sufficient fresh air flow from the outside of the cabinet to the base of the hob.
- If the hob is installed above a drawer or cupboard, a thermal protection barrier is fitted under the base of the hob.
- The disconnect or is easily accessible by the customer.

Installation Diagram

Cut the worktop to the dimensions shown (fig. 1) using suitable equipment.


Seal the edge of the worktop with silicone or PTFE and allow to dry before installing the hob.

fig. 1

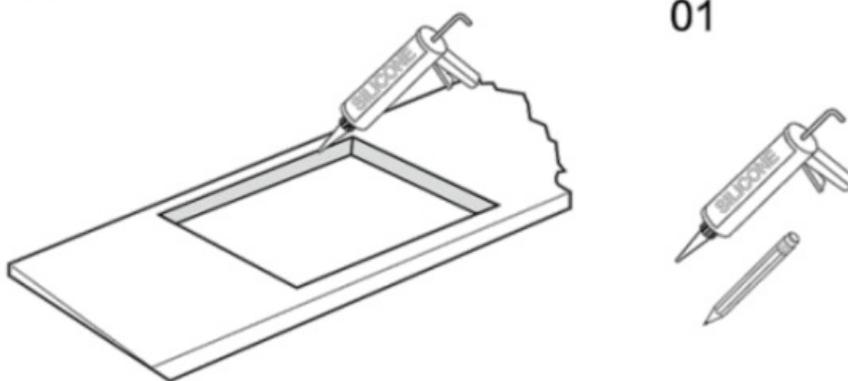


Spread the gasket supplied along the bottom edge of the hob, ensuring that the ends overlap.

fig. 2

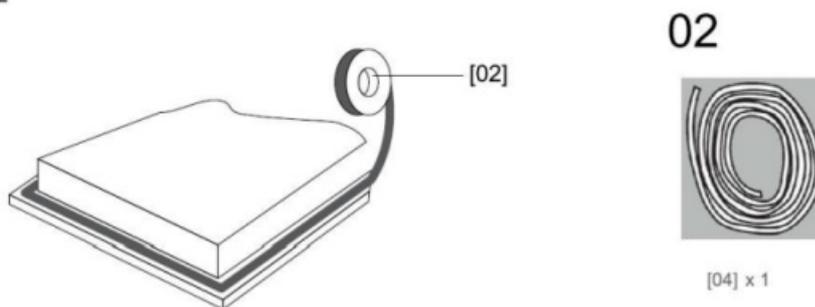

Do not use glue to fix the hob to the worktop. Once the gasket is in place, position the hob in the cut-out in the worktop. Apply slight downward pressure on the hob to press it into the worktop, making sure that it is sealed around the outer edge (fig. 4).

03

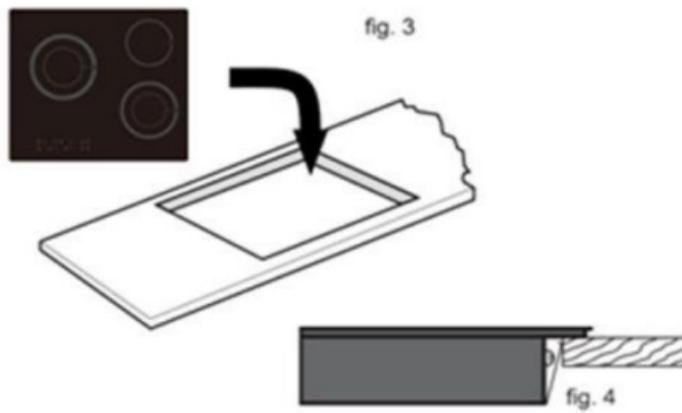


Warnings

1. the ceramic hotplate must be installed by qualified personnel or technicians. We have professionals at your service, never carry out the operation yourself.
2. The hob must not be installed directly above an appliance.
dishwasher, refrigerator, freezer, washing machine or tumble dryer, as moisture may damage the hob's electronic components.
3. The ceramic heating plate should be installed in such a way as to ensure better heat radiation to improve its reliability.
4. The wall and induced-heating zone above the table surface must be heat-resistant.
5. To prevent damage, the sandwich layer and adhesive must be heat-resistant.

Connecting the hob to the mains

This hob must only be connected to the mains supply by a suitably qualified person.

All installation work must be carried out by a competent person or a qualified electrician. Before connecting the power supply, make sure that the mains voltage corresponds to the voltage indicated on the nameplate inside the hood.

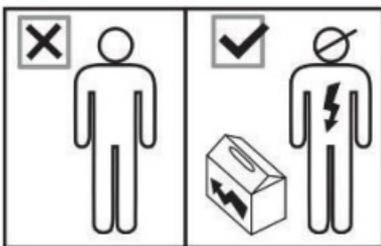

 **Warning:** THIS EQUIPMENT MUST BE CONNECTED.

Before connecting the hob to the mains, check that

1. The domestic wiring system is adapted to the power absorbed by the hob.
2. The voltage corresponds to the value shown on the nameplate.
3. The sections of the power cable can withstand the load specified on the rating plate. Do not use adapters, reducers or branches to connect the hob to the mains, as they may cause overheating and a fire.
The power cable must not come into contact with hot parts and must be positioned so that it is not too long. The

temperature will not exceed 75°C at any time.


- Check with an electrician that the domestic wiring system is suitable without modification. Any modifications must be carried out by a qualified electrician.

This device is supplied with a three-core power cable, colored as follows:

Brown = L or Live

Blue = N or Neutral

⊕ **Green and yellow** = E or EARTH

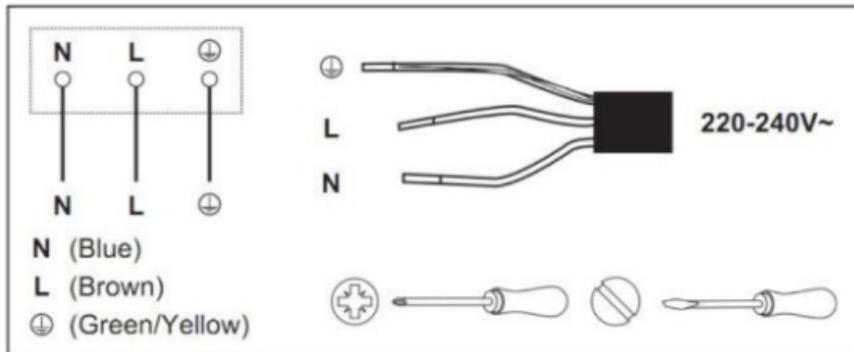

This appliance requires a 32-amp miniature circuit breaker.

- If the cable is damaged or needs replacing, the operation must be carried out by an after-sales agent using specific tools to avoid any accidents.
- If the appliance is connected directly to the mains, a monopolar circuit breaker must be installed with a minimum opening of 3 mm between the contacts.
- The installer must ensure that the electrical connection is correct and complies with safety regulations.
- The cable must not be bent or compressed.
- The cable must be checked regularly and replaced only by authorized technicians.

Information concerning domestic electric cooking hobs

| | Symbol | Value | Unit |
|---|---------------------|----------------------------------|-------|
| Identification of model | | LIN60C4Z | |
| Type of hob | | Ceramic | |
| Number of zones and/or cooking zones | | 4 | |
| Heating technology (zones and induction cooking zones, conventional cooking zones, electric hobs) | | Ceramic cooking zones | |
| For circular cooking zones: diameter of the useful surface by electric cooking zone rounded to the nearest 5 mm | ∅ | Zone 1 : 19.0 Zone 2 : 15.5 | cm |
| For non-circular cooking zones: diameter of the useful surface by electric cooking zone rounded to the nearest 5 mm | L W | — | cm |
| Energy consumption by cooking zone calculated in kg | EC electric cooking | Zone 1 : 178.2 Zone 2 : 202.3 | Wh/kg |
| Energy consumption of cooking hob calculated in kg | EC electric hob | 190.3 | Wh/kg |

Disposal of the Appliance



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labeled in compliance with European directive

2011/65/EU for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warranty & After Sales Service

Observe all safety and warning information during operation (see the “General Safety Instructions” section).

In the event of a fault which you cannot remedy yourself, please contact Linärie.

Warranty

The manufacturer's warranty for this appliance is 2 years.

After sales service

The contact details for Linärie are given at the beginning and of these instructions. When contacting Linärie, please quote the model and serial number of your appliance. These can be found on the data plate, after removing the grease filter.

Replacement of spare parts

Incorrect components can lead to personal injury or damage to the appliance. Use only genuine original Linärie spare parts.

Modifications, additions or alterations to the appliance can lead to safety risks. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Linärie cannot accept liability.

Please check www.linarie.com.au for more information.

Like to Know More?

For further information on all Linärie appliances, or to obtain detailed dimension and installation information, phone or email our Customer Care team or visit our website:

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from our team. Subject to printing errors and mistakes.

All rights reserved.

Operating and installation instructions: Original ✓ Translation

Customer Support

Australia
hello@linarie.com.au
www.linarie.com.au

Follow Us
@Linarie.Appliances



© Linärie

linärie

Documents / Resources

| | |
|---|--|
|  | <p>linarie LIN60C4Z Bellac Induction Hob [pdf] Instruction Manual LIN60C4Z, LIN60C4Z Bellac Induction Hob, LIN60C4Z, Bellac Induction Hob, Induction Hob</p> |
|---|--|

References

- [Linarie France](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.