



LINEA DO8147 Table Fan Instruction Manual

[Home](#) » [Linea](#) » LINEA DO8147 Table Fan Instruction Manual 

Contents

- [1 LINEA DO8147 Table Fan Instruction](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 PARTS](#)
- [4 BEFORE THE FIRST USE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 ENVIRONMENTAL GUIDELINES](#)
- [7 WARRANTY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

LINEA®

LINEA DO8147 Table Fan Instruction



SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- Read all instructions carefully. Keep this manual for future reference.
- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time. Make sure children cannot play with the packaging materials.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 16 and supervised.
- Keep the appliance and its cord out of reach of children younger than 16 years.
- Attention: This appliance cannot be used with an external timer or a separate remote control.
- Before use, check if the voltage stated on the appliance corresponds with the voltage of the power net at your home.
- Never use the appliance when the cord or plug is damaged, after a malfunction or when the appliance itself is damaged. In that case, take the appliance to the nearest qualified service center for a check-up and repair.
- Close supervision is necessary when the appliance is used near or by children.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock

or injuries.

- Unplug the appliance when it is not in use, before assembling or disassembling any parts, and before cleaning the appliance. Put all buttons and knobs into the 'off' position and unplug the appliance by grasping the plug. Never unplug by pulling the cord.
- Do not leave a working appliance unattended.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.
- Do not use the appliance outdoors.
- Only use the appliance for its intended use.
- Always use the appliance on a steady, dry, and level surface.
- Only use the appliance for domestic use. The manufacturer can not be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- All repairs should be carried out by the manufacturer or its aftersales service.
- Never immerse the appliance, the cord, or the plugin in water, or any other liquid.
- Make sure that children do not touch the cord or appliance.
- Keep the cord away from sharp edges and hot parts or other heat sources.
- Before use, remove all packaging materials and any promotional stickers.
- Do not insert any objects into the fan, as this may cause electric shock, injuries or damage to the appliance. Do not block or tamper with the fan when it is operating.
- Do not use this fan in any wet or humid areas. Do not place the fan too close to a bathtub or any other water container.

PARTS



1. Grill with fan blades
2. Metal tube
3. Base
4. On/off button with indicator lights

5. Charging station
6. Charging cable

BEFORE THE FIRST USE

- Carefully remove the device from the packaging. Remove any promotional stickers.
- Clean the outside of the device with a soft damp cloth.

USE

Make sure the device is fully charged. Charge the device by connecting the fan itself or via the charging station. This is possible with the charging cable included. Press the power button to turn on the device. The fan will start at its lowest speed (1). Each press of the button will increase the speed to a maximum of 4. The selected speed setting can be seen by the number (1-4) of lit indicator lights. Press the button again to switch off the device.

Note: Hold the on/off button to switch the device off without having to go through all the speed settings.

Fan direction

To adjust the direction of ventilation up or down, push the fan head up or down.

Charging

1. The first indicator light will flash if the battery is low. The fan will then stop. This is to let you know that the device must be charged.
2. Plug the charging cable into the device or the charging station. Note: if you want to charge the device via the charging station, you must place the fan on the charging station.
3. The red indicator light will illuminate to indicate that the device is charging.
4. If the first indicator light stays on, the fan is charged and ready for use.

Note: you can still use the fan while it is charging. If the fan is at speed one, the first indicator light will still flash on and off. If you choose a higher speed, the corresponding indicator light will light up. The first indicator light will continue to flash.

CLEANING AND MAINTENANCE

- This fan requires very little maintenance. Never try to repair the fan yourself. If it is defective, have it checked and/or repaired by a qualified person.
- Prior to assembling the fan or cleaning it, remove the plug from the outlet.
- Keep the rear grill free of dust and other substances in order to allow free circulation of the air around the motor. Do not disassemble the fan to remove dust from the motor.
- You may clean the exterior of the machine with a soft moist cloth.
- Never use corrosive or abrasive products to clean the machine.
- Make sure that no water gets into the motor of the machine.

ENVIRONMENTAL GUIDELINES

This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it must be brought to the applicable collection point for the recycling of electrical and electronic


equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. The packaging is recyclable. Please treat the packaging ecologically.

WARRANTY

This appliance has a two-year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions, or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty. If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it. The guarantee on accessories and components that are liable to wear and tear is only 6 months. The guarantee and responsibility of the supplier and manufacturer lapse automatically in the following cases:

- If the instructions in this manual have not been followed.
- In case of incorrect connection, e.g., the electrical voltage that is too high.
- In case of incorrect, rough, or abnormal use.
- In case of insufficient or incorrect maintenance.
- In case of repairs or alterations to the device by the consumer or non-authorized third parties.
- If the customer used parts or accessories that are not recommended or provided by the supplier/manufacturer.

Documents / Resources

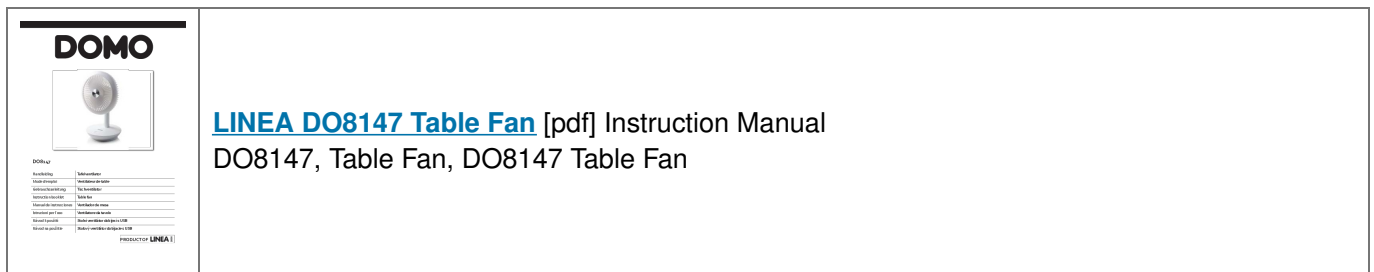

References

- www.ELEKTROKOLA.cz - Crussis, Ghost, Kellys, Leader Fox, Pells, Specialized - doprava zdarma