



Home » Lingke Audio » Lingke Audio T5 Shanming Speaker User Manual 📆

Contents [hide]

- 1 Lingke Audio T5 Shanming Speaker
- 2 SPECIFICATION
- 3 PACKING LIST
- **4 FUNCTION DESCRIPTION**
- **5 INDUCTION AREA**
- **6 PRECAUTIONS**
- 7 Documents / Resources
 - 7.1 References

Lingke Audio

Lingke Audio T5 Shanming Speaker




SPECIFICATION

- Frequency response 40Hz-23KHz(+/-3dB)
- SNR (Mid and Treble) 7OW=110dB(+A) (Bass)
- Voltage 100-240V 50/60Hz, 2.1A

- Power handling 100W
- Impedance 40hm
- Standby power consumption ≤ 0.5W
- Bluetooth available distance ≤15m

PACKING LIST

- 1. LK T 5 Master Speaker
- 2. LK T 5 Slave Speaker
- 3. Gloves
- 4. Envelope
- 5. User Manual
- 6. Wiping Cloth
- 7. Warranty Card
- 8. Power Cord

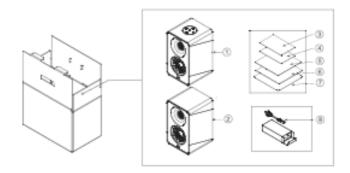

FUNCTION DESCRIPTION

LED Light — Red, White, Blue

- Solid red Standby mode
- Solid white AUX /OPT input
- Solid blue Bluetooth input
- Fast flash blue Bluetooth pairing mode
- Slow flash blue Speaker Bluetooth is searching for the last connected device






INDUCTION AREA

Put your hand about 100mm close to the induction area, and the LED lights will be on. The light will be off 5 seconds later without any operation, and 20 seconds later with operation.

- 1. The two speakers will be auto—paired after powering on.
 - When the master speaker is connected with power, the LED light on top willbe red
 flash for 3 times, then press POWER ON button, you will see the LED on top
 flash one time, and the LED for pairing at back side of speaker will be slow flash
 white searching for slave speaker, The LED for pairing at back will be solid white
 and the top LED light will be solid red after successful pairing.
 - When the slave speaker is connected with power, the LED for pairing on the back side of the speaker will be fast flash white in 10 seconds, searching for the master speaker, and will be solid white after successful pairing.

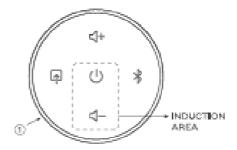


MASTER SPEAKER

- 2. Input selection (BT/AUX/OPT)
- 3. Power button
 - Press 1 second to power it on
 - Long-press 3for seconds to power it off
- 4. Volume down
- 5. Volume up
- 6. Bluetooth button
 - Long-press for 3 seconds to disconnect the current connection and search for a

new device.

 - 7. Subwoofer output
- 8. 2.5mm service port
- 9. Pair button
 - Press 1 second to search quickly
 - Long-press S seconds to search for the slave speaker for 5 minutes
 - Short press 1 *quite pair the status
- 10. LED for pairing indication(white)
 - When the aster speaker is pairing, the white light is a slow flash.
 - The white light is off after 5 seconds if the pairing fails.
 - The white light is solid if the pairing is successful,
- 11. AUX 3.5mm input, 3.5mm optical input
- 12. Power input AC 100-240V 50/60Hz




Small Tips for Volume Control

If you still feel the volume is high even you've already adjusted it to the minimal volume I evel "1" on Hphone, you can continue to reduce the volume by another 3 level (0.3, 0.2, 0 1) on master speaker, Hat this time the mobile phone or APP still show volume level is "1"

FUNCTION DESCRIPTION: SLAVE SPEAKER

- 1. Subwoofer output
- 2. 2.5mm service port
- 3. Pair buttonPress 1 second to search quickly
 - Long-press S seconds to search the master speaker for 5 minutes
 - Short press 1, quite paired status
- 4. LED for pairing indication(white)

- White light is a fast flash when the slave speaker is pairing
- White light is off if pairing fails.
- White light is solid on if the pairing is successful.
- 5. Power input: AC 100-240V 50/60Hz

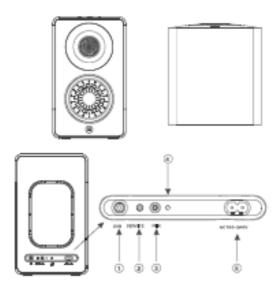

Press the power button, and the LED light is not on

- Check whether the plug is powered on.
- Check whether the power plug is tightly inserted.
- Check whether the power cord is properly inserted into the product

The button does not work

- The keys are controlled by touch. When the hands are very dry or when they are operated with gloves, the keys will not work.
- Unplug the power cable, wait 20 seconds, plug it in again, wait another 10 seconds, then press the power button.

The product(Lingke Listening T 5) cannot be found by mobile phone Bluetooth.

- Please check whether the Bluetooth on the mobile phone is turned on. If yes, turn off Bluetooth and turn it on again for searching.
- Long-pressthe Bluetooth button for more than 3 seconds. When you see the blue light flash, please use your pphone to search for it again..

The phone volume is out of sync with the product volume(Lingke Listening T 5)

- Please check whether the Bluetooth on the mobile phone is turned on. If yes, turn off Bluetooth and turn it on again for searching.
- Long-press the Bluetooth button for more than 3 seconds. When you see the blue light flash, please use your phone to search for it again.

PRECAUTIONS



Warning

This device complies with Part IS of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However. There is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm from the radiator body.

The device, its antenna(s) must not be co-located or oopeoperatedjunction with any other antenna or transmitter.

Documents / Resources



<u>Lingke Audio T5 Shanming Speaker</u> [pdf] User Manual 2A83V-LISTENINGT5, 2A83VLISTENINGT5, listeningt5, T5 Shanming Speaker, T5, Shanming Speaker, Speaker

References

• <u>User Manual</u>
■ Lingke udio ■ 2A83V-LISTENINGT5, 2A83VLISTENINGT5, Lingke Audio, listeningt5, Shanming Speaker, speaker, T5, T5 Shanming peaker
_eave a comment
our email address will not be published. Required fields are marked*
omment *
ame
mail
/ebsite
Save my name, email, and website in this browser for the next time I comment.
Post Comment
Search:
e.g. whirlpool wrf535swhz

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.