

Link tech LPS-M405 TWS Wireless Box Speaker User Manual

Home » LINK TECH » Link tech LPS-M405 TWS Wireless Box Speaker User Manual



Link tech LPS-M405 TWS Wireless Box Speaker



Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

Contents

- 1 INFORMATION
- **2 ACCESSORY**
- **3 MAIN FUNCTION**
- **4 CHARGE THE BATTERY**
- **5 SPECIFICATIONS**
- **6 AUDIO INPUT JACK**
- **7 WIRELESS CONNECTION**
- 8 TWS (True Wireless Stereo)
- 9 FEATURES
- 10 REMOTE CONTROL
- 11 CONTROL PANEL
- 12 SYSTEM

CONFIGURATION

- **13 SAFETY MEASURES**
- 14 CUSTOMER SUPPORT
- 15 Documents / Resources
 - 15.1 References
- **16 Related Posts**

INFORMATION

Thank you for choosing our product, please read this manual to avoid damage to the item.

ACCESSORY

S/N	Items	Qty
1	Remote controller	1
2	User manual	1
3	Charging cable	1

MAIN FUNCTION

- · Wireless connection
- USB & TF port
- Audio input
- Digital display

CHARGE THE BATTERY

When the battery is charging the CHARGE STATUS flashing. After the battery has fully charged, CHARGE STATUS light up.

- 1. Connect the AC/DC adaptor to the DC9V IN jack of the speaker firmly, and plug it into a wall outlet.
- 2. When the battery is fully charged, first disconnect the AC/DC adaptor from the speaker, then from wall outlet.

3. Do not use speaker when charging.

SPECIFICATIONS

Model	LPS-M405	
Bluetooth Version	V5.0	
UHF Transmission Distance	30m	
Rated Power	40W	
Play Time	3-4 HOURS	
Distortion	1% (1W 1KHz)	
Charging Time	3-4 HOURS	
S/N Ratio	80dB	
Net Weight	4.1kgs/UNIT	
Packing	328 X 288 X 407 mm	

AUDIO INPUT JACK

- 1. Connect an audio cable (not included) to the AUDIO INPUT jack of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman etc, then select line by pressing the mode button on the front panel
- 2. Play from an external audio device

WIRELESS CONNECTION

Please press MODE button on control panel to select Wireless BT connection mode.

Simultaneously open the Wireless BT connection setting on your phone, tablet or any other Wireless BT connection enabled audio device and select (no need to match code), the unit and device will then connect via Wireless BT connection.

Press the NEXT song and PREV song button on the control panel to select the song, or press PLAY/PAUSE button to control the playing status

TWS (True Wireless Stereo)

- 1. After both machines (same model) startup, switch to Bluetooth mode
- 2. Search for the Bluetooth name and connect
- 3. Long press the "PLAY/PAUSE"
- 4. The two machines are automatically matched and TWS stereo playback


FEATURES

- · Portable speaker with RGB lights.
- Bass/Treble/Echo/Mic vol/Mic in

- · Long lasting rechargeable battery.
- Wireless version 5.0, with TWS function, support connection of two speakers simultaneously for a stereo effect.
- Supports wireless music, FM radio, USB-flash etc.
- 4 types of placement method (Monitor Tilt back Speaker bracket Plane frame height).

REMOTE CONTROL

- 1. MUTE Press to mute audio output, and press again to resume
- 2. Press this button to toggle between the various inputs (AUX, USB, TF, FM, BLUETOOTH).
- 3. **REC** Press this button to start recording.
- 4. VOL+ Press this button to increase the master volume for the unit.
- 5. Press to start playing/pause, In FM mode, press to tune with jumps of 0.1 MHz
- 6. Press this button to select the previous song/ channel.
- 7. **VOL-** Press this button to reduce the master volume for the unit.
- 8. Press this button to repeat one/repeat all.
- 9. **REC PLAY** Press this button to play the recording or exit recording function
- 10. Press this button to select the next song/ channel.
- 11. EQ Press this button to the EQ mode of Flat, Jazz, Rock, Pop, Classical.
- 12. Numeric keys 0-9, Key number for selecting certain songs in the USB/TF Card MODE.

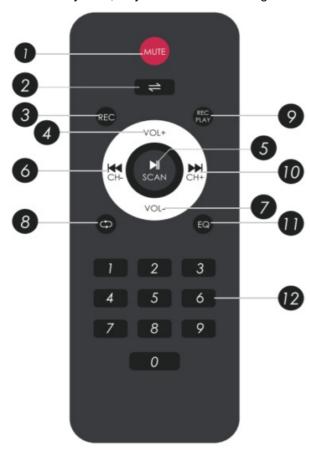

CONTROL PANEL

1. CHARGE (Charge/battery status indicator)

- 2. VOLUME (Master volume button)
- 3. LINE (Audio input)
- 4. Display (It is a display to show the function out)
- 5. NEXT (Next song)
- 6. PLAY/PAUSE (Play or Pause function)
- 7. PREV (Previous song)
- 8. MODE (Mode change button)
- 9. TF CARD (TF card input)
- 10. USB (USB slot)
- 11. BASS (Bass button)
- 12. TREBLE (Treble button)
- 13. ECHO (ECHO volume button)
- 14. MIC VOL(Microphone volume button)
- 15. MIC IN/GUITAR (Microphone input/Guitar input)
- 16. AC INPUT(110V-240V 50/60Hz AC input)
- 17. POWER SW: Power switch
- 18. DC 12V input




SYSTEM CONFIGURATION

The multifunctional system can be used in four unique modes. Under the function of AUTO EQ (self-service EQ), the system will automatically adjust the sound quality for various playing directions to maintain the best tone balance

You can quickly find the most suitable mode for the desired purpose through the following example.

PLANE FRAME HEIGHT

Place the machine on a flat surface. This placement method can project sound clearly and evenly, ensuring that you can fully enjoy the full-band effect of the system.

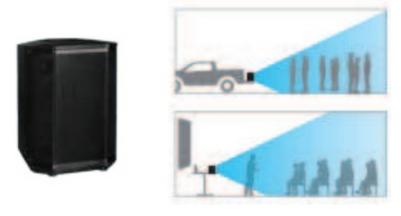

TILT BACK

In a performance where the audience is closer to you. Please tilt back with the rear side of the machine as the fulcrum. In order to achieve the best performance of sound quality, it is recommended that performers stand or sit at the side of the speakers to avoid blocking the speakers so that the audience can directly hear the sound emitted by the speakers.



MONITOR


If you want to use the machine as a personal floor monitor speaker, place it horizontally on the floor in front of the performer and face the performer. The speaker should be tilted upward with its side on the ground.



SPEAKER BRACKET

Place one or two machines on the speaker bracket (sold separately) to meet various broadcast effects.



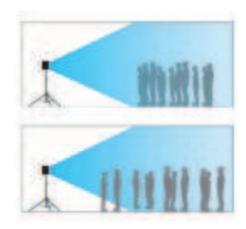

SAFETY MEASURES

To ensure proper use of this product, please take the time to read this instruction manual carefully before use. Please

observe all the instructions about safe operation and please keep this instruction manual in a safe place for future reference.

- 1. Protection of power supply wire: Do not place the cable in the path of foot traffic. Do not place heavy furniture on the cable. Never pull the cable to unplug the unit from the socket, always disconnect the unit from the main power supply by pulling the plug out of the socket.
- 2. Ventilation: In order to prevent this unit from overheating, place it in a well-ventilated area on stable surface. Never place it on a bed, sofa or carpet where the ventilation will be restricted.
- 3. Dismantling: In order to avoid the risk of electric shock, do not dismantle the unit. Should your unit be faulty or broken please refer servicing to an authorized service center.
- 4. Strange odour: Should your unit emit any strange odour, immediately unplug it from the wall socket. Do not use the unit again until you have had it repaired by a qualified service center.
- 5. Do not expose this unit to liquid of any kind.

CUSTOMER SUPPORT

İmalatçı Firma
LINK-TECH TRADING COMPANY LIMITED
FLAT 609A,6/F. FOOK CHONG BUILDING 63 HOL YUEN
ROAD,KWUN TONG.KOWLOON.HONG KONG
TEL:3114 7567





Documents / Resources



<u>Link tech LPS-M405 TWS Wireless Box Speaker</u> [pdf] User Manual LPS-M405, LPS-M405 TWS Wireless Box Speaker, TWS Wireless Box Speaker, Wireless Box Speaker, Box Speaker, Speaker

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.