



Link tech LPS-M407 Retro Design Wireless Speaker User Manual

[Home](#) » [LINK TECH](#) » Link tech LPS-M407 Retro Design Wireless Speaker User Manual 



**PREMIUM
VIP PRODUCT**

Hello !

**Model: LPS-M407
Retro Design Wireless Speaker
User Manual**

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

Contents

- 1 LPS-M407 Retro Design Wireless Speaker**
- 2 Features**
- 3 Specification**
- 4 Functional Operations and Features**
- 5 Documents / Resources**
 - 5.1 References**

LPS-M407 Retro Design Wireless Speaker

Dear Customer

Thank you for choosing LinkTech's products, we appreciate your choice to purchase this product and we're hoping that you'll have a great time using our product.

Please share your experience with our products through LinkTech's customer services center either by phone, Whatsapp or Bip.

Feel free to express your opinions or tell us your suggestions on our channels.

LinkTech will happily review all your invaluable feedback in order to improve our products and services.

If you encounter any problem or have difficulties with this product, please refer to the User's Manual, you can contact our customer services if you have any further questions.

LinkTech considers your priceless recognition and support as an encouragement to stay focused on providing high quality products and a motivation to move forward, improve our services and expand our workspace in the future.

LinkTech's Sales Team

PREMIUM WIRELESS KARAOKE SPEAKER



Features

1. Large magnetic coils with delicate diaphragm for a shocking low-frequency bass, and a perfect medium to high-frequency presentation.
2. Advanced chip with MP3 decoding capability, supporting reading MP3 files from up to 32GB USB flash drive.
3. FM Radio reception: high-quality digital radio with automatic channel search and storage of up to 30 channels.
4. 3.5mm AUX audio input for connection capability to a wide range of sound devices.
5. Built-in high-capacity battery for consecutive playback of up to 2 hours.
6. 6.35mm microphone input with adjustable Reverberation, Voice, and Karaoke functions to offer outstanding singing and party experience.
7. Built-in battery's recharging protection for a stable and longer service life.
8. Indicator for low battery and fully charged statues.
9. Comes with belt/handle allow it to be carried more easily.
10. Support Bluetooth v5.0 features and TWS function which allows to match two speaker simultaneously for a true stereo effect.


Specification

| | |
|--------------------|--------------------------|
| Model | LPS-M407 |
| Output Power | 50W |
| Speaker | 5.25 inch +1.5 inch x2 |
| Disortion | ≤1% |
| S/N Ratio | 80dB |
| Battery | 7.4V 3000mAhx2 (6000mAh) |
| Frequency response | 100HZ-20KHZ |
| Product Size | 290x160x195mm |
| AUX Mode | 3.5mm AudioJack |
| TF Card Mode | Max 32G TF card |
| USB Mode | Max 32G USB-A |
| Charging Method | USB Type-C 5V/3A |

The bluetooth pairing operation and related parameters

1. Power on the speaker to enter Bluetooth Mode.
2. Switch on the Bluetooth function on your mobile phone and start searching for a new device, when your phone shows “Link-M407” in your bluetooth’s devices list, click on connect button.
Normally mobile phone connections do not need password, if a password is needed , please input ”0000” as a password to go on with the process of pairing. If pairing is completed, the speaker will send out a voice prompt to indicate the success of bluetooth pairing between your mobile phone and the speaker.
3. After pairing process, any music or audio content that you’re playing on your mobile phone will be directly produced on the speaker for more immersive and powerful listening experience.

Functional Operations and Features

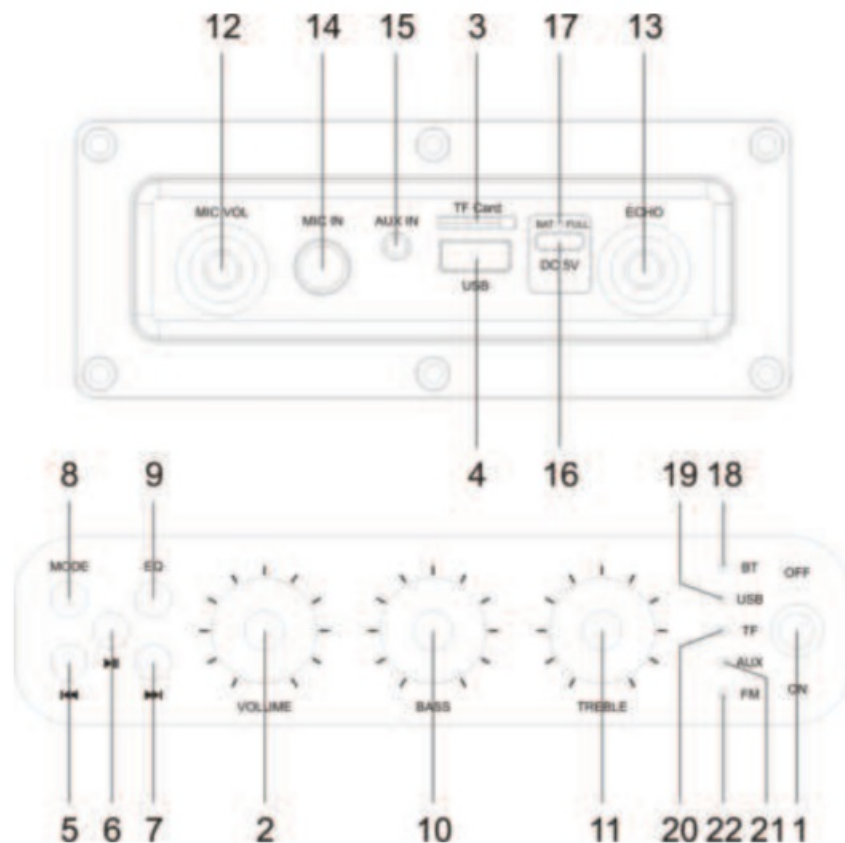

1. OFF/ON: Power Button.
2. Master Volume Knob: In USB/ TF Card/ AUX/ Bluetooth/ FM Modes, use it to adjust (increase and decrease) the speaker's volume output.
3. TF Card Slot: read MP3 audio files from any FAT32 formatted Micro SD Card (Maximum supported size is 32GB)
4. USB-A Port: read MP3 audio files from any FAT32 formatted USB drive (Maximum supported size is 32GB).
5. ⏮ : In USB/ TF Card/ Bluetooth Modes: short press to go back to previous track. In FM Receiving Mode: short press to select the previous channel after a full channel scan has been executed.
6. ⏸ / SCAN: In USB/ TF Card/ Bluetooth Modes: short press to play/ pause current track. In FM Receiving Mode: long press to execute a full channel scan (it is recommended to execute at least one full scan before using radio receiving function. All founded channels will be saved even in after the speaker power is off). In AUX Mode / FM Radio Mode: short press to toggle between mute / unmute the speaker volume.
7. ⏭ In USB/ TF Card/ Bluetooth Modes: short press to go to next track. In FM Receiving Mode: short press to select the next channel after a full channel scan has been executed.
8. **Mode/ TWS Button:** Short press it to toggle between USB/ AUX/ Bluetooth/ FM Receiving modes.
TWS Mode: open the two speakers that need interconnection at the same time, switch to bluetooth mode at the same time, Pair one of them with mobile phone's bluetooth to play music, then long press TWS Button on the speaker to connect with the other speaker. After successful connection, synchronous music will be played. Long press the Mode/ TWS Button on the speakers to exit TWS mode.
9. EQ Button: In USB/ AUX/ Bluetooth/FM Reading Modes: Short press to select an equalizer mode such as: Normal, Pop Music, Rock and Roll, Jazz Music, Classical Music, Custom Plan).
10. BASS Knob: adjust bass level.
11. TREBLE Knob: adjust treble level.

12. Microphone Knob: adjust microphone volume level
13. Echo Knob: Adjust microphone reverberation (echo effect) level.
14. 6.35mm Microphone Input: Microphone input jack
15. 3.5mm AUX IN: for easy connecting any external audio device (Plug and Play type)).
16. USB Type-C Recharging Port: DC 5V 3A input.
17. Charging Indicator Light: Red Light that turns ON when recharging battery, when the speaker's battery is fully charged, Red Light will turn OFF.
18. Bluetooth Indicator.
19. USB Indicator.
20. TF Card Indicator.
21. AUX Indicator.
22. FM Radio Indicator.


Please be sure to recharge the speaker when the output audio start to be distorted.



CE İmalatçı Firma

LINK-TECH TRADING COMPANY LIMITED
FLAT 609A,6/F. FOOK CHONG BUILDING 63 HOL YUEN
ROAD,KWUN TONG.KOWLOON.HONG KONG
TEL:3114 7567

Documents / Resources

| | |
|--|--|
|  <p>Hello!</p> <p>Model: LPS-M407 Retro Design Wireless Speaker User Manual</p> | <p>Link tech LPS-M407 Retro Design Wireless Speaker [pdf] User Manual LPS-M407, LPS-M407 Retro Design Wireless Speaker, Retro Design Wireless Speaker, Wireless Speaker, Speaker</p> |
|--|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.