


iCUE LINK LX
RGB PWM Fans



iCUE LINK LX RGB PWM Fans User Guide

[Home](#) » [Link](#) » iCUE LINK LX RGB PWM Fans User Guide 

Contents

- [1 iCUE LINK LX RGB PWM Fans](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PACKAGE CONTENTS](#)
- [5 GETTING TO KNOW YOUR LX RGB FANS](#)
- [6 FAN INSTALLATION](#)
- [7 SOFTWARE SETUP](#)
- [8 FAQ](#)
- [9 POWER RATING](#)
- [10 WARRANTY](#)
- [11 LEGAL](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



iCUE LINK LX RGB PWM Fans



Product Information

Specifications:

- **Product:** iCUE LINK LX RGB Fans
- **Size:** 120mm or 140mm
- **Components:** 1 Fan, 1 iCUE LINK Cable, 2 Connectors, 4 QuikTurn Mounting Screws

Product Usage Instructions

Getting to Know Your LX RGB Fans:

The LX RGB Fan kit includes components such as the iCUE LINK LX RGB Fan, iCUE LINK System Hub, QuikTurn Mounting Screws, Active Bridge Connector, Passive Connector, iCUE LINK Cable, Micro-USB Cable, Power Cable, Active Port, and Passive Port.

Getting to Know Your iCUE LINK System Hub:

The iCUE LINK System Hub features Active Port, Power Input, USB Input, and Tach Output. Ensure the active ports are free of foreign objects before installation.

Fan Installation:

Before You Start:

- Ensure the computer is turned off before installing the LX RGB and accessories.
- Use only the specified LX RGB components mentioned in the manual.

Starter Kit Installation:

1. Create or Add Into a Fan Group:

- Connect the LX RGB fan to an existing fan group by aligning and inserting the connectors into the active and passive ports.

2. Set Up the LX RGB Fan Group:

- After connecting fans, insert the iCUE LINK cable into an active port on one of the fans.

3. Install LX RGB Inside the Case:

- Mount the fans using QuikTurn screws and hand-tighten with a screwdriver.
- Connect power cable, Micro-USB cable, and iCUE LINK cable to the System Hub. Connect power and USB cables to power supply and motherboard.

4. Mount iCUE LINK System Hub to Your Case:

- The System Hub can be magnetically mounted on a steel chassis or adhered to a surface with the supplied tape.

Expansion Fan Installation:

To install the Expansion Fan, follow similar steps as for the Starter Kit installation by connecting it to an existing fan group.

FAQ:

Q: Can I use the LX RGB fans without the iCUE LINK System Hub?

A: No, the iCUE LINK System Hub is essential for controlling and syncing the RGB lighting on the fans.

PACKAGE CONTENTS



Expansion Fan



- One (1) Fan


- One (1) iCUE LINK Cable
- Two (2) Connectors
- Four (4) QuikTurn Mounting Screws

GETTING TO KNOW YOUR LX RGB FANS

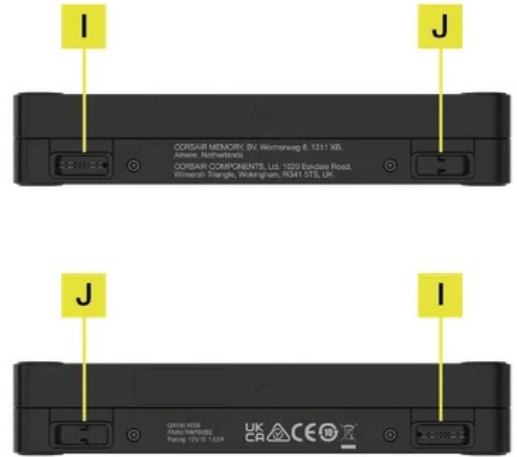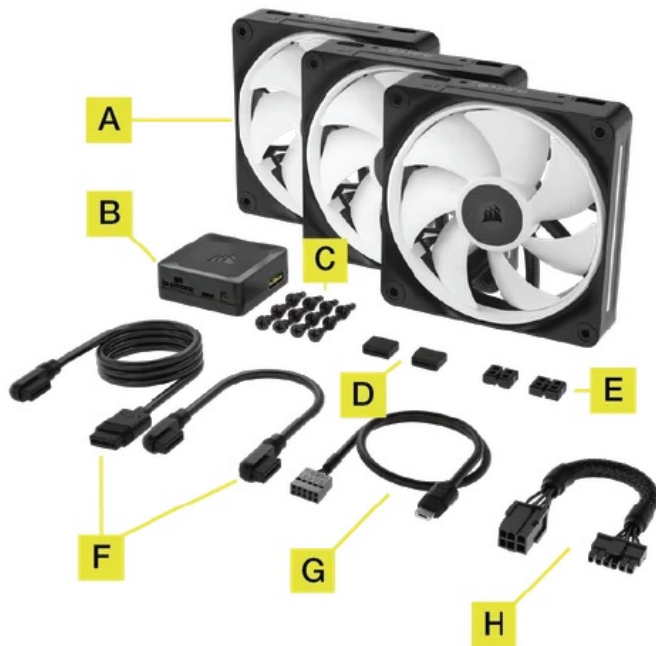

- **A.** iCUE LINK LX RGB Fan
- **B.** iCUE LINK System Hub
- **C.** QuikTurn Mounting Screws
- **D.** Active Bridge Connector
- **E.** Passive Connector
- **F.** iCUE LINK Cable
- **G.** Micro-USB Cable
- **H.** Power Cable
- **I.** Active Port
- **J.** Passive Port

GETTING TO KNOW YOUR iCUE LINKSYSTEM HUB

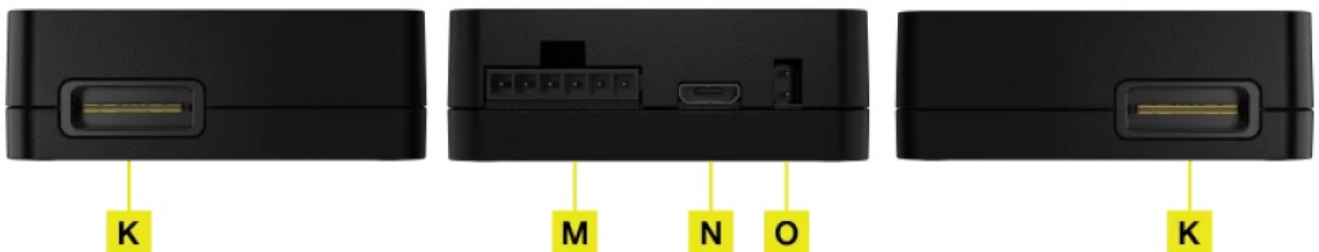

- **I.** ActivePort
- **K.** **Power** Input
- **L.** USB Input
- **M.** TachOutput

FAN INSTALLATION


BEFORE YOU START

- To ensure proper operation, keep the active ports free of any foreign objects/materials. Please use the LX RGB and accessories as defined in this document.
- Turn the computer off before the installation of the LX RGB and accessories.

STARTER KIT


Create or Add Into a Fan Group

Connect the LX RGB fan to an existing fan group by aligning and inserting the connectors into the open active (I) and passive ports (J).

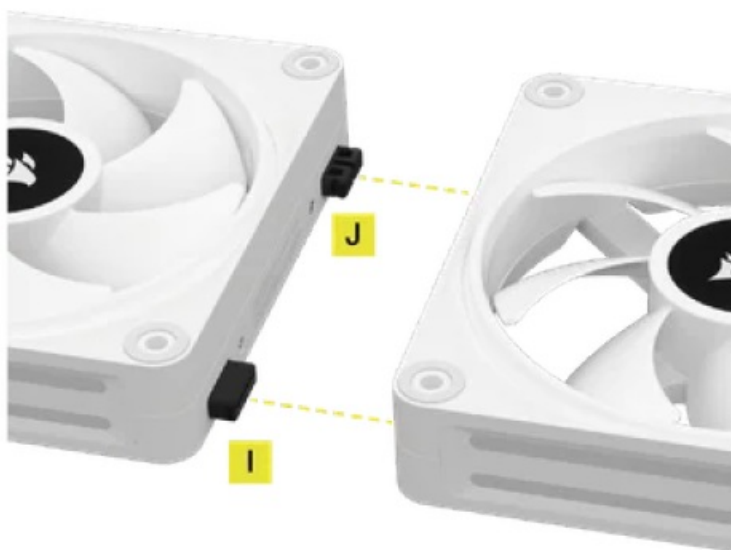


Set Up the LX RGB Fan Group

After connecting your LX RGB fan, insert the iCUE LINK cable (F) into an open active port (I) on one of your LX RGB fans.

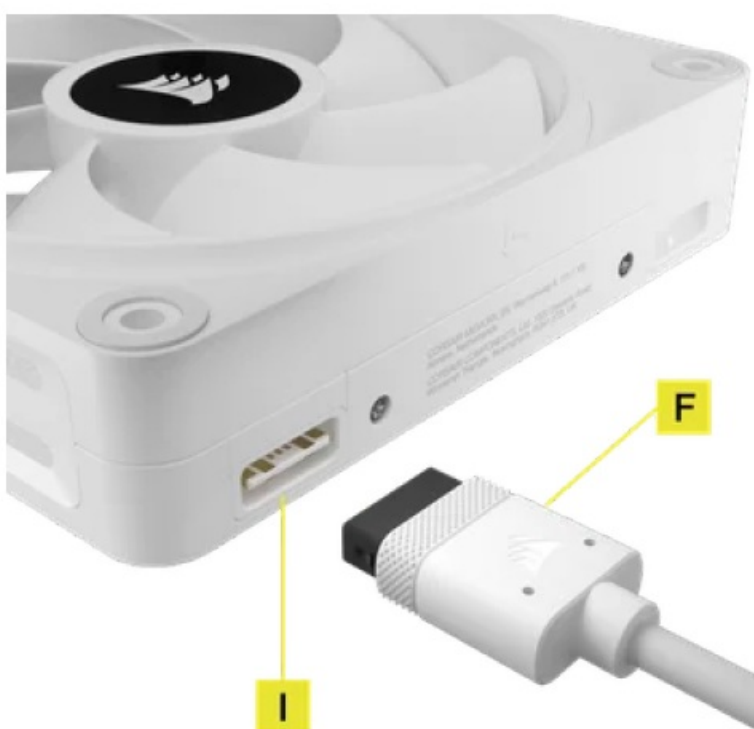


Install LX RGB Inside the Case

- Mount the LX RGB fans onto your case with the supplied QuikTurn mounting screws (C).
- Please note that QuikTurn screws thread much faster than traditional self-tapping screws; we advise only hand-tightening QuikTurn screws with a screwdriver to avoid over-threading your LX RGB fans.

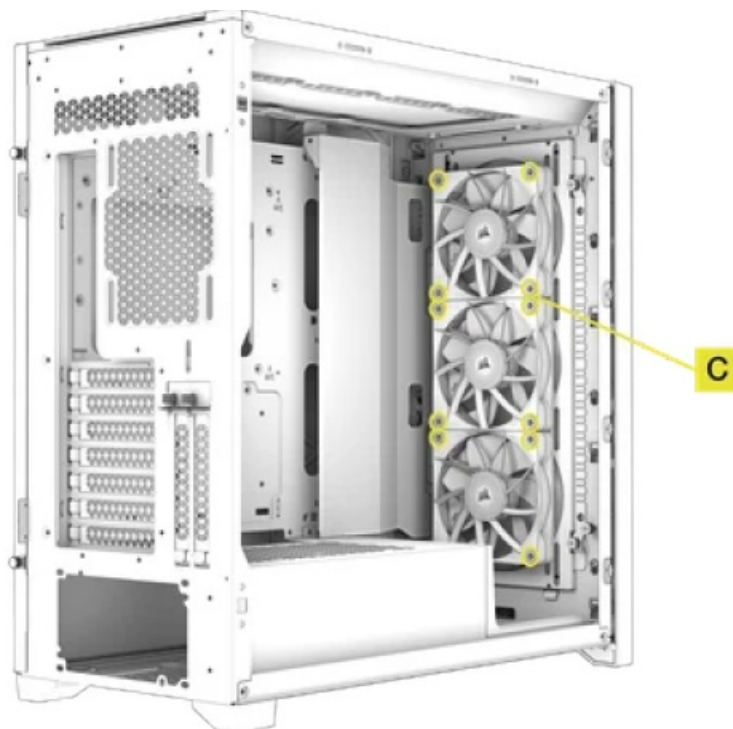


Connect Fan to iCUE LINK System Hub

Connect the power cable (H), Micro-USB cable (G), and iCUE LINK cable (F) into the system Hub (B), then connect the power cable (H) and Micro-USB cable (G) into your power supply and motherboard, respectively.

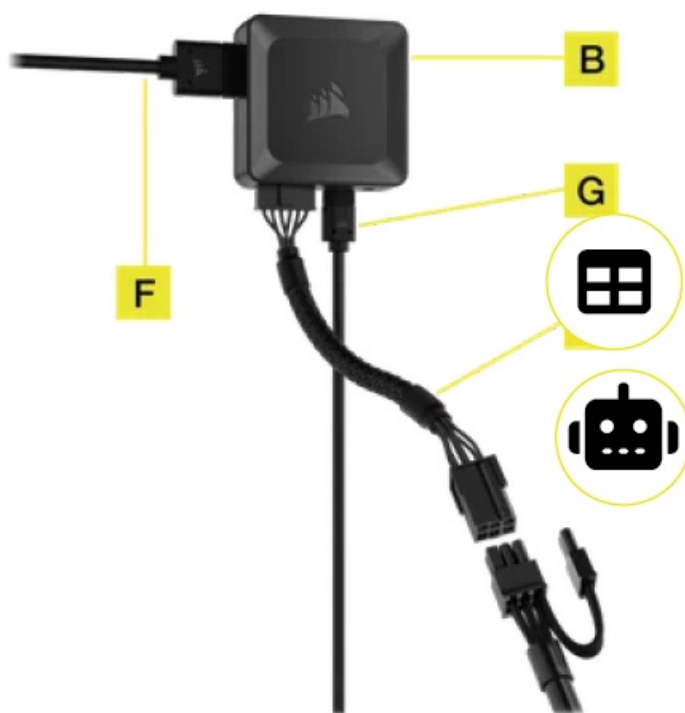

Mount iCUE LINK System Hub to Your Case

The iCUE LINK System Hub (B) can be magnetically mounted on a steel chassis or adhered to a surface with the supplied mounting tape.

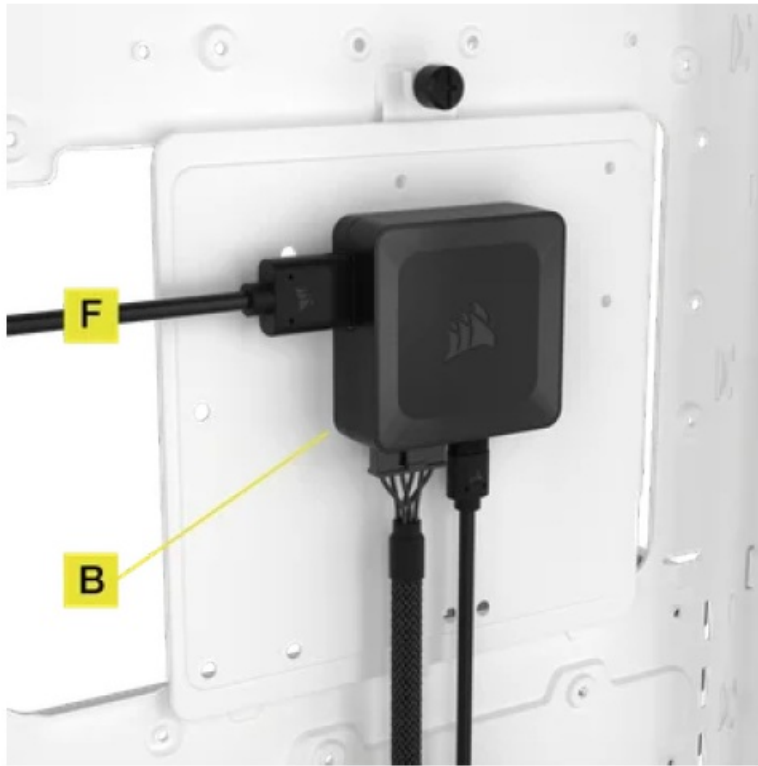


EXPANSION FAN

This section will provide a brief guide on how to install your LX RGB Expansion Fan.


Create or Add Into an Existing Fan Group

Connect the LX RGB Expansion fan to an existing fan group by aligning and inserting the connectors into the open active (I) and passive ports (J).

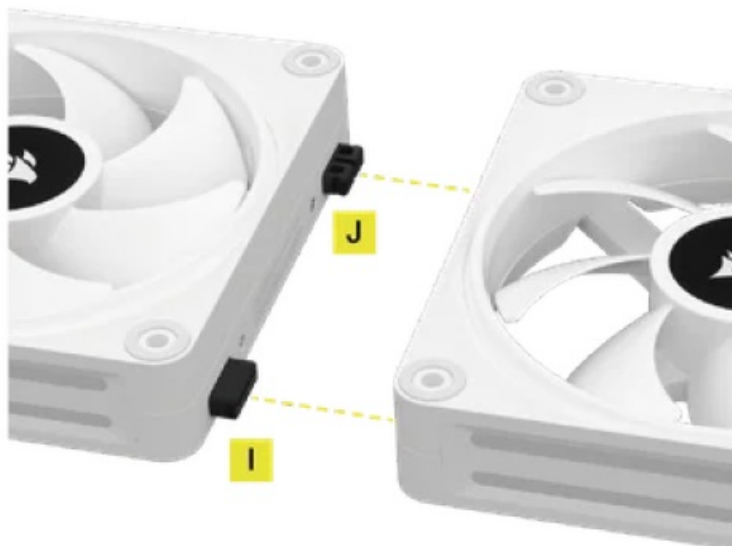


Connect LX RGB to an iCUE LINK SystemHub

Insert the iCUE LINK cable (F) into an open active port (I) on one of your LX RGB fans.

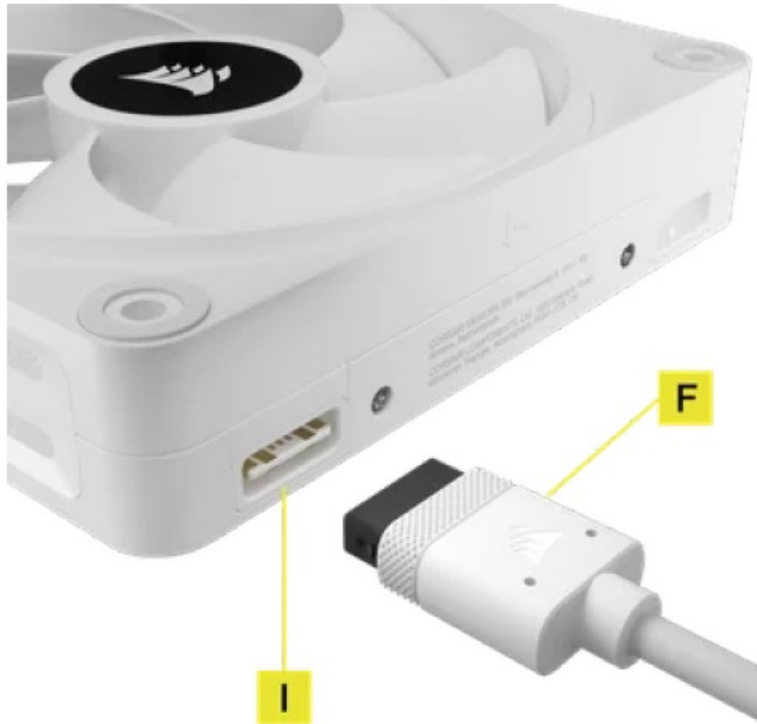

Connect Fan to iCUE LINK System Hub

Connect the iCUE LINK Cable (F) to an available active port (I) on the iCUE LINKSystem Hub (B- sold separately).

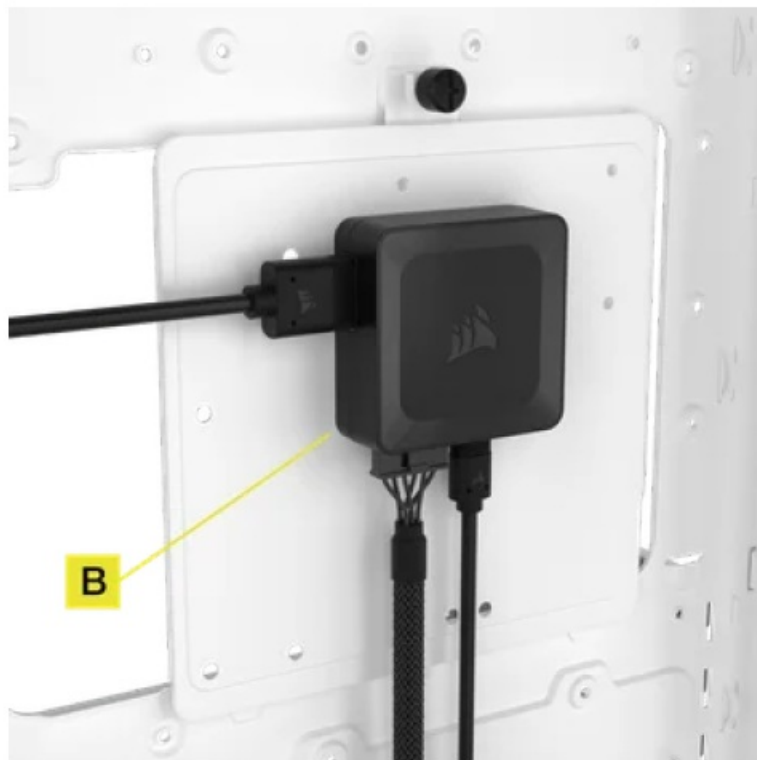

SOFTWARE SETUP


1. Install iCUE

Learn more and download the latest CORSAIR iCUE software




2. Update iCUE

Once iCUE is installed, run the software. If a newer iCUE version is available or if any of the connected devices need a firmware update, you will be prompted to perform an update via a notification in the top right corner. You can also click the settings (cogwheel icon in the top right corner) and check for the software and firmware updates manually.

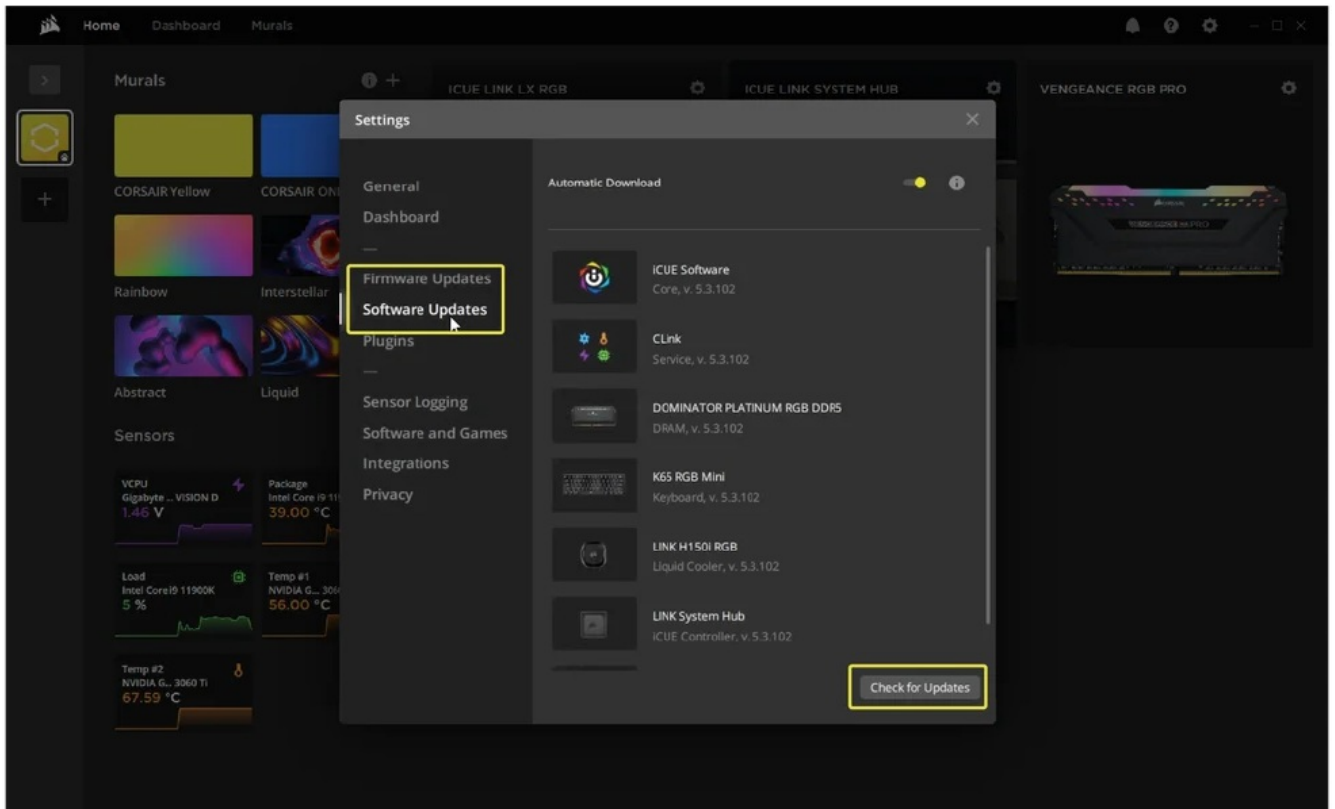

3. Quick Lighting Setup


Select the predefined mural effects from the iCUE Home screen to quickly change the lighting effects.

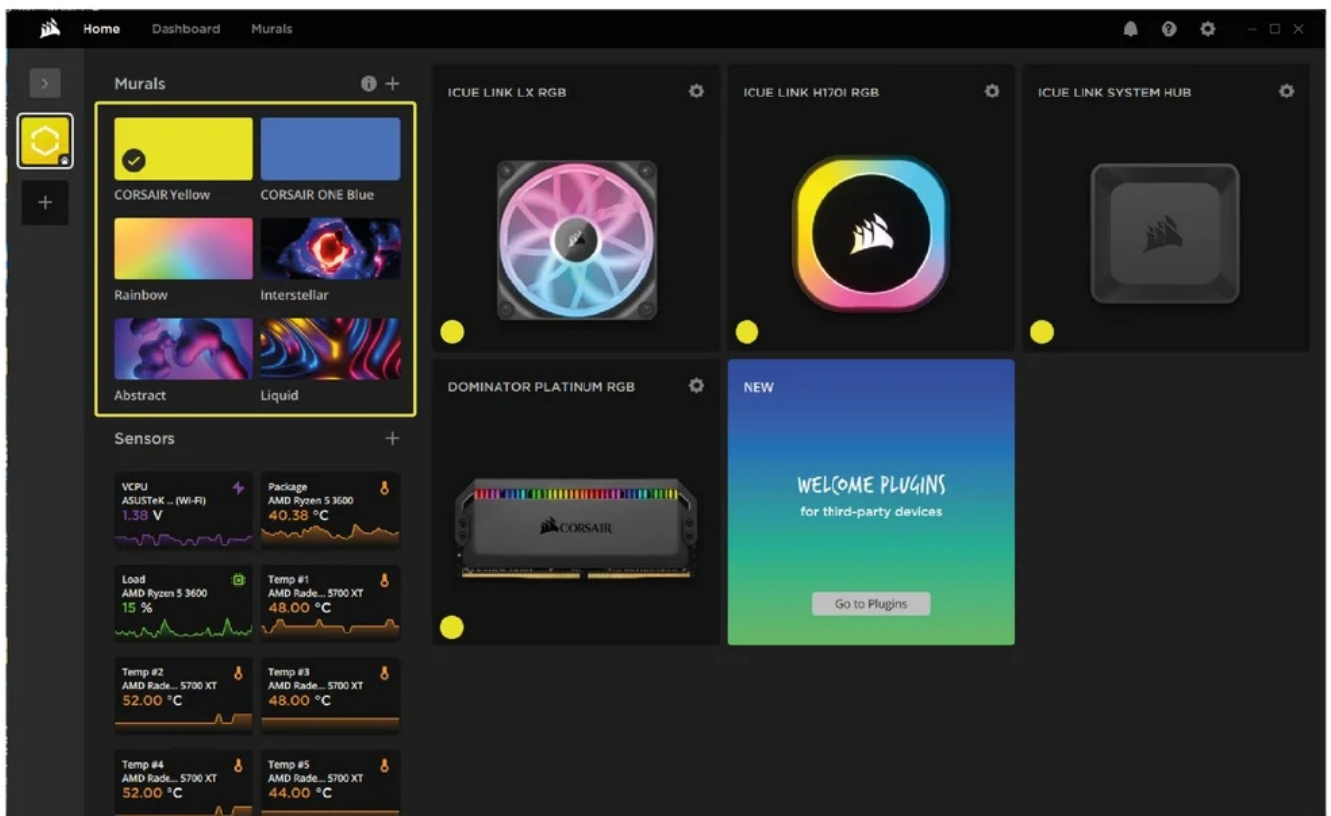


4. Configure iCUE – Fan Setup

The Setup page will display all LX RGB fans connected to the System Hub and allow you to order them to better match the physical placement inside your system.

- Mouse over the iCUE LINK System Hub tile and select Lighting Setup.

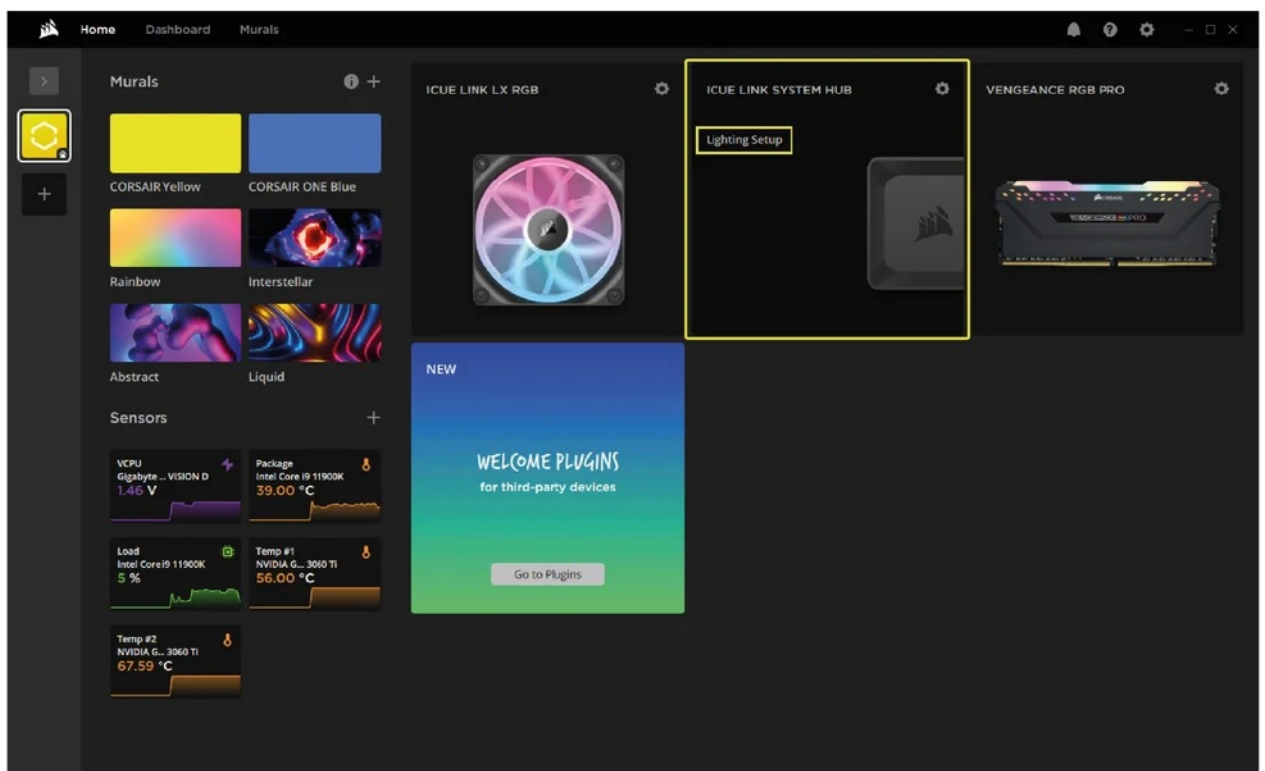


- Select the LX RGB under Lighting Setup to rearrange your fans.

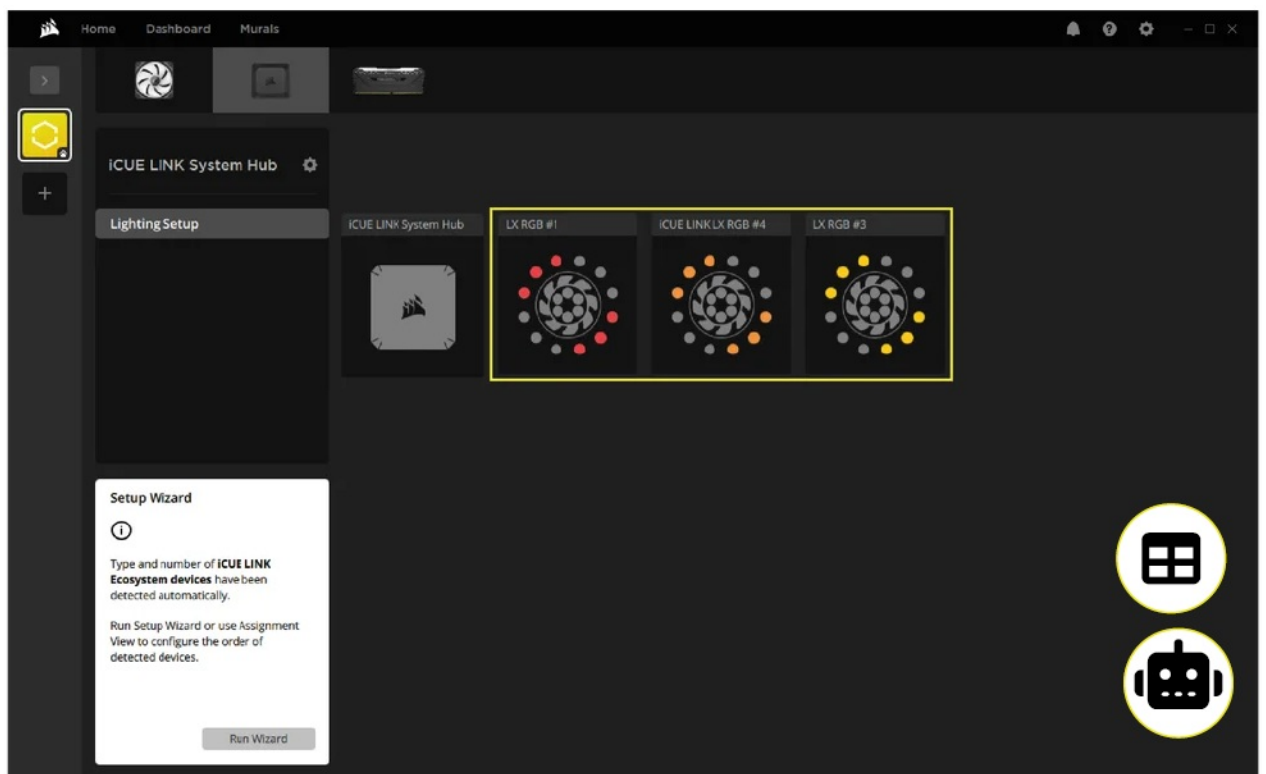

5. Configure iCUE – Fan Lighting

Choose your desired lighting animation from several pre-defined lighting effects.


- Select LX RGB from the navigation bar.
- Click “Lighting Effects” to access the lighting effects page and select the desired lighting effect.
- Click the “+” icon under “Lighting Layers” to add additional lighting effects.

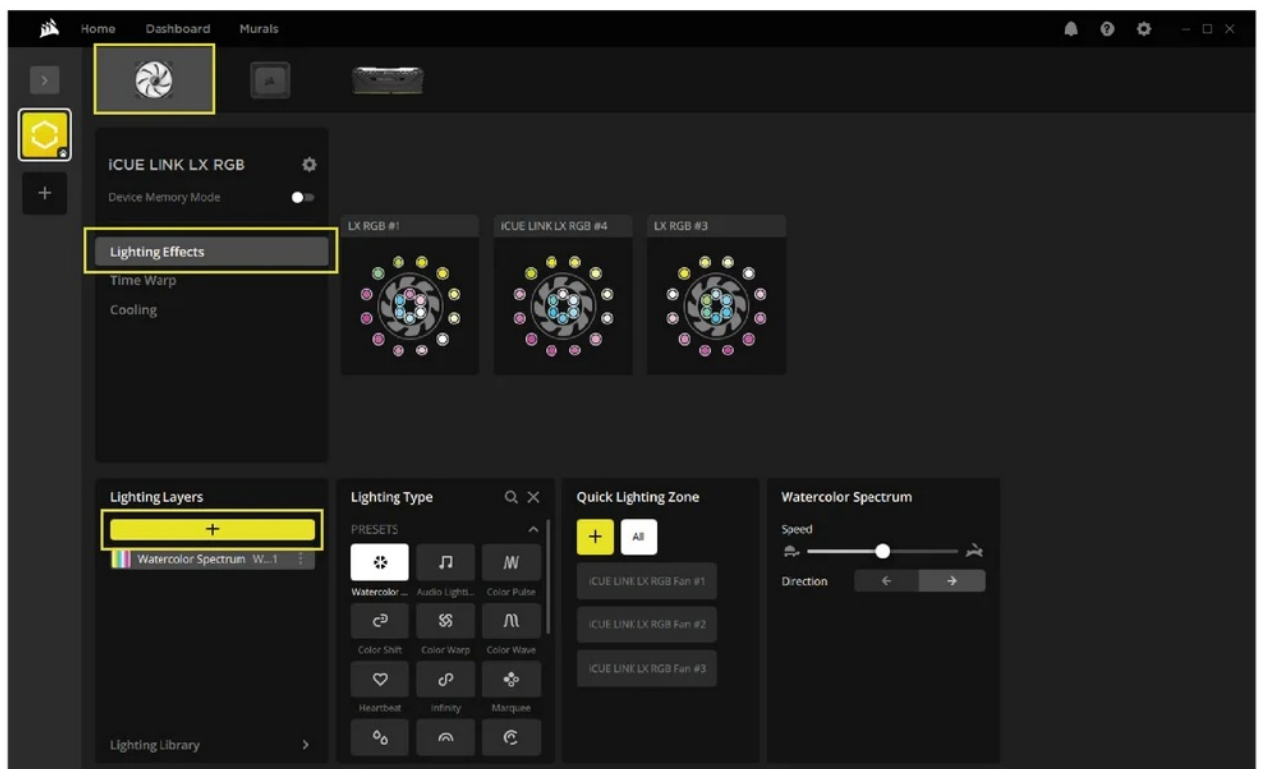

6. Configure iCUE – Fan Performance

Select your desired fan curve presets between Quiet, Balanced, and Extreme, or create your curve.

- Select the LX RGB from the navigation bar.
- Click “Cooling” to access the fan performance page.
- Select the desired fan curve preset for each fan.
- ... or click the “+” icon under “Cooling Presets” to create a custom fan curve.

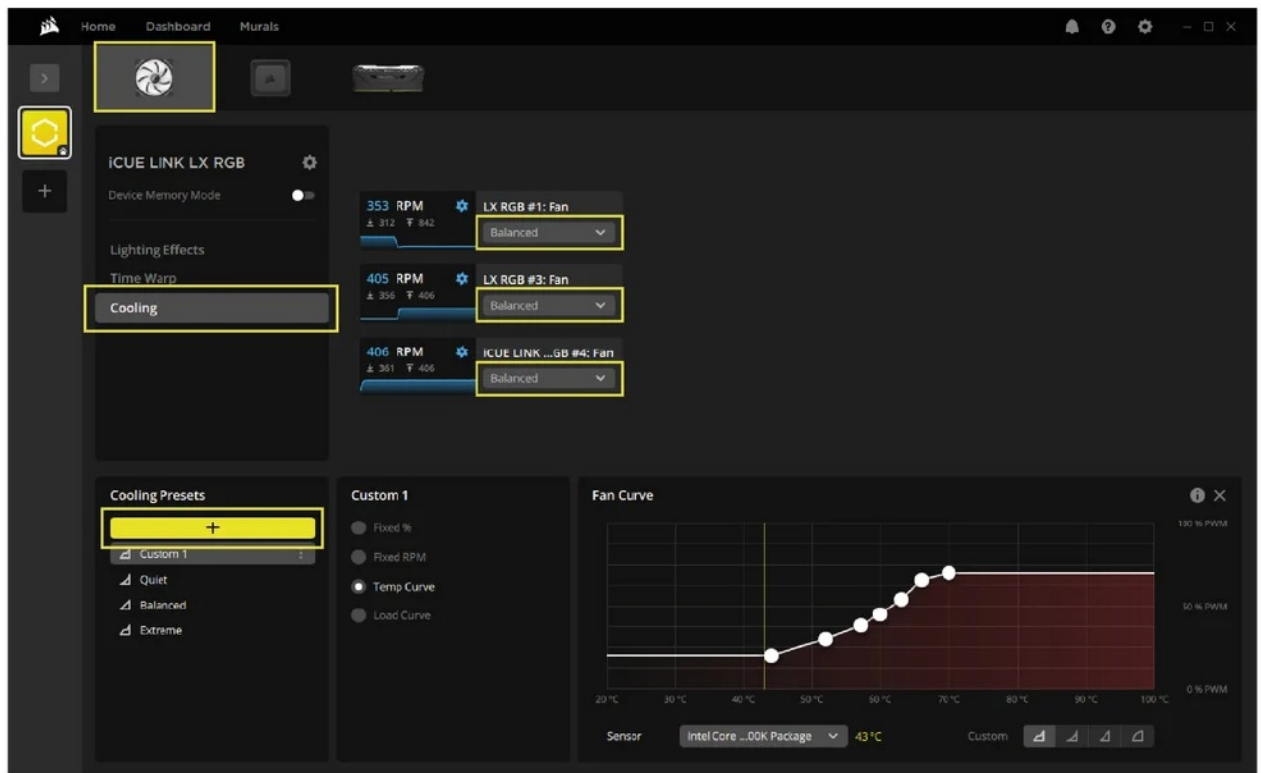

7. Additional Setup

Visit our [CORSAIR LAB](#) for additional iCUE setup, configuration, and tips.

FAQ

- Why can't I change my lighting effect?
- Does LX RGB support hot-plugging?
- How many fans can be chained through one channel?

POWER RATING

- **System Hub Output rating:** 12Vdc 7A (per port)
- **LX120 RGB Input rating:** 12Vdc 0.4A
- **LX140 RGB Input rating:** 12Vdc 0.45A

WARRANTY



 
iCUE LINK LX RGB Series fans have a 5-year warranty.

LEGAL

© 2024 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks of CORSAIR in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured.

Get special offers, exclusive product news, and event info straight to your inbox.

SIGN UP



SHOP

- [New Products](#)
- [Special Offers](#)
- [Corsair.com Exclusives](#)
- [Where to buy](#)
- [Certified Refurbished](#)
- [Business Solutions](#)

EXPLORE

- [PC Builder](#)
- [CORSAIR Innovation](#)
- [Design Your Loop](#)
- [Best Gaming Accessories](#)
- [Intel 14th Generation Upgrades](#)
- [AMD AM5 Upgrades](#)
- [DDR5 Memory](#)
- [Ambassadors](#)

CORSAIR


- [About](#)
- [Investor Relations](#)
- [Supply Chain Disclosure](#)
- [Careers](#)
- [Social Impact](#)
- [Press Room](#)
- [Contact Us](#)
- [Explorer](#)

SUPPORT

- [Downloads](#)
- [Customer Support](#)
- [Warranty](#)
- [Shipping/RMA/Returns](#)
- [Terms of Sale](#)





Copyright © 1996 – 2024 CORSAIR. All rights reserved. <https://www.corsair.com/ww/en/explorer/diy-builder/fans/lx-rgb-fan/>.

Documents / Resources

	<p>LiNK iCUE LINK LX RGB PWM Fans [pdf] User Guide 120mm Starter Kit, 140mm Starter Kit, iCUE LINK LX RGB PWM Fans, iCUE LINK LX RGB, PWM Fans, Fans</p>
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [PC Components | Gaming Gear | CORSAIR](#)
- [TikTok - Make Your Day](#)
- [CORSAIR Newsroom](#)
- [Corsair](#)
- [Investor Relations | Corsair Gaming, Inc.](#)
- [Certified Refurbished PC Components & Gaming Gear | CORSAIR](#)
- [Custom Cooling Configurator | CORSAIR](#)
- [CORSAIR:EXPLORER | Articles, Guides & Product Documentation](#)
- [iCUE Software | Drivers | Software | CORSAIR](#)
- [Custom PC Builder | PC Build Configurator | CORSAIR](#)
- [14th Gen Intel® Core™ Processors with CORSAIR](#)
- [ABOUT CORSAIR](#)
- [Next Gen Processors | AMD | CORSAIR](#)
- [CORSAIR Ambassador Program | Creator Partnership](#)
- [Top Game-Winning Gear - CORSAIR's Best PC Gaming Accessories](#)
- [Corsair for Business | CORSAIR](#)
- [CORSAIR CAREERS](#)
- [CONTACT CORSAIR](#)
- [DDR5 Computer Memory | CORSAIR](#)
- [CORSAIR Exclusive Products](#)
- [Hot New Products](#)
- [Return Refund Policy](#)
- [CORSAIR SPECIALS](#)
- [Supply Chain Disclosure](#)
- [Technology Innovation | CORSAIR](#)

-  [Terms of Sale](#)
-  [iCUE LINK LX RGB Fans Quick Start Guide | CORSAIR](#)
-  [Login • Instagram](#)
-  [Twitch](#)
- [User Manual](#)

Manuals+, **Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.