




LINKChef FC-5140 Mini Chopper Instruction Manual

[Home](#) » [LINKChef](#) » LINKChef FC-5140 Mini Chopper Instruction Manual 

Contents

- [1 LINKChef FC-5140 Mini Chopper](#)
- [2 Product Usage Instructions](#)
- [3 Product Description](#)
- [4 Product Features](#)
- [5 Protection and Maintenance](#)
- [6 Maintenance:](#)
- [7 Q&A](#)
- [8 Product Information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



LINKChef FC-5140 Mini Chopper



Specifications

- Product Name: Mini Chopper FC-5140
- Dimensions: 100.00 mm
- Power: 250W
- Material: Stainless Steel

Product Description

The Mini Chopper FC-5140 is a compact and powerful kitchen appliance that allows you to chop, blend, puree, mix, and mince a variety of ingredients quickly. It features a powerful 250W motor and is made of high-quality stainless steel for better fit and results. The polished stainless steel finish makes it resistant to daily scratches, bumps, corrosion, and tarnishing. The chopper comes with a food-grade lid, a stainless steel bowl with 4 bi-level blades, and an anti-slip rubber mat for easy cleaning in the dishwasher or by hand.

Product Usage Instructions

Before Using

1. Take out the main body, bowl, and blade from the package.
2. Unpack the inner package and clean the bowl, blade, and lid with edible detergent and clean water. Dry them up for use.
3. Wipe up the outside of the main body with wet tissues.

Cleaning

The removable parts must be cleaned immediately after using. Follow these steps:

1. Clean up the stainless steel bowl and blade with clear water before using for the first time. Dry them up completely. Avoid leaking water into the main body.

Product Usage Steps

1. Step 1:

Put the anti-slip rubber mat under the bowl. Carefully put the blade onto the fixed shaft.

2. Step 2:

Cut ingredients into small pieces and add them into the bowl.

3. Step 3:

Close the lid and place the main body onto the lid. Turn it slightly to secure it.

4. Step 4

Plug in the chopper and press the start button to begin chopping.

Protection and Maintenance

After each use, clean the removable parts immediately. Ensure that the blade and main body are fastened together securely. If the blade is obstructed by food materials, switch off the power immediately, take out the materials, and cut them into smaller pieces before continuing.

Frequently Asked Questions (FAQ)

• Q: Why is there an odor when I use the machine for the first few times?

A: The odor could be due to the carbon brush motor emitting a slight smell of burnt food during running or the rust-preventing oil on the new electric motor evaporating and generating an odor when the temperature of the motor increases. If the odor persists after multiple uses, please contact us for support.

• Q: Why does the machine automatically stop during use?

A: The machine may automatically stop due to low power voltage, temperature control being switched on (in which case, wait for 30 minutes before using again), or the blade being obstructed by food materials. If the blade is obstructed, switch off the power immediately, take out the materials, and cut them into smaller pieces before continuing.

• Q: Why is there abnormal vibration or loud noise during use?


A: Abnormal vibration or loud noise during use may be caused by the blade and main body not being fastened together properly or excessive materials being used. Ensure that the blade and main body are securely fastened and reduce the amount of food to be chopped after the power is cut off.

ATTENTION!

- Carefully read these instructions prior to use.
- Retain these instructions for future reference.
- Take care not to overload the sockets, this product should be attached directly into the mains supply.
- Take note of the input voltage as this can change locally, depending on country of use.
- Remove the plug fully from the mains supply socket when not in using
- Limit continuous use to 1 minute maximum. after 1 full minute of use, allow to cool for 1 minute. after 5 cycles of 1 minute use, 1 minute rest, allow to rest for 30 minutes.
- Ensure that all ancillaries are firmly fixed in place prior to use.

- The appliance is not to be used by people (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, without appropriate supervision and instruction
- The Chopper must be fixed prior to use
- Do not exceed the max volumes as indicated on the appliance itself
- Remove the power supply before attempting to clear any blockage during using
- Remove the power supply before cleaning
- The blades on this product are sharp and can cause serious injury
- Our product arrives new from the production line. as such there can be a slight odour during initial use but this should not persist past this first usage. if however it does, please contact us for support
- This product is a kitchen appliance, it is not a toy or an educational tool. Children should not be allowed to play with this item, even when it is unplugged

Product Description

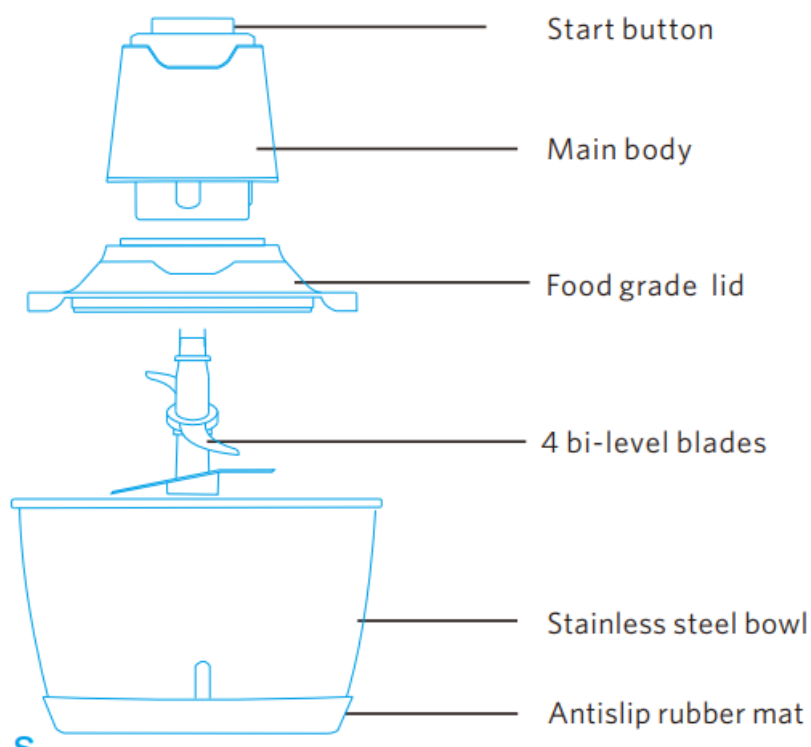

Product Features

1. Powerful 250w motor allows you chopping, blending, pureeing, mixing and mincing a variety of ingredients quickly.
2. Made of 304 stainless steel interface for better fit and results.
3. Press the start button for ingredients like parsley, onions, shallots, garlic, Almonds, Hazelnuts, walnuts, gruyere.
 - * Polished stainless steel finish, build to resist daily scratches, bumps, corrossions and tarnishing. Equipped with antislip rubber mat, wash the bowls easily in the dishwasher or wash them by hand.

 
Simple to Use

- Clean up the Stainless steel bowl and blade with clear water before using for the first time and dry it up

completely. Avoid leaking water into the Main body.



1. Put the antislip rubber mat under bowl, Put the blade onto the fixed shaft carefully.
2. Cut ingredients into small pieces, add it into the bowl.

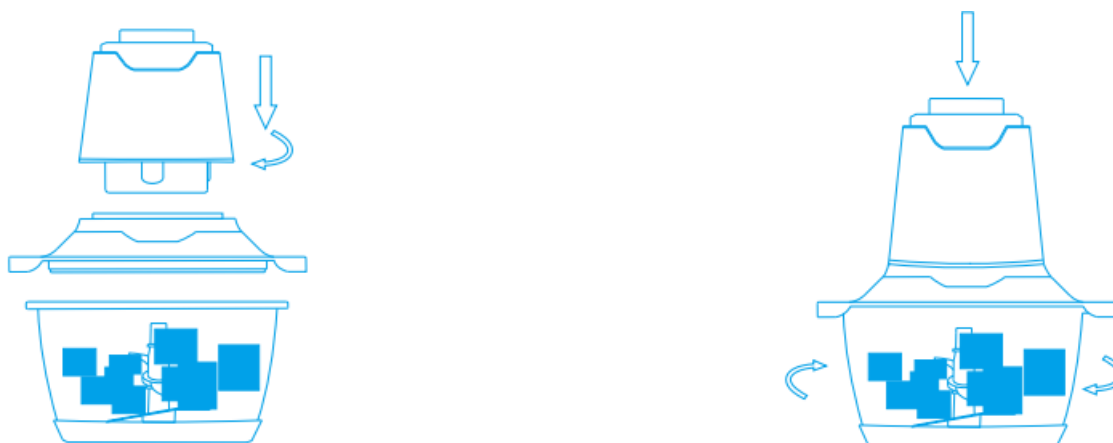

3. Close the lid, place the mainbody onto the lid and turn it slightly.
4. Plug in the chopper and press the start button.

Protection and Maintenance

Before Using:

Take out the main body, bowl and blade from the package, unpack the inner package, clean the bowl, blade and lid with edible detergent and clean water and dry up for use. Wipe up the outside of the main body with wet tissues.

Cleaning:

The removable parts must be cleaned immediately after using. It is recommended to do as follow:

1. Unplug the cable, uninstall the machine.
2. Clean up the uninstalled parts under the tap or in the warm water with detergent.
3. Rinse the parts after cleaning and dry completely.
4. Please be careful of the sharp blades during cleaning.

Caution:

Please do not soak the main body in any liquid. You can clean up the machine with wet cloth. Any cleaning materials, including abrasive, are forbidden to use for cleaning the machine. Please do not clean the main body in the dishwasher.

Maintenance:

1. Please use the product frequently so that the electric motor can stay dry.

2. If not used often, please store the product somewhere with good ventilation.

Q&A

Q: Why is there odour when I use the machine for the first few times?

A:

1. The electric motor is a carbon brush motor which emits slight smell of burnt food during running;
2. The new electric motor is coated with rust-preventing oil which can evaporate and generate the odour when the temperature of the electric motor goes up;
3. Please contact us if there is still odour after multiple times of use.

Q: Why does the machine automatically stop during using?

A:

1. Always check whether the power voltage is too low;
2. If the temperature control is switched on, please stop the machine for a period of 30 minutes before using;
3. If the blade is obstructed by food materials which are stuck in between them, please switch off the power immediately; take out the materials and cut them into smaller pieces.

Q: Why is there abnormal vibration or loud noise during using?

A:

1. Please make sure that the blade and main body are fastened together;
2. Take out the excessive materials and reduce the amount of food to be chopped after the power is cut off.

Q: Why does the machine not work after I press the power on switch?

A:

1. Please check whether the power plug is plugged in;
2. Always check whether the food material is too big which causes the blade to get stuck;
3. If the machine doesn't work after checking, please contact us.

Processing guide

If you want to blend or cut bigger quantities, cut into small pieces, close the lid, and press the button.

Ingredients	Max.Quantity	Max.Time
Parsley	60 g	10 sec
Onions	400 g	10 sec
Shallots	400 g	10 sec
Garlic	300 g	5 sec
Rusk	40 g	15 sec
Almonds	200 g	15 sec
Hazelnuts	200 g	15 sec
Walnuts	200 g	15 sec
Cheese	200 g	15 sec
Boiled ham	400 g	15 sec
Veal	400 g	20 sec
Light pastries	1.2L	15 sec
Cooked soup	1.2L	15 sec
Prunes	260 g	9 sec
Fruits	260 g	9 sec

 
Product Information

Mini Chopper

- Model No FC-5140
- Voltage 120V ~ 60Hz IN the USA
- Capacity 2L
- Rated power 250W
- Dimension 190×190×260mm
- Manufactured by GuangDong Long-Plus Electric Appliances Co.,Ltd



We're just happy that you 're happy. If you don't know how to express your newfound joy,we ' ve got a few suggestions...



Our friendly customer service team will work hard to put a smile back on your face.Here's how we can connect



Tell your friends and family



Share your experience with others on Amazon



Contact us on Amazon



 
support-us@link-chef.com.cn

Name: Guangdong Long-Plus Electric Appliances Co., Ltd.

Add.: #51 Hesui No. 2 Road, Dongfeng, Zhongshan, Guangdong, China **TEL.:** +86 0760 89768086

Web: <http://link-chef.com/>

Documents / Resources

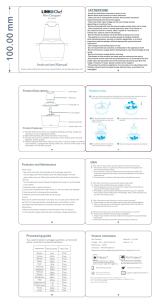	<p>LINKChef FC-5140 Mini Chopper [pdf] Instruction Manual FC-5140, FC-5140 Mini Chopper, Mini Chopper, Chopper</p>
---	--

References

- [Loading...](#)
- [User Manual](#)