

# Linkstyle B313070 MATRIX Key Lock Box with Wireless Hub **User Guide**

Home » LINKSTYLE » Linkstyle B313070 MATRIX Key Lock Box with Wireless Hub User Guide 🖺



## **Contents**

- 1 Linkstyle B313070 MATRIX Key Lock Box with Wireless
- **2 Smart Functions**
- 3 Preparations
- 4 Contact
- **5 Documents / Resources** 
  - **5.1 References**



Linkstyle B313070 MATRIX Key Lock Box with Wireless Hub




## **Smart Functions**

## Install the Linkstyle app



- Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.
- Alternatively, you can also search for "Linkstyle" on the Apple App Store or Google Play Store to find the app.

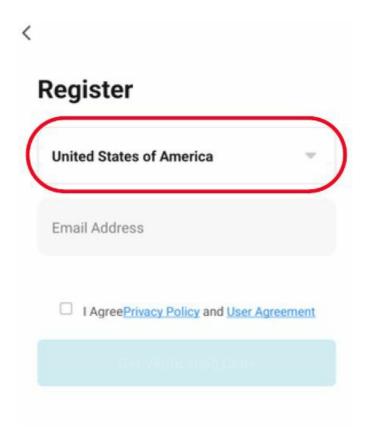

• When registering an account in the Linkstyle app, be sure to set the region to United States of America.

## **Preparations**

- 1. Gather all devices involved and keep them in close proximity to your 2.4GHz router and one another throughout the setup process. You can move them to other locations within working range after setup.
- 2. Plug the Nexohub Multi-Mode Gateway into a power source and keep it plugged in in order for it to work.
- 3. Install batteries into the Matrix Smart Lock Key Box
- 4. Connect your Android or iOS smartphone to a 2.4GHz Wi-Fi network (devices will not work with 5 GHz network)
- 5. Turn on Bluetooth connectivity on your smartphone.

## Step 1: Add Nexohub Gateway to App

- 1. Make sure the Nexohub is in setup mode, indicated by a flashing LED indicator.
  - If the device is not in setup mode, press and hold the Reset Button for 3 seconds until the LED indicator starts to flash.
- 2. Log into the Linkstyle app and go to the Devices page.
- 3. Tap the "+" button, then tap "Add Device"
- 4. The app will automatically scan for new devices to add.
- 5. Once the device is discovered, an icon will appear to represent the Nexohub device.
- 6. Tap on the Nexohub device icon and follow the on-screen instructions to complete setup.

- 1. Navigate to the Devices page in the Linkstyle app.
- 2. Tap the Nexohub Gateway in the app.
- 3. Make sure the "Bluetooth devices list" tab is selected.
- 4. Tap the "Add devices" button.
- 5. Tap "Add new devices"
- 6. Press and hold the reset button on the Matrix Lock Box for 2 seconds, then press any button on the keypad to put the device in setup mode.
- 7. When the Matrix Lock Box signal is discovered, tap the corresponding icon on the screen, and follow the onscreen instructions to complete setup

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc. Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates. Google and Google Play are trademarks of Google LLC. Other third-party brands and names are the property of their respective owners.

#### Contact

If you need any support, don't hesitate to reach out to us at:

- contact@linkstyle.life
- 1-888-419-4888

## **Documents / Resources**



Linkstyle B313070 MATRIX Key Lock Box with Wireless Hub [pdf] User Guide B313070 MATRIX Key Lock Box with Wireless Hub, B313070, MATRIX Key Lock Box with Wireless Hub, Key Lock Box with Wireless Hub, Box with Wireless Hub, Wireless Hub, Hub



LINKSTYLE B313070 Matrix Key Lock Box with Wireless Hub [pdf] User Manual B313070 Matrix Key Lock Box with Wireless Hub, B313070, Matrix Key Lock Box with Wireless Hub, Key Lock Box with Wireless Hub, Box with Wireless Hub, Wireless Hub, Hub

#### References

User Manual