

Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher



Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher User Guide

[Home](#) » [LINKSTYLE](#) » Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher User Guide 

Contents

- [1 Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher](#)
- [2 Product Usage Instructions](#)
- [3 What's in the box](#)
- [4 Smart Functions](#)
- [5 Add the device to app – Wi-Fi](#)
- [6 Product Specifications](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher



Specifications:

- Product Name: Tocabot Smart Switch Button Pusher
- Includes: 1 x Tocabot Smart Switch Button Pusher, 1 x Long Straight Arm, 1 x Short Straight Arm, 1 x Ring Arm, 6 x Mounting Adhesive
- Smart Functions: Replaceable Arm, LED Indicator, Charging Port, ON/OFF Switch
- Compatibility: Linkstyle App (available on Apple App Store and Google Play Store)

Product Usage Instructions

Install the Linkstyle App:

1. Scan the QR code or search for Linkstyle on the Apple App Store or Google Play Store to download the app.
2. Register a new account on the app if you do not have one.

Add the Device to App – Bluetooth:

1. Charge the device with a USB-C cable for 2 hours before adding it to the Linkstyle app.
2. Ensure the device is in setup mode (flashing blue LED indicator).
3. Log into the Linkstyle app and navigate to the Devices page.
4. Tap the + button, then tap Add Device.
5. Follow on-screen instructions to complete setup.

FAQ:

Q: How do I know if the device is in setup mode?

A: The device is in setup mode when the LED indicator is flashing blue. If not in setup mode, toggle the ON/OFF switch until the LED flashes purple.

Q: What should I do if the device is not automatically detected by the app?

A: Tap the [-] button in the top right corner of the app and scan the provided QR code to facilitate the detection process.


Q: How can I connect the Tocabot button pusher to the app via Bluetooth?

A: Follow the steps under “Add the device to app – Bluetooth” section in the user manual.

If you need any support, don't hesitate to reach out to us at: contact@linkstyle.life

What's in the box

- 1 x Tocabot Smart Switch Button Pusher
- 1 x Long Straight Arm
- 1 x Short Straight Arm
- 1 x Ring Arm
- 6 x Mounting Adhesive

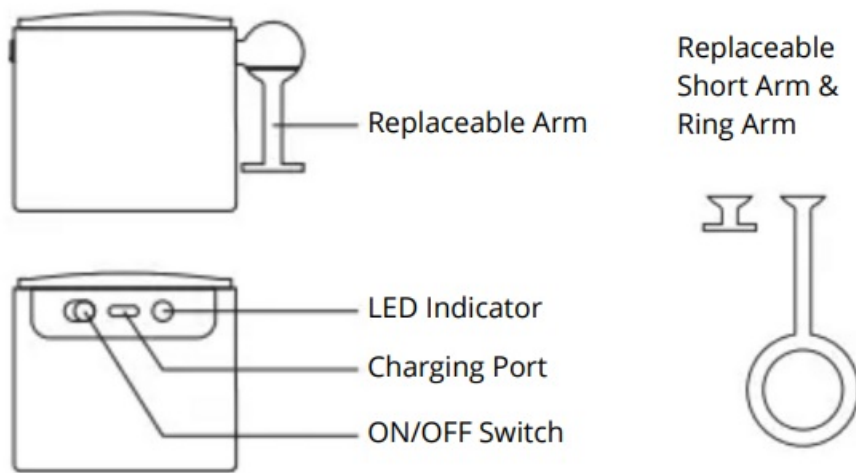

Smart Functions

Install the Linkstyle app

Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



Alternatively, you can also search for “Linkstyle” on the Apple App Store or Google Play Store to find the app.

Add the device to app – Bluetooth

1. Charge the device with a USB-C cable for 2 hours before adding it to the Linkstyle app.
2. Make sure the device is in setup mode, indicated by a flashing blue LED indicator.
 - If the device is not in setup mode, turn the device on-off-on-off-on by toggling the ON/OFF switch until the LED indicator flashes purple
3. Log into the Linkstyle app and go to the Devices page.
4. Tap the “+” button, then tap “Add Device”
5. The app will automatically scan for new devices to add.
6. Once the device is discovered, an icon will appear to represent the Tocabot device.
7. Tap on the Tocabot device icon and follow the onscreen instructions to complete setup.

If the device is not automatically detected, tap the [-] button in the top right corner and scan this QR code to facilitate the process.



Add the device to app – Wi-Fi

1. Set up a Nexohub Multi-Mode Gateway to connect this device to a Wi-Fi network.
2. Charge the device with a USB-C cable for 2 hours before adding it to the Linkstyle app.
3. Log into the Linkstyle app and go to the Devices page.
4. Tap the Nexohub Gateway in the app.
5. Make sure the “Bluetooth devices list” tab is selected.
6. Tap the “Add devices” button.
7. If the Tocabot button pusher is already connected to the app via Bluetooth:
 1. tap “Associate Bluetooth devices”
 2. select the corresponding Tocabot device from the device list
 3. tap “Confirm”
8. If the Tocabot button pusher has not yet been connected to the app:
 1. tap “Add new devices”
 2. Make sure the device is in setup mode, indicated by a flashing blue LED indicator.
 - If the device is not in setup mode, turn the device on-off-on-off-on by toggling the ON/OFF switch until the LED indicator flashes purple
 3. follow the on-screen instructions to complete setup

Product Specifications

- Maximum Movement: 0.31 in (8mm)
- Stall Torque: 1.6 kgf-cm
- Dimensions: 1.89 x 1.46 x 1.30 inches (48 x 37x 33 mm) Wireless Protocol: BLE 4.2
- Battery Capacity: 500 mAh
- Charging Port: USB Type-C
- Working Temperature: 14 °F to 113°F (-10 °C to 45 °C)


Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of [Amazon.com](https://www.amazon.com) Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC. Other third-party brands and names are the property of their respective owners.

Unlocking the enchanted life!

Documents / Resources

 Linkstyle Tocabot Smart Switch Button Pusher User Guide	Linkstyle H2A9090 TOCABOT Smart Switch Bot Button Pusher [pdf] User Guide H2A9090 TOCABOT Smart Switch Bot Button Pusher, H2A9090, TOCABOT Smart Switch Bot Button Pusher, Smart Switch Bot Button Pusher, Bot Button Pusher, Button Pusher, Pusher
---	---

References

- [a . Spend less. Smile more.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.