



Linkstyle L-58 Matrix II Smart Key Lock Box Instruction Manual

[Home](#) » [LINKSTYLE](#) » Linkstyle L-58 Matrix II Smart Key Lock Box Instruction Manual 

Linkstyle L-58 Matrix II Smart Key Lock Box











Contents

 
 
- 1 Notice Before Use
- 2 Product Overview
- 3 Setup & Installation
- 4 Operating Instructions
- 5 Technical Specifications
- 6 Warranty & Support
- 7 CUSTOMER SUPPORT
- 8 Documents / Resources
- 8.1 References

Notice Before Use

- The physical keys included with this device are the most important and reliable backup method for opening the key box. DO NOT lose them and DO NOT lock them inside the key box.
 - Test the physical keys before using the key box to ensure they work properly.
 - When setting up this device with a Nexus Hub gateway, keep this device, the gateway, and the Wi-Fi router all within close proximity during the setup process.
- See Page 14 for guidelines regarding effective wireless range.

Product Overview

 <p>1 Pcs Keybox</p>	 <p>2 Pcs Manual Key</p>	 <p>4 Pcs(D4X30mm) Wood screw</p>	 <p>4Pcs(D6X30mm) Expansion Plug</p>
 <p>2 Pcs Epoxy Card</p>	 <p>1 Pcs Manual</p>	 <p>1 Pcs USB Cable (TYPE-C)</p>	 <p>1 Pcs Shackle</p>

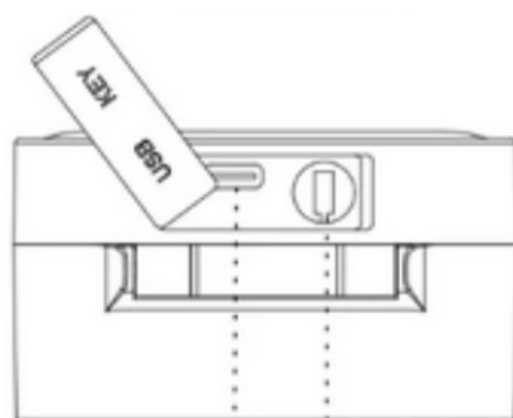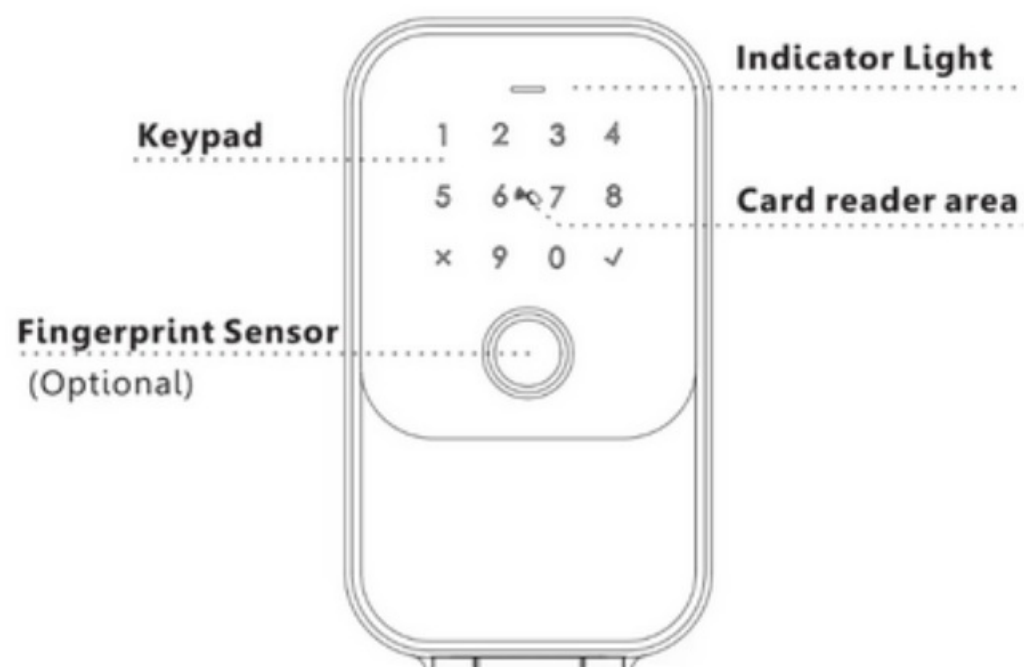

Type- C

For emergency use to unlock
Not for charging!

Cylinder Hole



Setup & Installation

Install the Link style app

Scan the QR code below to download and install the Link style app. Register a new account on the app if you do not have one.



*Alternatively, you can also search for “Link style” on the Apple App Store or Google Play Store to find the app.

***Important Note:

When registering an account in the Link style app, be sure to set the region to United States of America.



Register

United States of America

 
Email Address

☐ I Agree [Privacy Policy](#) and [User Agreement](#)

Get Verification Code

Prepare device for setup

Open the key box, then open the battery compartment and install 4 x AAA batteries.

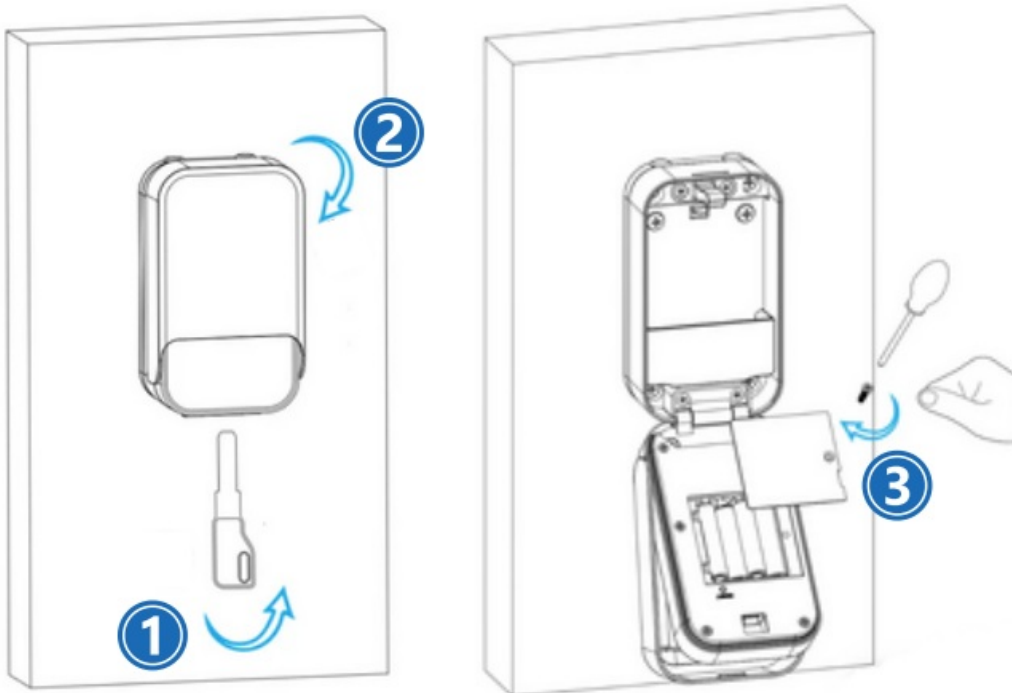

Add device to Link style app

After installing the batteries for the first time, the device will be in setup mode by default. To confirm, touch the keypad to wake it up and you should hear the voice prompt "Please pair device".

If you do not hear the voice prompt, refer to page 18 to reset the device to factory settings.

Add device to Link style app

 
If you are adding the device to the Link style app directly via Bluetooth without a Nexo hub, follow the steps starting.

If you are adding the device to the Link style app through a Nexo hub gateway, follow the steps starting.

Add device to Link style app – Bluetooth

Step 1: In the Devices page of the Link style app, tap the “+” button on the top right corner and tap “Add Device”

Step 2: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap its icon and follow the onscreen instructions to complete setup.

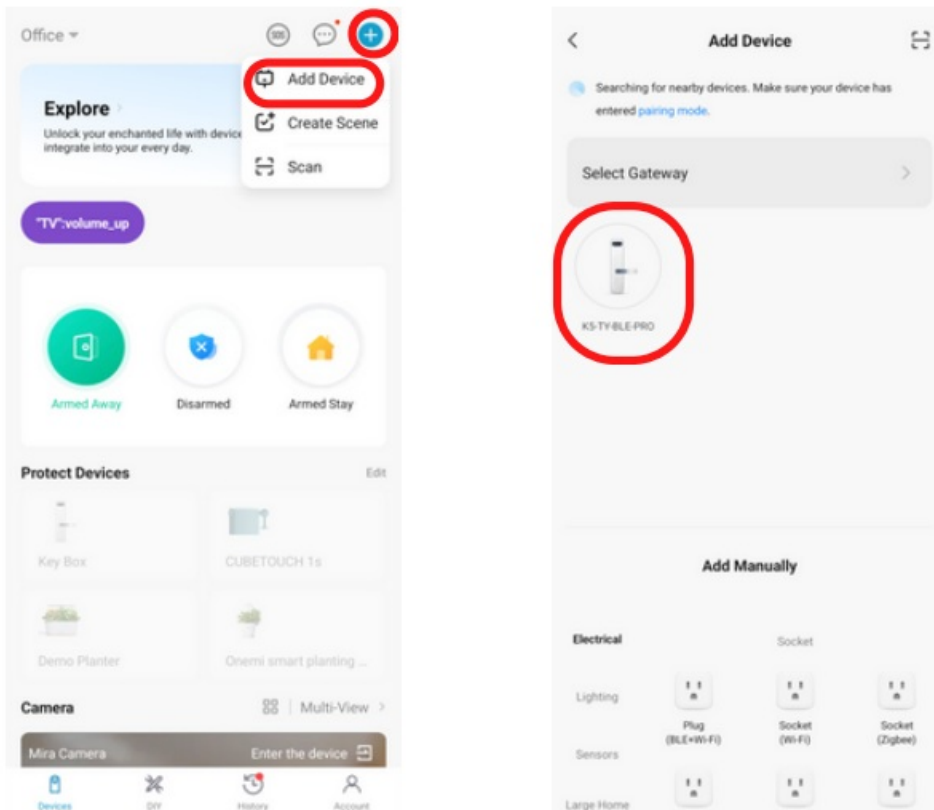

Add device to Link style app – Nexo hub



Important Note:

Keep the Nexo hub gateway, Matrix II lock box, and the 2.4GHz Wi-Fi router all within close proximity during the setup process.

 
You can relocate the gateway and lock box after setup for regular use following these guidelines:

- Keep the gateway within effective Wi-Fi range of the Wi-Fi router.
- Keep the lock box within:
 - 15 feet of the gateway if there are no obstructions between them
 - 10 feet of the gateway if there is 1 door or interior wall between them
- Effective range is affected by obstructions and other wireless signals, and may vary based on individual usage conditions.



Add device to Link style app – Nexo hub

Make sure to have a Nexo hub added to your Link style app and online before adding this device.


Step 1: In the Devices page of the Link style app, find and tap the Nexo hub.

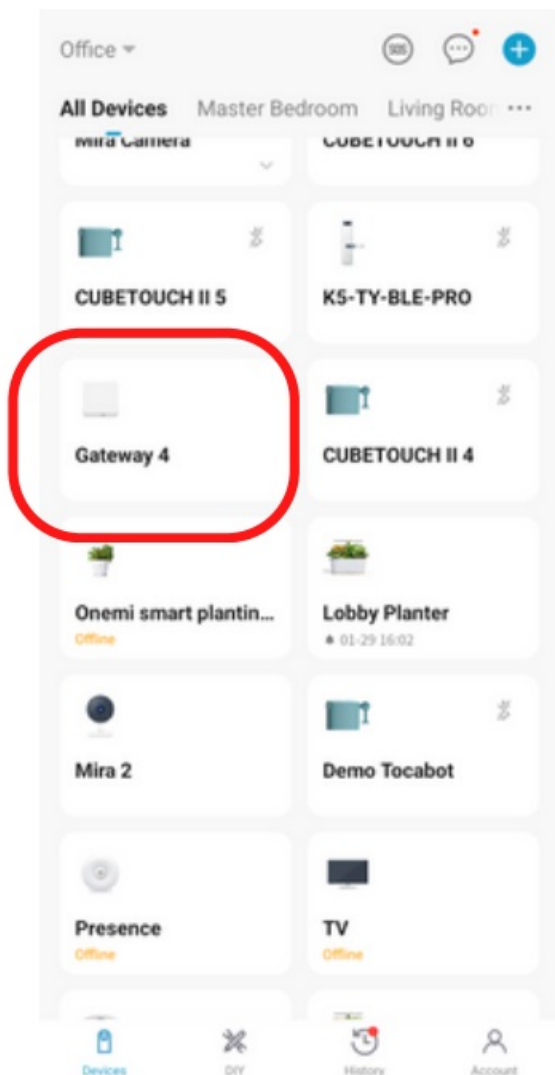

  Step 2: Make sure the “Bluetooth devices list” is selected, and tap “Add devices”, then “Add new devices”

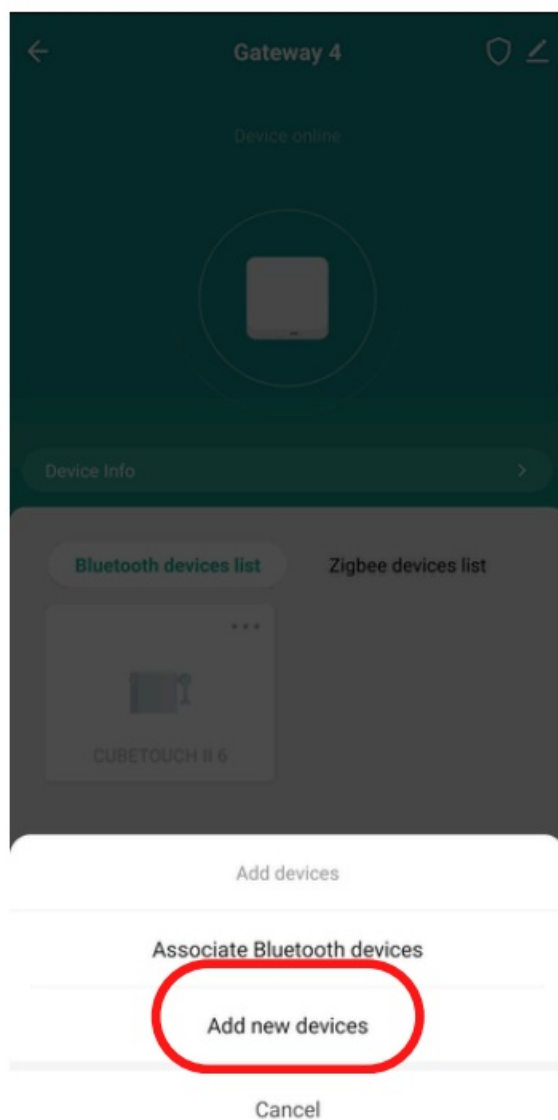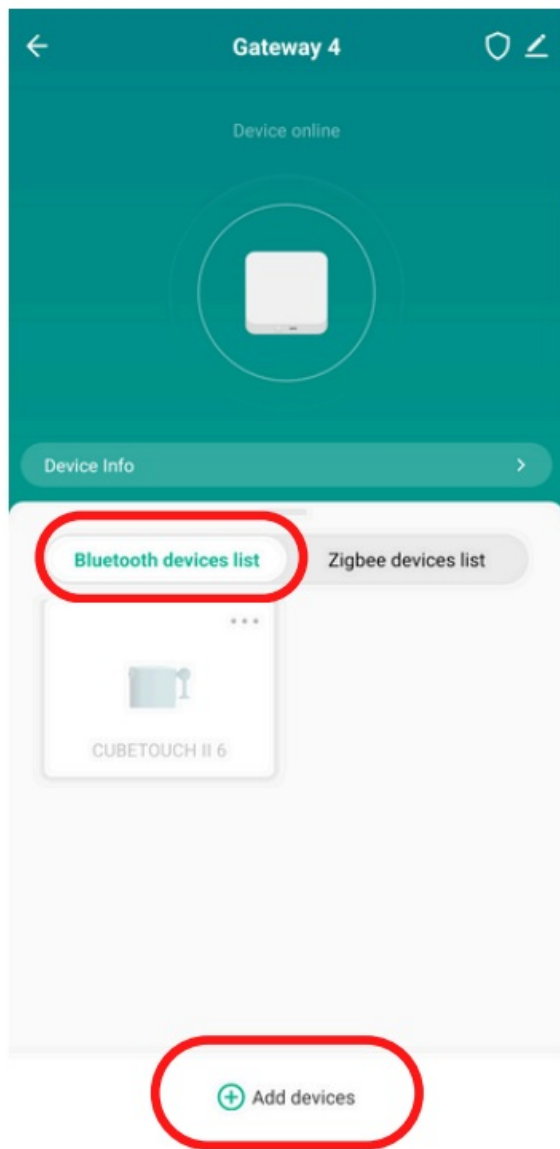

 
Step 3: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap "Done" and follow the onscreen instructions to complete setup.

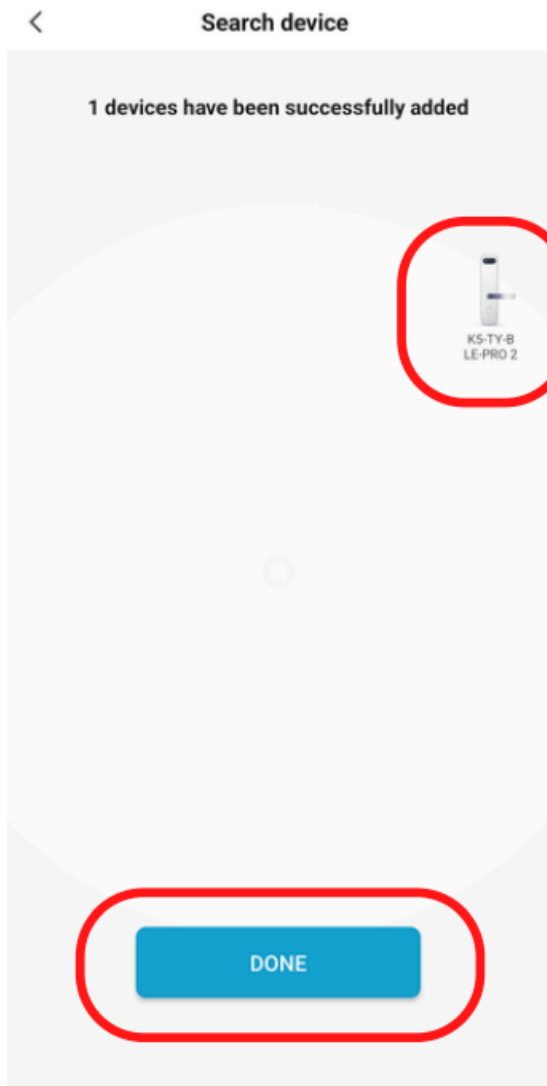

Reset the device to factory settings

If you need to reset the device to factory settings, follow these steps:

 Step 1: open the key box, then press and hold the reset button for 5 seconds, until you hear the voice prompt "Please enter the initialization password".

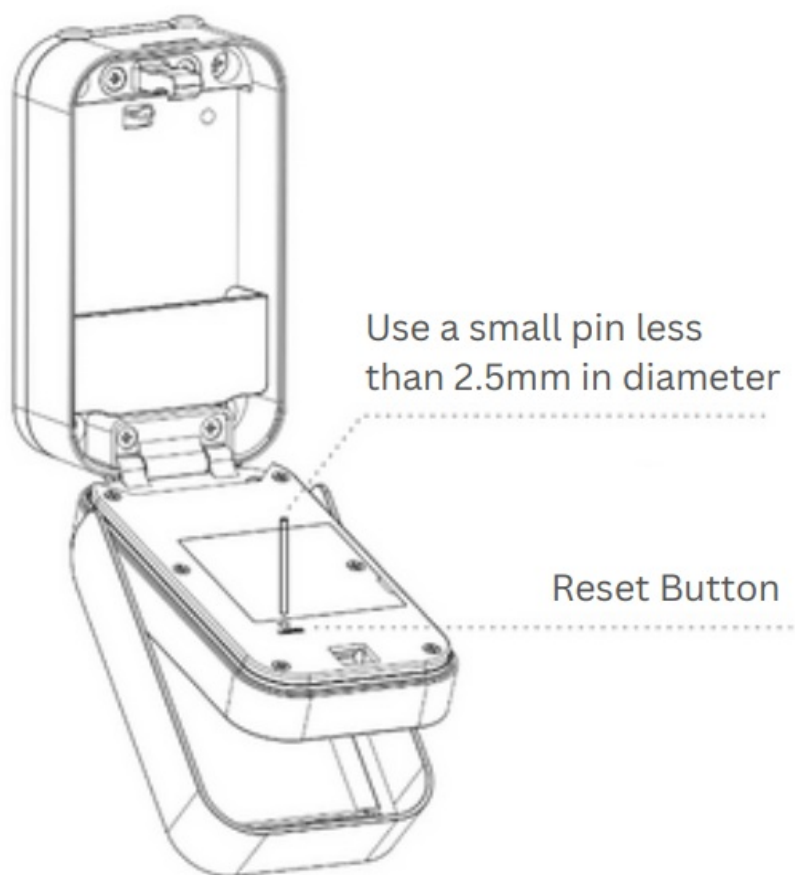

Step 2: Enter the initialization password: **000** on the keypad then press ✓ (check mark). You will hear the voice prompt “Operation successful”.

 
 
The device is now reset to factory settings in setup mode and the unlock password is reset to 123456.



Mount Device to Wall (Optional)


Step 1: Poke out the screw plugs

Step 2: Plan where to drill holes using the screw holes as a template

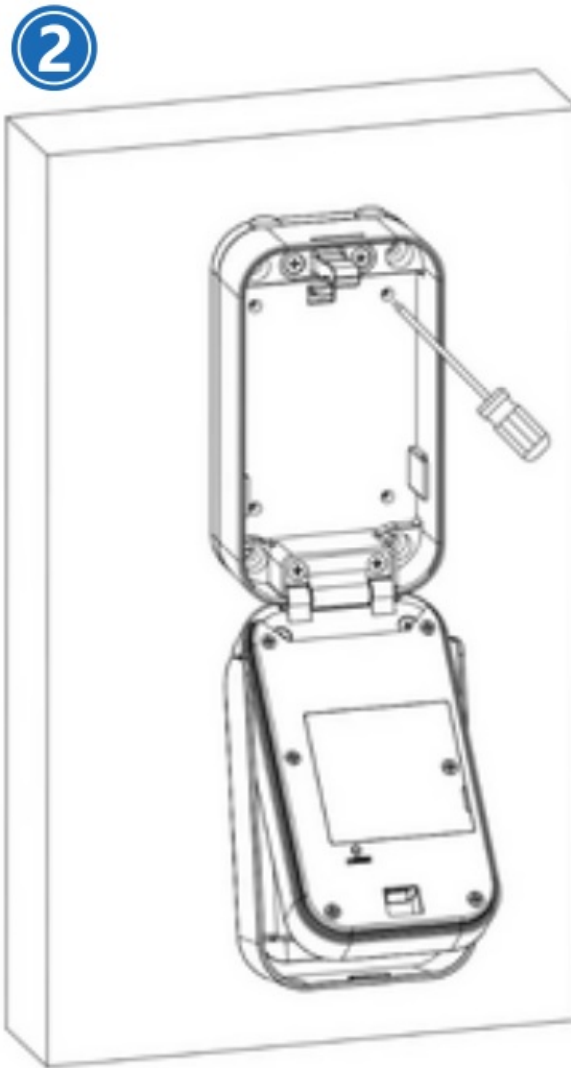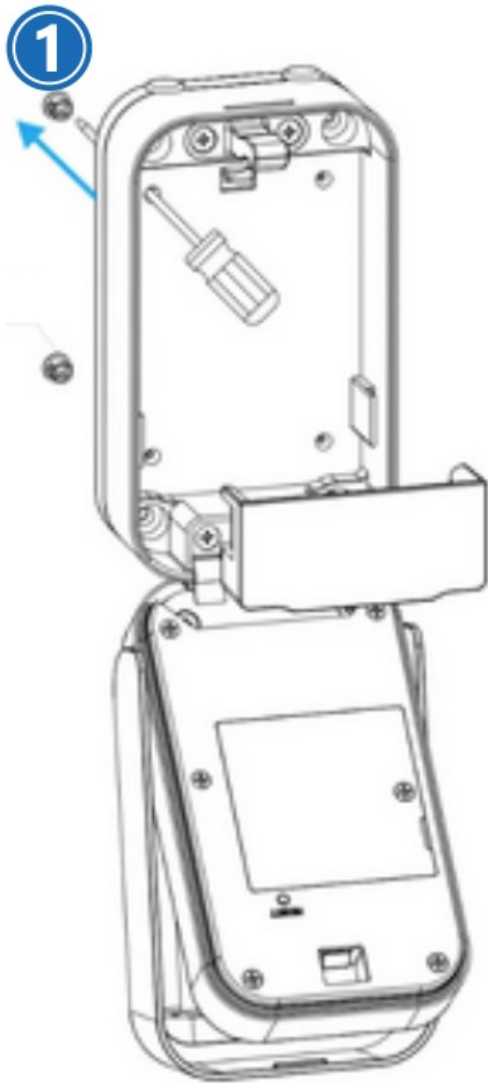


Step 3: Drill holes (D2 x 40mm) for screws. Install anchors if necessary

 D2 x 40mm

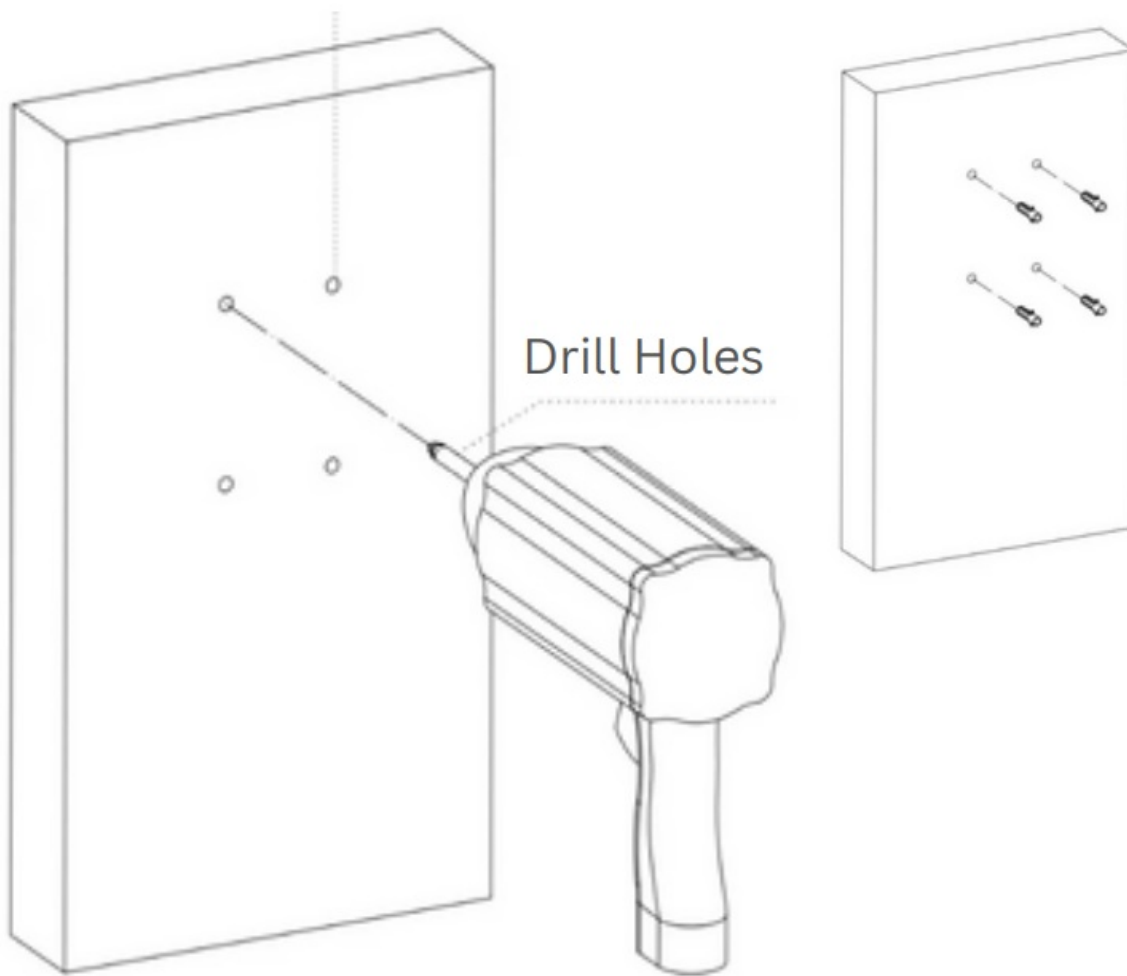

 Step 4: Install screws

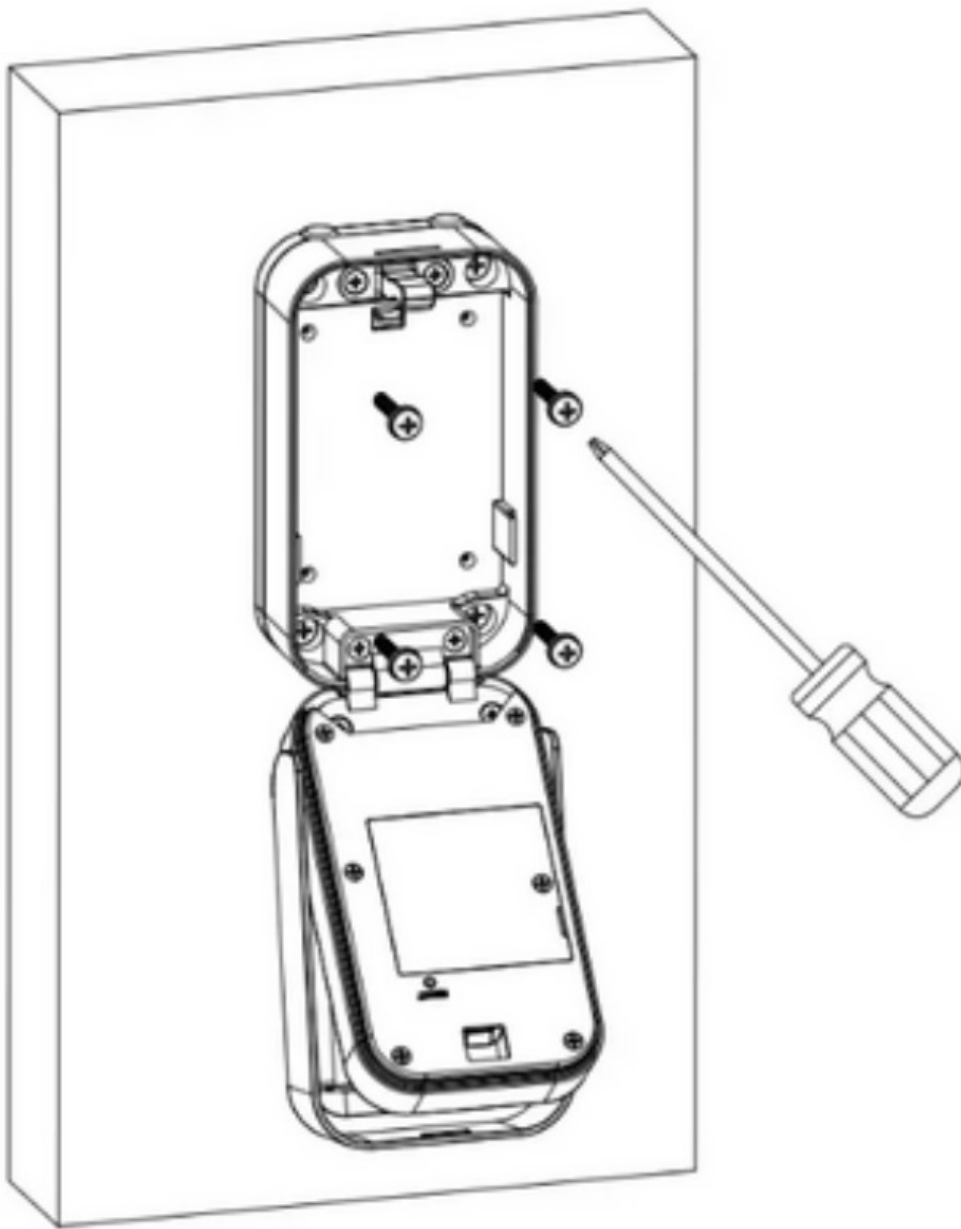


Hang Device with Shackle (Optional)

Step 1: Remove rubber weather proofing plugs

Step 2: Click shackle into main body

 
1

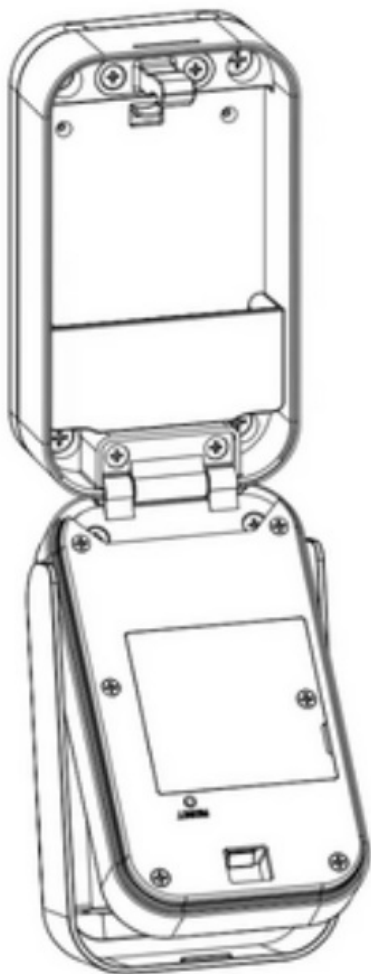

2



 
To unlock shackle, push the the Unhook button up and pull shackle out.

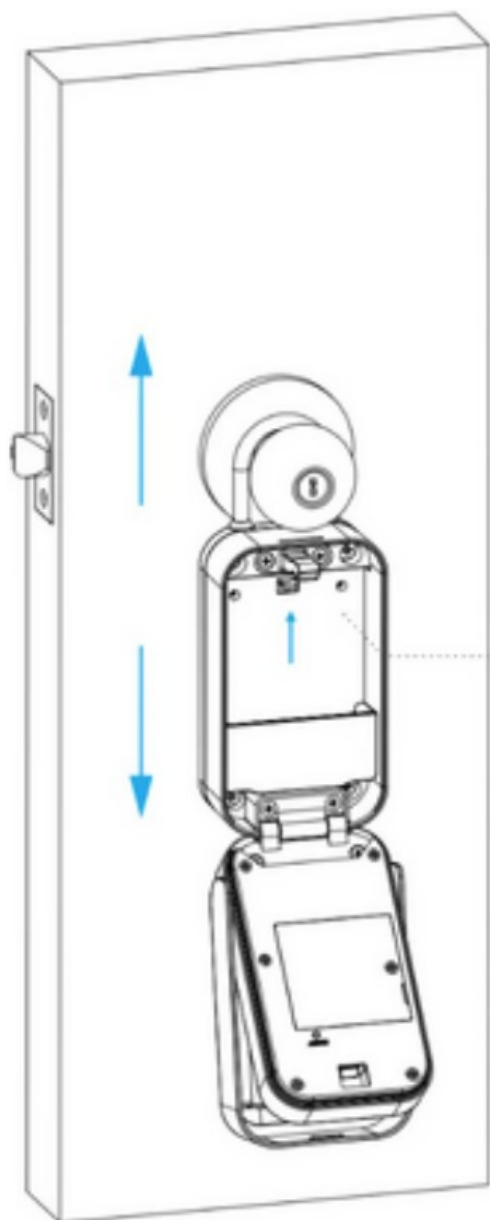



Operating Instructions

Add User Fingerprint

 Step 1: Select Member

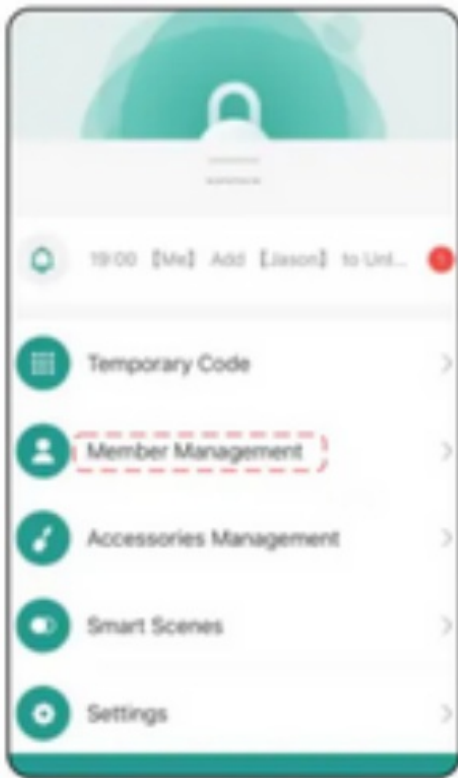

  
Step 2: Tap Add under Fingerprint

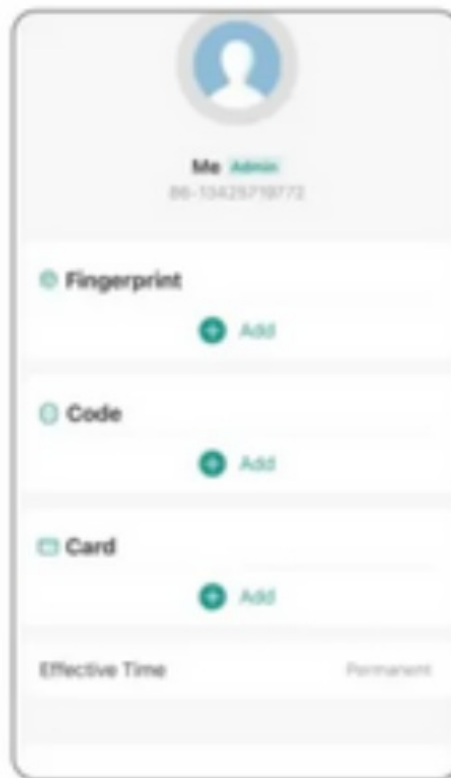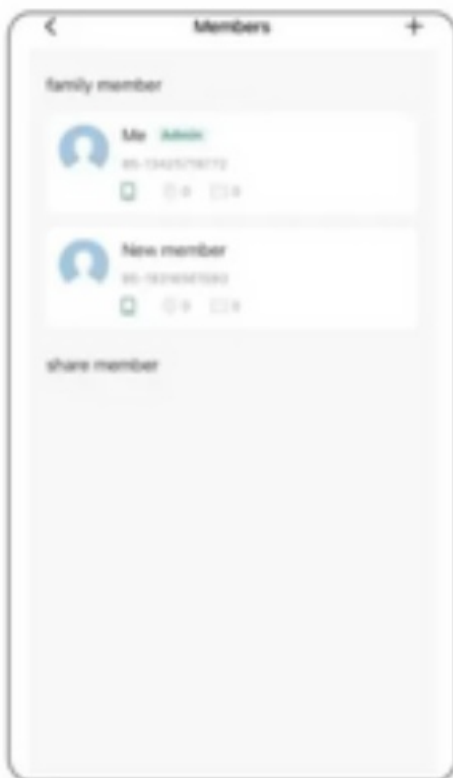


Step 3: Start Capturing



 Step 4: Press finger 5 times

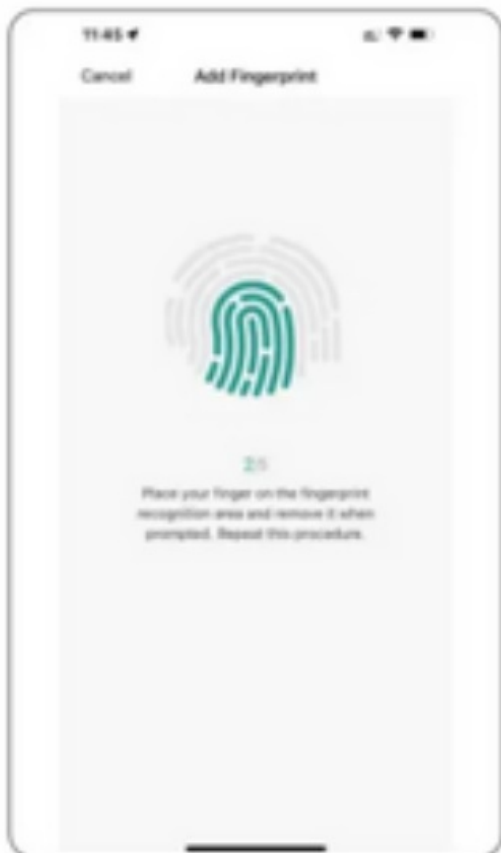


 Step 5: Label the finger print

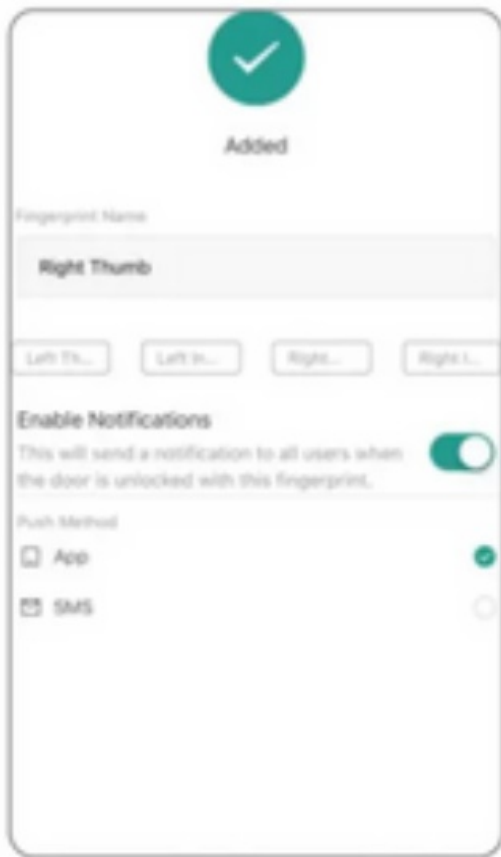


Add User Password

 
Step 1: Select Member

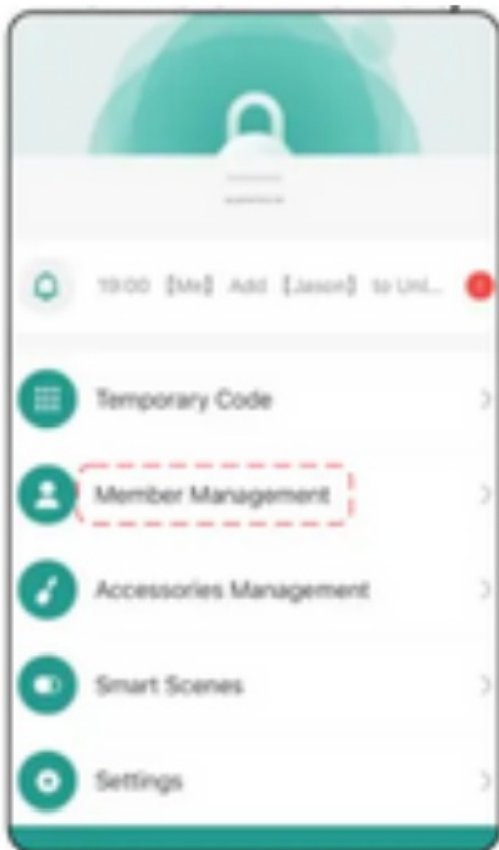

 Step 2: Tap Add under Code

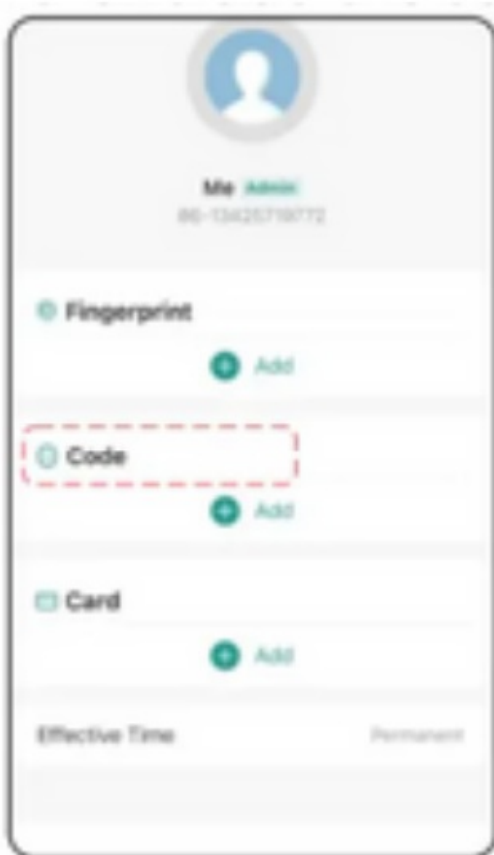


 Step 3: Tap Random or enter a custom code

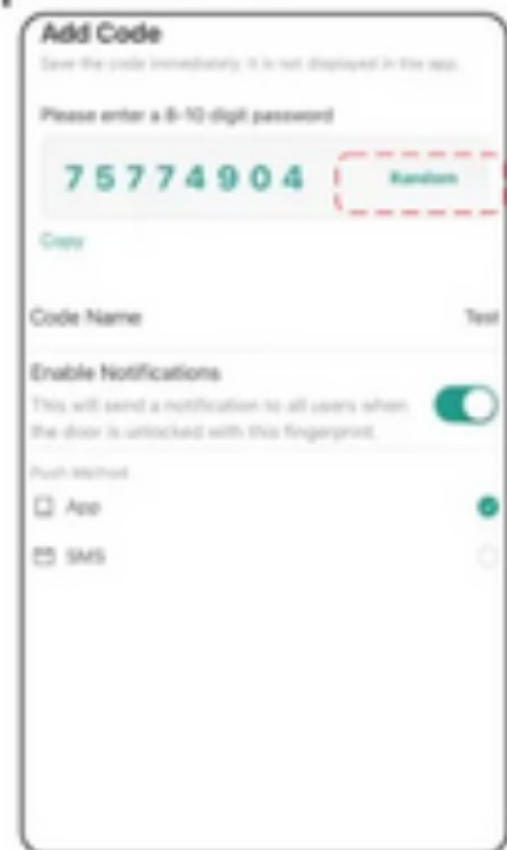


Add User Card

 
Step 1: Select Member

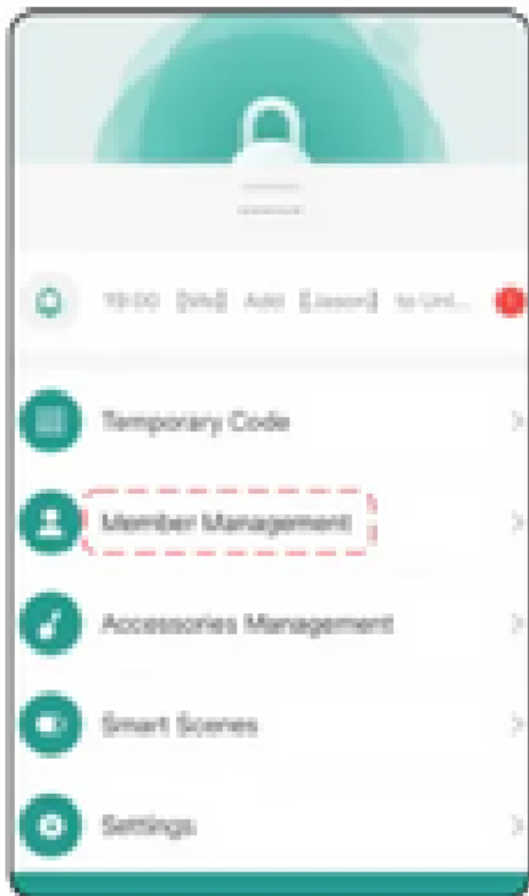

 
Step 2: Tap Add under Card

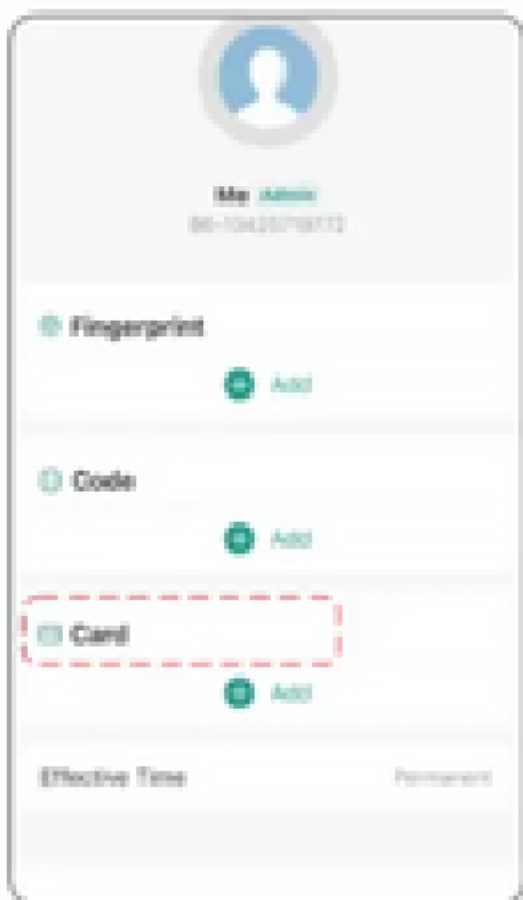

 Step 3: Tap card to device center

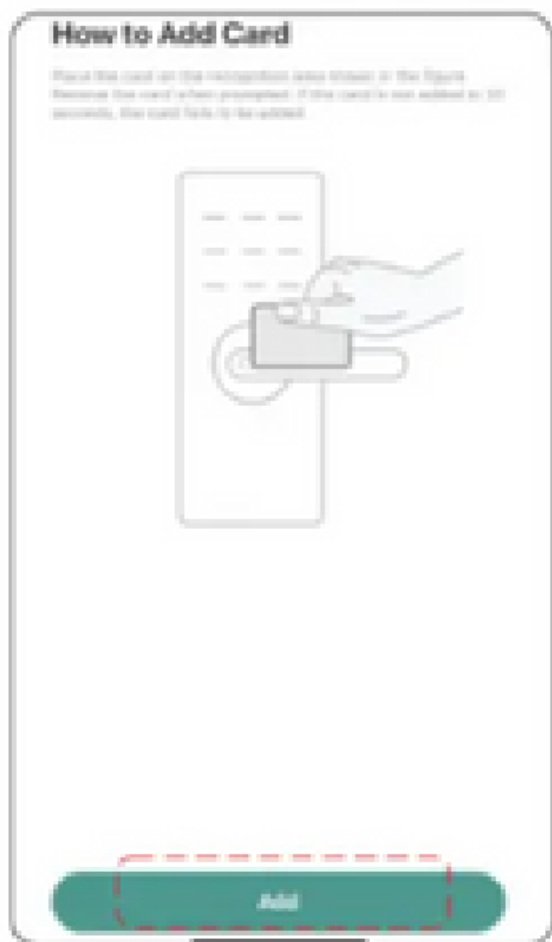


 Step 3: Name card and save

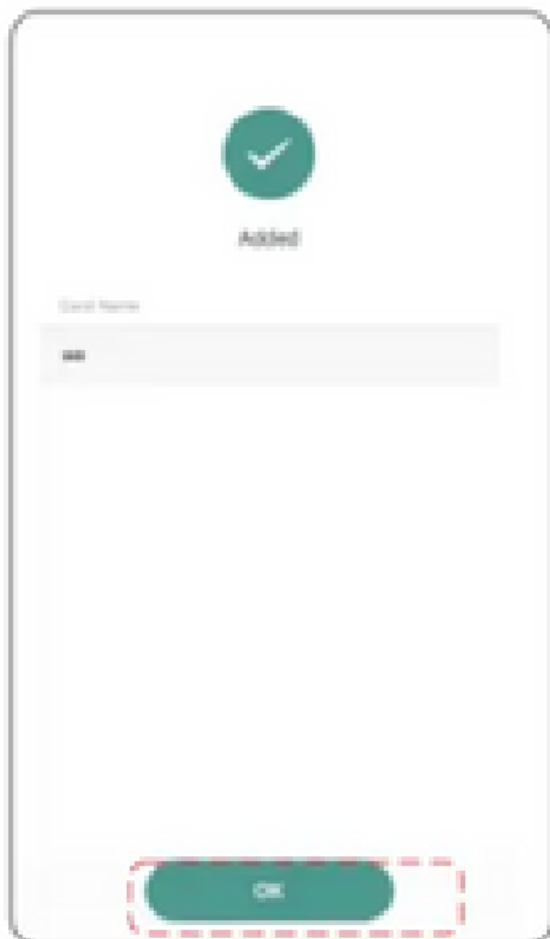


Add Temporary Code

 
Step 1: Tap Temporary Code

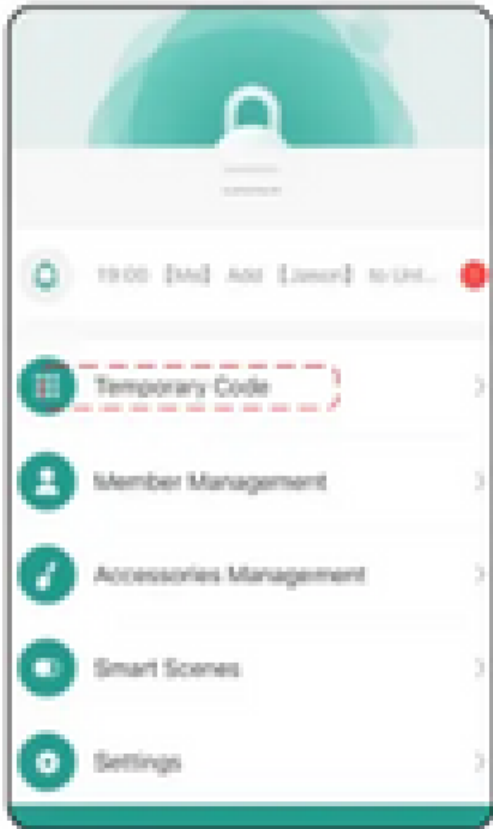

 Step 2: Select code type and set parameters

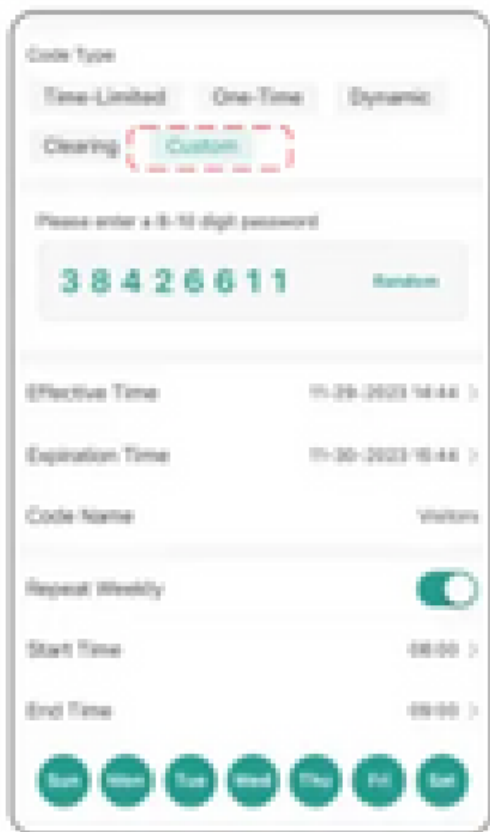

 Step 3: Confirm and save

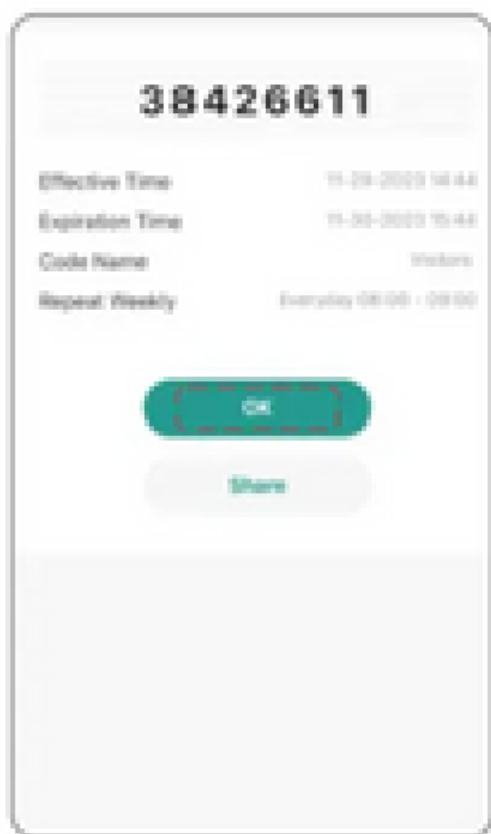

Technical Specifications

Main material	Aluminum Alloy,Zinc alloy,Tempred glass
Available Color	Black
way to install	Wall mounting(main)
Communication	BLE5.0
Support OS	iOS 7.0 or above, Android 4.3 or above
Battery Life	7000 times normal unlock(10-12 months)
Power Supply	DC6V:4pcs AAA alkaline batteries
Static Current	<65uA
Dynamic Current	<180mA
Unlock Way	APP,Passcode,Card,Manual key,Fingerprint(optional)
Unlock Time	1~1.5 seconds
Working Temperature	-20~55 degree
Working Humidity	10%~95%
Factory Password	Factory master password:123456, after configuration,it will be invalid
Virtual Password	Available
IP Level	IP65 Certificated
User Capacity	Number of Fingerprints, Passwords and Cards: 200

Warranty & Support

Thank you for choosing Link style. We are dedicated to providing innovative and convenient products for an enhanced lifestyle. This Product Warranty Agreement ("Warranty") applies to items purchased directly from Link style.

Warranty Duration:

All products sold by Link style come with a standard one (1) year warranty from the date of purchase, unless stated otherwise.

Warranty Coverage:

During the warranty duration, Link style assures that the product will be free from defects in materials and workmanship when used under regular conditions.

Exclusions:

This Warranty does not cover the following:

Damages due to misuse, neglect, or deviation from user instructions.
Damages from natural disasters such as floods, fires, or accidents.
Unauthorized repairs, modifications, or disassembling.
Cosmetic damages like scratches, dents, or broken parts.

Filing a Warranty Claim:

- Reach out to Link style Customer Support providing your proof of purchase, product details, and a comprehensive description of the issue.
- Our team will evaluate the claim and, if required, provide return shipping instructions.
- If the product is confirmed defective, Link style, at its discretion, will repair or replace the item.

Limitation of Liability:

Link style's liability is strictly limited to the repair or replacement of the product. Under no circumstances will Link style be liable for any indirect, incidental, or consequential damages. The total liability shall not exceed the original purchase price of the product.

Warranty Transferability:

This Warranty is solely for the original purchaser and cannot be transferred.

Governing Law:

This Warranty is governed by the laws of the country/state of purchase.

Disclaimer:

Apart from what's stated here, no other express or implied warranties apply, including implied warranties of merchantability or suitability for a specific purpose.

For any queries or concerns regarding our products or this Warranty, reach out to us at support@linkstyle.life.

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC.

Other third-party brands and names are the property of their respective owners.

Scan the QR code below for an updated digital manual, more details, guides, FAQs, and other product resources for this device



<https://linkstyle.life/mx2h>


CUSTOMER SUPPORT

If you need any support, do not hesitate to reach out to us at:



email: support@linkstyle.life
voicemail: 1-[888-419-4888](tel:888-419-4888)



Documents / Resources

 Linkstyle Linkstyle Matrix II Smart Key Lock Box Manual <small>Updated: 2024-07-27</small>	<p>Linkstyle L-58 Matrix II Smart Key Lock Box [pdf] Instruction Manual</p> <p>L-58, 85mm x 115mm, L-58 Matrix II Smart Key Lock Box, L-58, Matrix II Smart Key Lock Box, II Smart Key Lock Box, Smart Key Lock Box, Key Lock Box, Lock Box, Box</p>
--	--

References

-  [. Spend less. Smile more.](#)
-  [Matrix II Resources | LinkStyle.life](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.