

# Linkstyle Matrix II Smart Key Lock Box With WiFi Hub User Manual

Home » LINKSTYLE » Linkstyle Matrix II Smart Key Lock Box With WiFi Hub User Manual



Linkstyle Matrix II Smart Lock Key Box Manual

## **Contents**

- 1 Matrix II Smart Key Lock Box With WiFi Hub
- 2 Notice Before Use
- **3 Product Overview**
- 4 Setup & Installation
- **5 Operating Instructions**
- **6 Technical Specifications 28**
- 7 Warranty & Support
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts

## Matrix II Smart Key Lock Box With WiFi Hub

This product manual was last updated on 02-152024. At the time of purchase, there may be an updated version available.


For the latest version of the manual:	For the setup video
https://www.linkstyle.life/kbox2	https://community.linkstyle.life/post/linkstyle-matrix-ii-smart-lock-key-box-video-guide-12842239


If you need any support, don't hesitate to reach out to us at: email: <a href="mailto:support@linkstyle.life">support@linkstyle.life</a> voicemail: 1-888-419-4888

## **Notice Before Use**

- The physical keys included with this device are the most important and reliable backup method for opening the key box. DO NOT lose them and DO NOT lock them inside the key box.
- Test the physical keys before using the key box to ensure they work properly.

## **Product Overview**

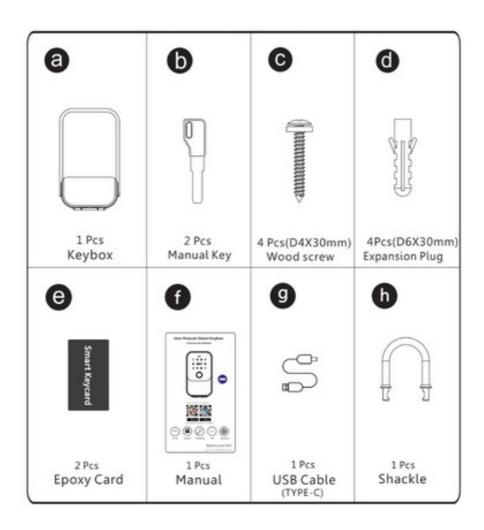

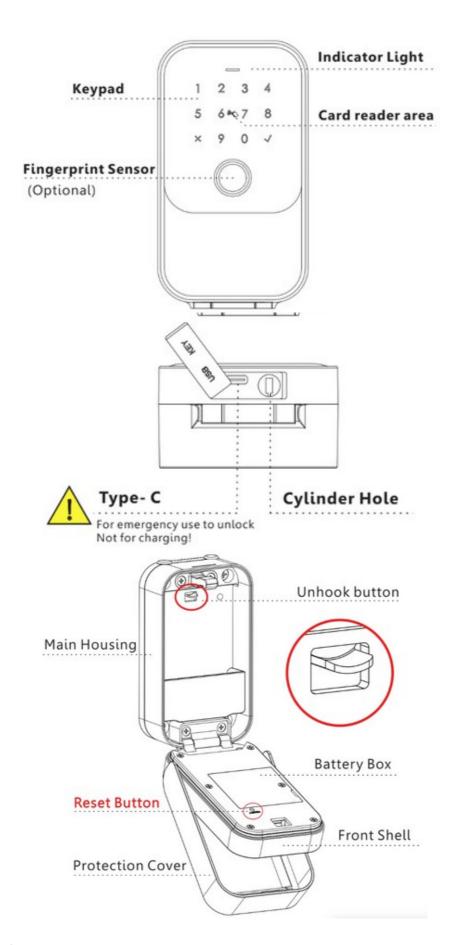

## **Setup & Installation**

## Install the Linkstyle app


Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



\*Alternatively, you can also search for "Linkstyle" on the Apple App Store or Google Play Store to find the app.

## \*\*\*Important Note:

When registering an account in the Linkstyle app, be sure to set the region to United States of America.

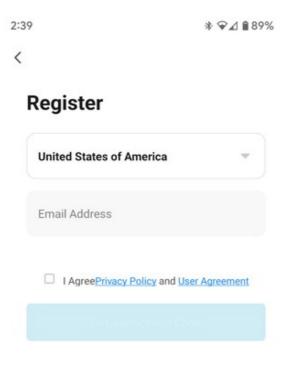

Open the key box, then open the battery compartment and install 4 x AAA batteries.





## Add device to Linkstyle app

After installing the batteries for the first time, the device will be in setup mode by default. To confirm, touch the keypad to wake it up and you should hear the voice prompt "Please pair device".


If you do not hear the voice prompt, refer to page 18 to reset the device to factory settings.


## Add device to Linkstyle app

If you are adding the device to the Linkstyle app directly via Bluetooth without a Nexohub, follow the steps starting on page 13. If you are adding the device to the Linkstyle app through a Nexohub gateway, follow the steps starting on page 14.

## Add device to Linkstyle app - Bluetooth


Step 1: In the Devices page of the Linkstyle app, tap the "+" button on the top right corner and tap "Add Device" Step 2: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap its icon and follow the onscreen instructions to complete setup.

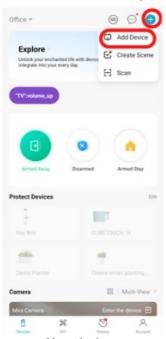

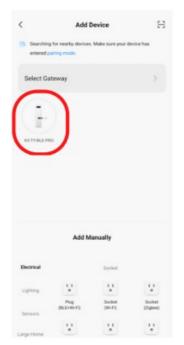


## Add device to Linkstyle app - Nexohub

Make sure to have a Nexohub added to your Linkstyle app and online before adding this device. Step 1: In the Devices page of the Linkstyle app, find and tap the Nexohub.

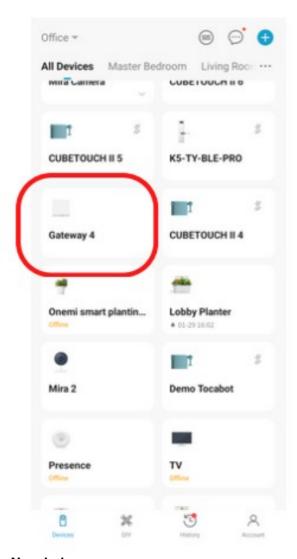

## Add device to Linkstyle app - Nexohub

Step 2: Make sure the "Bluetooth devices list" is selected, and tap "Add devices", then "Add new devices"

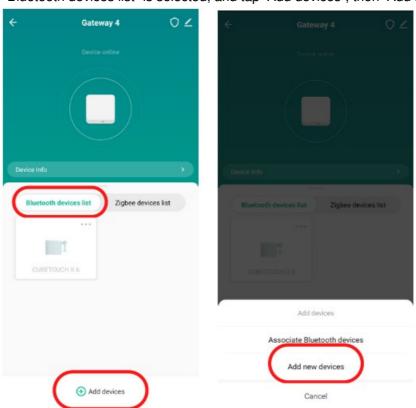

## Add device to Linkstyle app - Nexohub

Step 3: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap "Done" and follow the onscreen instructions to complete setup.



## Reset the device to factory settings

If you need to reset the device to factory settings, follow these steps:

Step 1: open the key box, then press and hold the reset button for 5 seconds, until you hear the voice prompt "Please enter the initialization password".



## Reset the device to factory settings

Step 2: Enter the initialization password on the keypad 000 then press (check mark).

You will hear the voice prompt "Operation successful". The device is now reset to factory settings in setup mode and the password is reset to 123456.




Device in factory settings: Press 123456 then √ (check mark) to unlock




## **Mount Device to Wall (Optional)**

Step 1: Poke out the screw plugs Step 2: Plan where to drill holes using the screw holes as a template

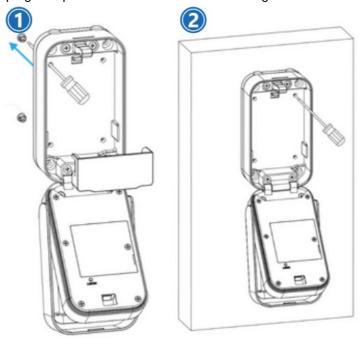


## **Mount Device to Wall (Optional)**

Step 3: Drill holes (D2 x 40mm) for screws. Install anchors if necessary

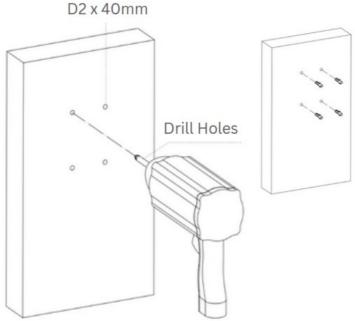

**Mount Device to Wall (Optional)** 

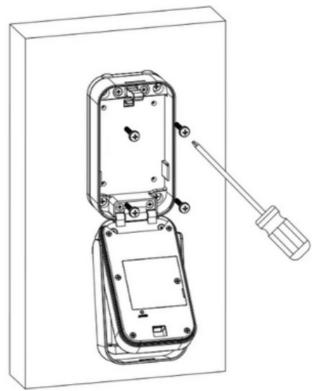

## Hang Device with Shackle (Optional)


Step 1: Remove rubber weatherproofing plugs

Step 2: Click shackle into main body




## Hang Device with Shackle (Optional)

To unlock shackle, push the Unhook button up and pull shackle out.

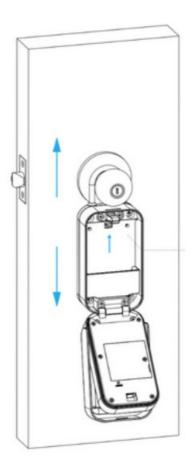

## **Operating Instructions**

## Add User Fingerprint

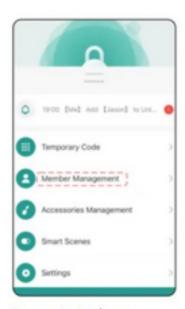

Step 1: Select Member



Step 2: Tap Add under Fingerprint

Me Admin 00-13A25F79F72

© Fingerprint

© Add

© Code

© Add

Effective Time


Parmanent



Step 3: Start Capturing




Step 4: Press finger 5 times

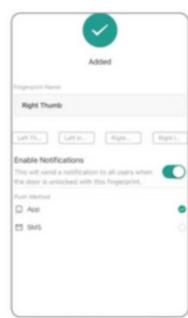


Step 5: Label the finger print

## **Add User Password**

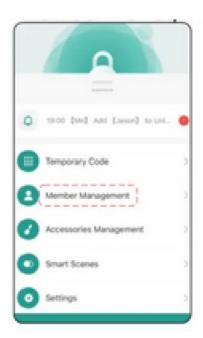

Step 1: Select Member

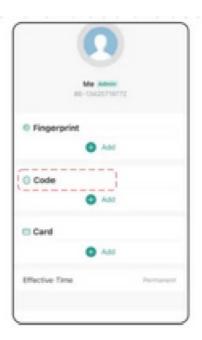


Step 2: Tap Add under Code



Step 3: Tap Random or enter a custom code


## Add User Card

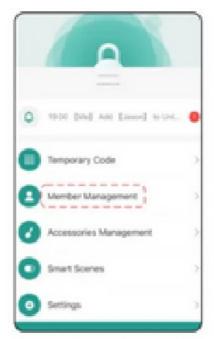

Step 1: Select Member



Step 2: Tap Add under Card

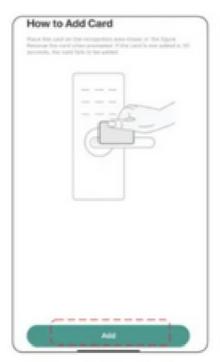


Step 3: Tap card to device center




Step 3: Name card and save

**Add Temporary Code** 

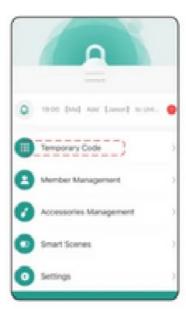



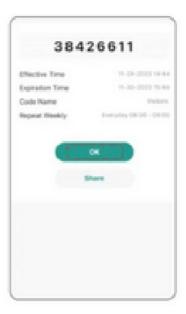

Step 1: Tap Temporary Code

Step 2: Select code type and set and save parameters

Step 3: Confirm

## **Technical Specifications 28**

Main material	Aluminum Alloy, Zinc allogempred glass
Available Color	Black
way to install	Wall mounting(main)
Communication	BLES.0
Support OS	iOS 7.0 or above, Android 4.3 or above
Battery Life	7000 times normal unlock(10-12 months)
Power Supply	DC6V:4pcs AAA alkaline batteries
Static Current	<6SuA
Dynamic Current	<180mA
Unlock Way	APP, Passcode, Card, Manual key, Fingerprint (Optional)
Unlock Time	1~1.5 seconds
Working Temperature	-20~55 degree
Working Humidity	10%~95%
Factory Password	Factory master password:123456, after configuration will be invalid
Virtual Password	Available
IP Level	IP65 Certificated
User Capacity	Number of Fingerprints, Passwords and Cards: 200

## **Warranty & Support**

Thank you for choosing Linkstyle. We are dedicated to providing innovative and convenient products for an enhanced lifestyle. This Product Warranty Agreement ("Warranty") applies to items purchased directly from Linkstyle.

## **Warranty Duration:**

All products sold by Linkstyle come with a standard one (1) year warranty from the date of purchase, unless stated otherwise.

## **Warranty Coverage:**

During the warranty duration, Linkstyle assures that the product will be free from defects in materials and workmanship when used under regular conditions.

#### **Exclusions:**

This Warranty does not cover the following:

- Damages due to misuse, neglect, or deviation from user instructions.
- Damages from natural disasters such as floods, fires, or accidents.
- · Unauthorized repairs, modifications, or disassembling.
- Cosmetic damages like scratches, dents, or broken parts.

#### Filing a Warranty Claim:

Reach out to Linkstyle Customer Support providing your proof of purchase, product details, and a comprehensive description of the issue. Our team will evaluate the claim and, if required, provide return shipping instructions. If the product is confirmed defective, Linkstyle, at its discretion, will repair or replace the item.

## **Limitation of Liability:**

Linkstyle's liability is strictly limited to the repair or replacement of the product. Under no circumstances will Linkstyle be liable for any indirect, incidental, or consequential damages. The total liability shall not exceed the original purchase price of the product.

## Warranty Transferability:

This Warranty is solely for the original purchaser and cannot be transferred.

#### Governing Law:

This Warranty is governed by the laws of the country/state of purchase.

#### Disclaimer:

Apart from what's stated here, no other express or implied warranties apply, including implied warranties of merchantability or suitability for a specific purpose.

For any queries or concerns regarding our products or this Warranty, reach out to us at <a href="mailto:support@linkstyle.life">support@linkstyle.life</a>.

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc. Amazon, Alexa, and all related logos are trademarks of <a href="Market-Amazon-A

Other third-party brands and names are the property of their respective owners.

**Linkstyle.life** 

Unlocking the enchanted life!

**Documents / Resources** 



<u>Linkstyle Matrix II Smart Key Lock Box With WiFi Hub</u> [pdf] User Manual Matrix II Smart Key Lock Box With WiFi Hub, Matrix II, Smart Key Lock Box With WiFi Hub, Lock Box with WiFi Hub, WiFi Hub, Hub

## References

- a Amazon.com
- User Manual

## Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.