

Linkstyle TOCABOT Smart Switch Bot Button Pusher



Linkstyle TOCABOT Smart Switch Bot Button Pusher Instruction Manual

[Home](#) » [LINKSTYLE](#) » Linkstyle TOCABOT Smart Switch Bot Button Pusher Instruction Manual



Contents

- 1 Linkstyle TOCABOT Smart Switch Bot Button Pusher
- 2 Smart Functions
- 3 Plug the Nexohub Multi-Mo
- 4 Step 1 – Add Nexohub Gateway to the App
- 5 Step 2 – Add the Tocabot to the App
- 6 Documents / Resources
 - 6.1 References



Linkstyle TOCABOT Smart Switch Bot Button Pusher



Smart Functions

Install the Linkstyle app

- Scan the QR code below to download and install the Linkstyle app.
- Register a new account on the app if you do not have one.



- Alternatively, you can also search for “Linkstyle” on the Apple App Store or Google Play Store to find the app.

Plug the Nexohub Multi-Mo

Preparations

1. Plug the Nexohub Multi-Mode Gateway into a power source and keep it plugged in for it to work.
2. Charge the Tocabot Smart Switch Button Pusher with a USB-C cable for 2 hours. Once it is charged, it can be unplugged.
3. Connect your Android or iOS smartphone to a 2.4GHz Wi-Fi network (devices will not work with a 5 GHz network)
4. Turn on Bluetooth connectivity on your smartphone.

Step 1 – Add Nexohub Gateway to the App

1. Make sure the Nexohub is in setup mode, indicated by a flashing LED indicator.
 - If the device is not in setup mode, press and hold the Reset Button for 3 seconds until the
 - The LED indicator starts to flash.
2. Log into the Linkstyle app and go to the Devices page.
3. Tap the button, then tap “Add Device”
4. The app will automatically scan for new devices to add.
5. Once the device is discovered, an icon will appear to represent the Nexohub device.
6. Tap on the Nexohub device icon and follow the on-screen instructions to complete the setup.

Step 2 – Add the Tocabot to the App

1. Navigate to the Devices page in the Linkstyle app.
2. Tap the Nexohub Gateway in the app.
3. Make sure the “Bluetooth devices list” tab is selected.
4. Tap the “Add devices” button.
5. Tap “Add new devices”
6. Make sure the Tocabot is in setup mode, as indicated by a flashing blue LED indicator.
7. If the Tocabot is not in setup mode, turn the device on-off-on-off-on by toggling the ON/OFF switch until the LED indicator flashes purple
8. Follow the on-screen instructions to complete the setup


Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of [Amazon.com](https://www.amazon.com) Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC.

Other third-party brands and names are the property of their respective owners.

Documents / Resources

	Linkstyle TOCABOT Smart Switch Bot Button Pusher [pdf] Instruction Manual TOCABOT Smart Switch Bot Button Pusher, TOCABOT, Smart Switch Bot Button Pusher, Switch Bot Button Pusher, Bot Button Pusher, Button Pusher, Pusher
---	--

References

- [a Amazon.com](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.