



LINOVISION IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor User Manual

[Home](#) » [LINOVISION](#) » LINOVISION IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor User Manual 

LINOVISION

Environment Monitoring Sensor

Featuring LoRaWAN®

IOT-S500TH/WD/MCS

USER MANUAL

Updated on Apr 11, 2022

Contents

- [1 IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor](#)
- [2 Product Introduction](#)
- [3 Hardware Introduction](#)
- [4 Basic Configuration](#)
- [5 Installation](#)
- [6 Cloud Management](#)
- [7 Sensor Payload](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor

Applicability

This guide is applicable to IOT-S500TH/WD/MCS sensors shown as follows, except where otherwise indicated.

Model	Description
IOT-S500TH	Temperature and Humidity Sensor
IOT-S500MCS	Magnet Switch Sensor
IOT-S500WD-P	Spot Leak Detection Sensor

Safety Precautions

Linovision will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.


- ❖ The device must not be remodeled in any way.
- ❖ The device is not intended to be used as a reference sensor, and Linovision will not shoulder responsibility for any damage which may result from inaccurate readings.
- ❖ Do not place the device close to objects with naked flames.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ Make sure electronic components do not drop out of the enclosure while opening.
- ❖ When installing the battery, please install it accurately, and do not install the reverse or wrong model.
- ❖ Make sure both batteries are newest when install, or battery life will be reduced.
- ❖ The device must never be subjected to shocks or impacts.

Declaration of Conformity

IOT-S500TH/WD/MCS is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Hangzhou Linovision Co., Ltd.

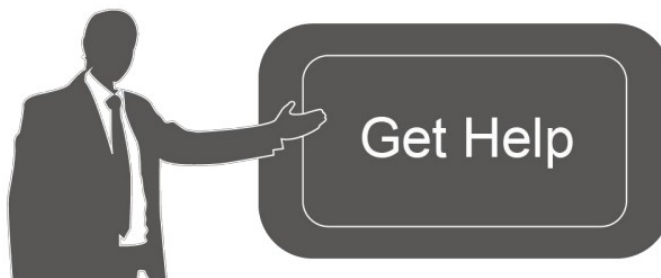

For assistance, please contact
 Linovision technical support:
 Email: support@linovision.com
 Tel: +86-571-8670-8175
 Website: www.linovision.com

Product Introduction

1.1 Overview

IOT-S500TH/WD/MCS is a sensor mainly used for outdoor environment through wireless LoRa network. IOT-S500TH/WD/MCS device is battery powered and designed for multiple mounting ways. It is equipped with NFC (Near Field Communication) and can easily be configured by a smartphone or a PC software.

Sensor data are transmitted in real-time using standard LoRaWAN® protocol. LoRaWAN® enables encrypted radio transmissions over long distance while consuming very little power. The user can obtain sensor data and view the trend of data change through the Cloud or through the user's own Network Server.







1.2 Features

- Up to 11km communication range
- Easy configuration via NFC

- Standard LoRaWAN® support
- Low power consumption with 4000mAh replaceable battery

Hardware Introduction

2.1 Packing List

			
1 × IOT-S500TH/WD/ MCS Sensor	Wall Mounting Kits	1 × Warranty Card	1 × Quick Guide
			
Double Sided Tape (for WD or MCS sensor)	Mounting Screws (for WD or MCS sensor)		




If any of the above items is missing or damaged, please contact your sales representative.

2.2 Product Overview



Front View:

1. NFC Area

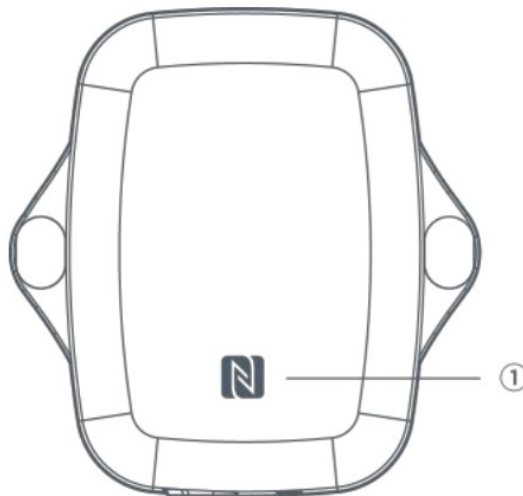


Bottom View:

2. Vent
3. Waterproof Connectors
(For water leakage and magnet switch sensor)

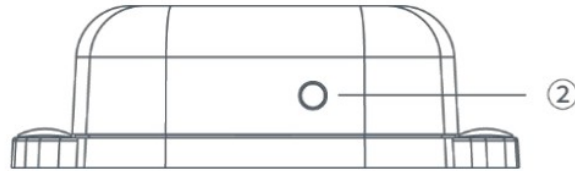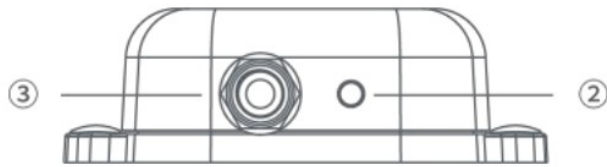


Internal View:

- 4. LED
- 5. Power Button
- 6. USB Type-C
- 7. Expandable Battery Slot
- 8. Battery

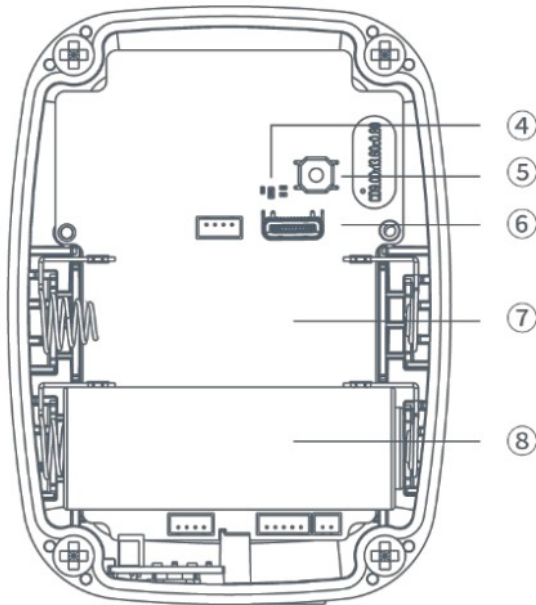

2.3 Dimensions(mm)

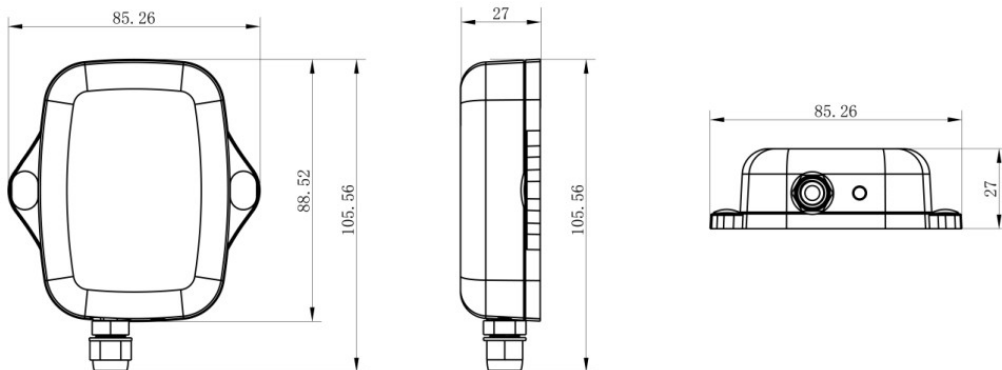

2.4 Power Button

Note: The LED indicator and power button are inside the device. IOT-S500TH/WD/MCS can also be turned on/off and reset via Mobile APP or Toolbox.

Function	Action	LED Indication
Turn On	Press and hold the button for more than 3 seconds.	Off → Static Green
Turn Off	Press and hold the button for more than 3 seconds.	Static Green ->Off
Reset	Press and hold the button for more than 10 seconds. Note: IOT-S500TH/WD/MCS will automatically power on after reset.	Blink 3 times.
Check On/Off Status	Quickly press the power button.	Light On: Device is on.
		Light Off: Device is off.

Basic Configuration

IOT-S500TH/WD/MCS sensor can be monitored and configured via one of the following methods:

- MobileAPP (NFC);
- Windows software (NFC or Type-Cport).

In order to protect the security of sensor, password validation is required when configuring via unused phone .Default password is 123456.

3.1 Configuration via Smartphone APP


Preparation:

- Smartphone (NFC supported)
- ToolboxAPP: download and install fromGoogle Play or Apple Store.


3.1.1 Read/Write Configuration via NFC

1. Enable NFC on the smartphoneand open“Toolbox”APP.
2. Attach the smartphone with NFC area to the device to read basic information.


Note: Ensure your smartphone NFC area and it is recommended to take off phone case before using NFC.

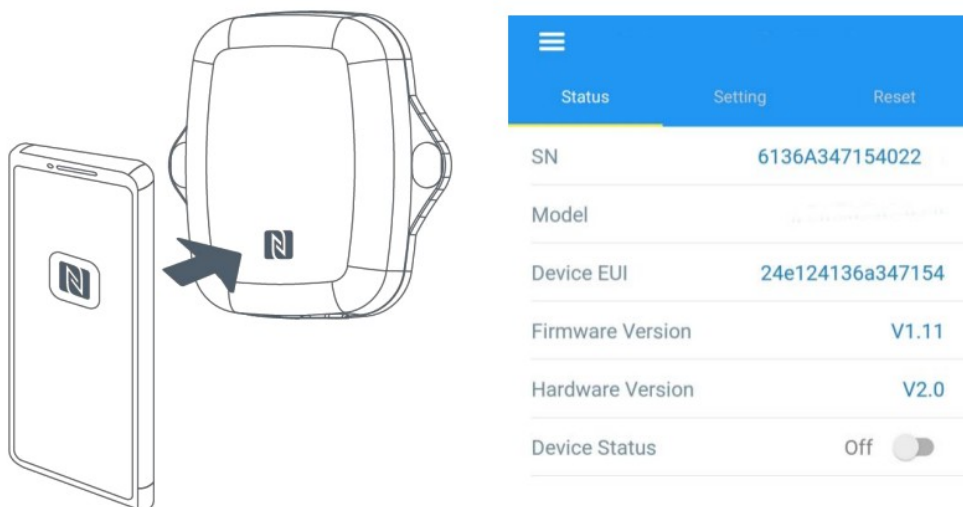

3. Change the on/off status or parameters, then attach the smartphone with NFC area to the device until the APP shows a successful prompt.

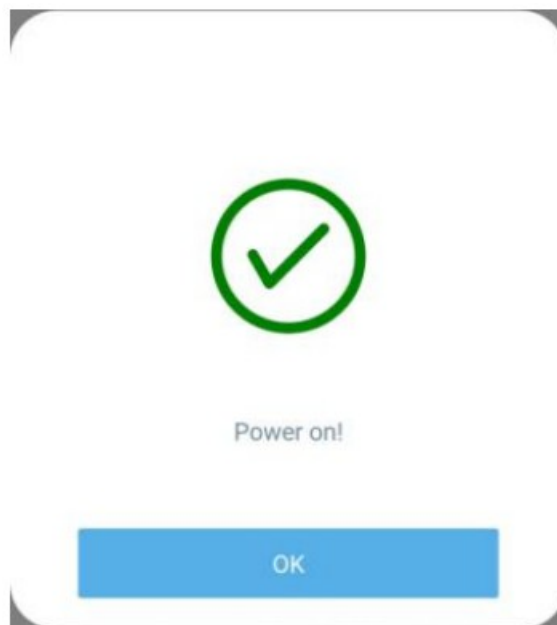

4. Go to “Device > Status” to tap “Read” and attach the smartphone with NFC area to the device to read real-time data of sensor.

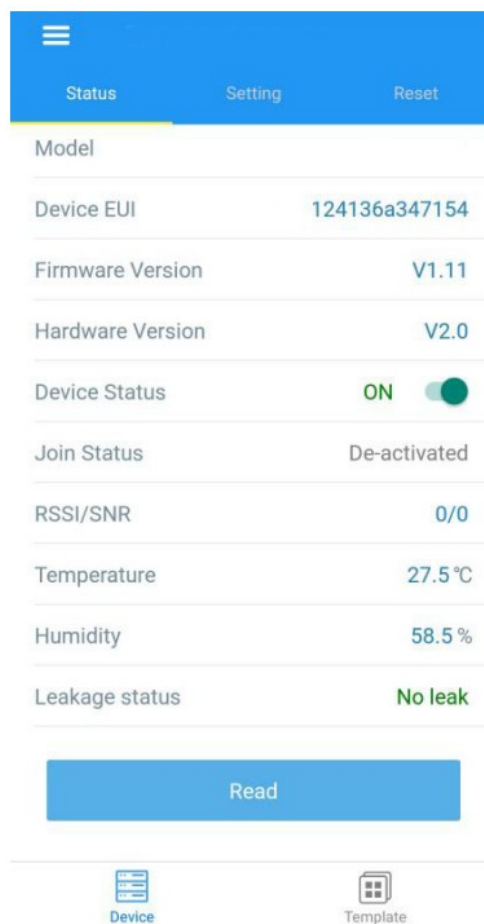


3.1.2 Template Configuration

Template settings only work for easy and quick device configuration in bulk.

Note: Template function is allowed only for sensors with the same model and LoRa frequency band.

1. Go to “Template” page on the APP and save current settings as a template.

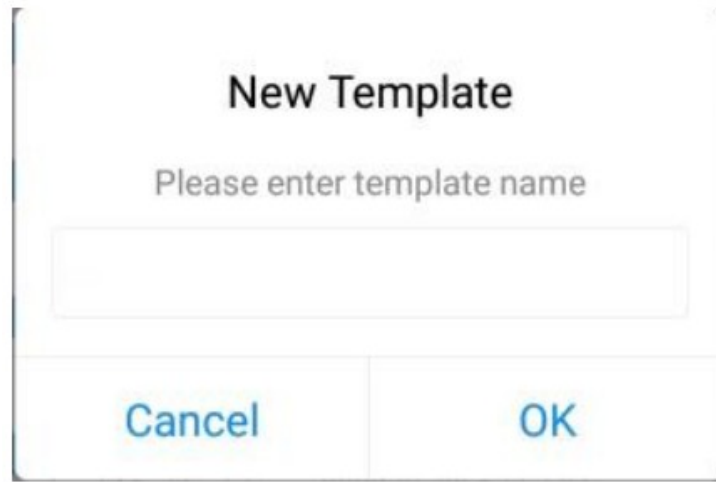


New Template

Please enter template name

Cancel OK

2. Attach the smartphone with NFC area to another device.
3. Select the template file from ToolboxAPP and tap "Write", keep the two devices close until the APP shows a successful prompt.

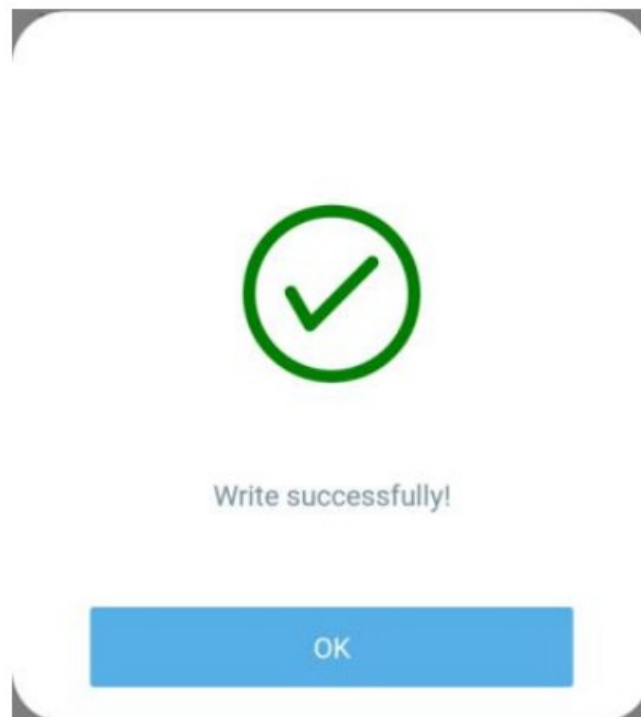

4. Slide the template item to the left to edit or delete the template.

Template		
<input type="text"/>		
20200318	Edit	Delete
re: 2020-03-18 16:20:23		

3.3 Configuration Examples

3.3.1 LoRa Channel Settings

The configuration of LoRaWAN® channel of IOT-S500TH/WD/MCS must match the gateway's. Refer to Appendix to check default channel settings of IOT-S500TH/WD/ MCS.

Mobile APP Configuration:

Open Toolbox APP and go to "Device ->Setting->LoRaWAN Settings" to change the frequency and channels.

Software Configuration:

Log in Toolbox and go to "LoRaWAN Settings -> Channel" to change frequency and channels.

Note: If frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

1,40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40,60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

Index	Frequency/MHz
0 - 15	902.3 - 905.3
16 - 31	905.5 - 908.5
32 - 47	908.7 - 911.7
48 - 63	911.9 - 914.9
64 - 71	903.9 - 914.2

Channel Index	Frequency/MHz	Channel Spacing/MHz	BW/kHz
0 - 15	915.2 - 918.2	0.2	125
16 - 31	918.4 - 921.4	0.2	125
32 - 47	921.6 - 924.6	0.2	125
48 - 63	924.8 - 927.8	0.2	125
64 - 71	915.9 - 927.1	1.6	500

Note:
64 channels numbered 0 to 63 utilizing LoRa 125 kHz BW starting at 915.2 MHz and incrementing linearly by 0.2 MHz to 927.8
8 channels numbered 64 to 71 utilizing LoRa 500 kHz BW starting at 915.9 MHz and incrementing linearly by 1.6 MHz to 927.1

3.3.2 Alarm Settings

When water leakage sensor or magnet switch sensor is triggered, it will send alarm message once by default. Toolbox allows users to change the alarm reporting interval and reporting times.

Mobile APP Configuration:

Open Toolbox APP and go to "Device -> Setting -> Threshold Settings" to enable the threshold settings and input the threshold.

Threshold Settings

When the value meets the threshold, the device will report the value immediately.

CO2 ☒

Over / ppm

1000

Below / ppm

0

Collecting Interval 3 min

Software Configuration:

Log in Toolbox and go to "Device Settings -> Basic -> Threshold Settings" to enable the calibration and input the calibration value.

Alarm Settings


Leakage Alarm ☒

Alarm reporting interval min

Alarm reporting times


Installation

1. Attach IOT-S500TH/WD/MCS to the wall and mark the two holes on the wall. The connecting line of two holes must be a horizontal line.
2. Drill the holes according to the marks and screw the wall plugs into the wall.
3. Mount the IOT-S500TH/WD/MCS to the wall via mounting screws.
4. Cover the mounting screws with screw caps.

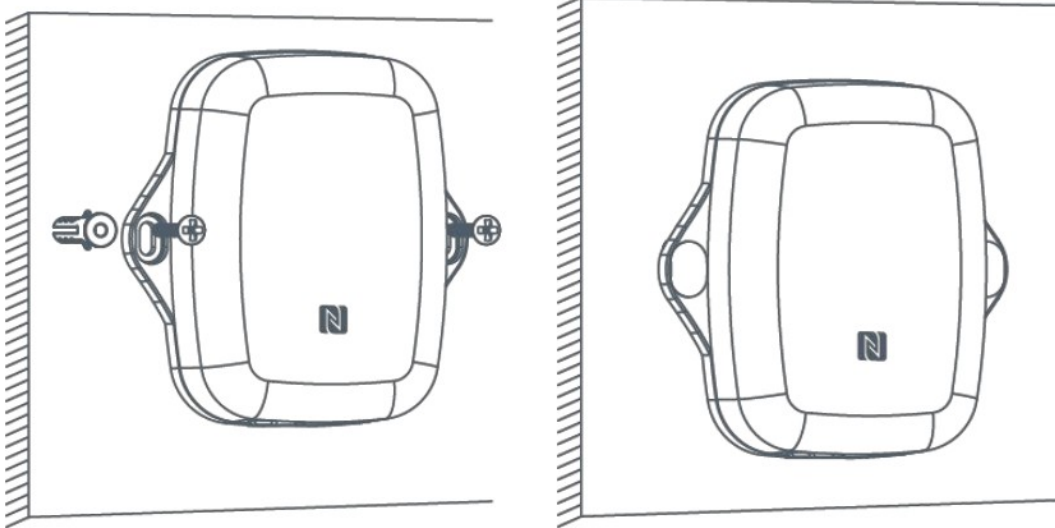

5. For leak detection sensor, install the probe/cable to the place where liquid may leak. For magnet switch sensor, install the magnet beside the door/window.

Note: For IOT-S500WD sensor, please ensure the metal pins of the probe are flat on the floor. The probe or cable of water leakage sensor should be placed in an area of concern where water from a leak would likely accumulate.

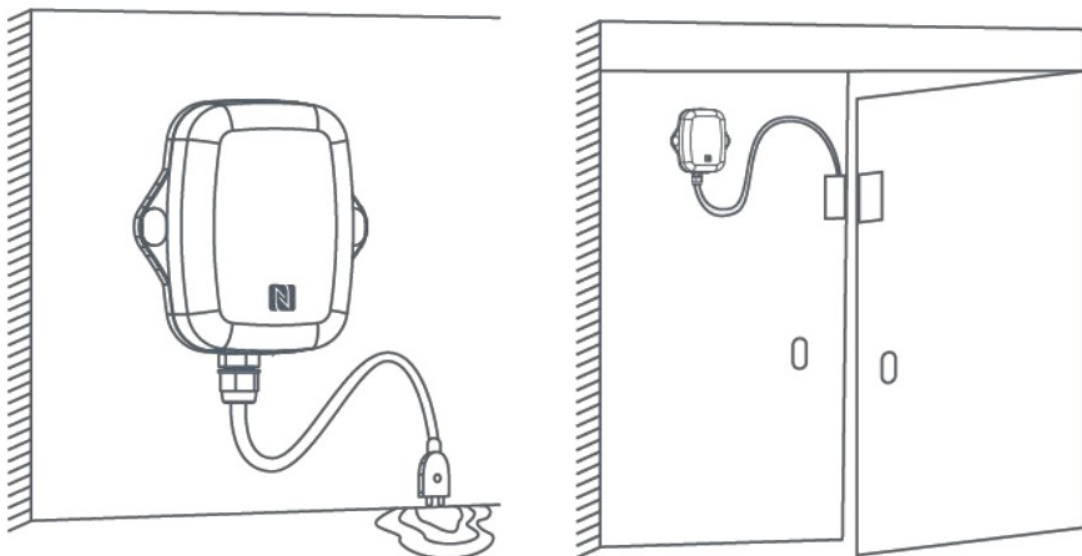

Cloud Management

IOT-S500TH/WD/MCS sensor can be managed by Cloud platform. Cloud is a comprehensive platform that provides multiple services including device remote management and data visualization with the easiest operation procedures.

5.1 Add a Gateway

1. Click "Enable" and choose mode in gateway web GUI.

Note: Ensure gateway has accessed the Internet.

General Setting

Gateway EUI: 24E124FF

Gateway ID: 24E124FF

Frequency-Sync: Disabled

Multi-Destination

ID	Enable	Type	Server Address	Operation
0	Enabled		localhost	[Edit] [Delete] [Add]

General Setting

Enable: ☒

Cloud: ☒

NetID: 010203

Join Delay: 5 sec

RX1 Delay: 1 sec

Lease Time: 8760-0-0 hh-mm-ss

Log Level: info

- Go to “My Devices” page and click “+NewDevices” to add gateway to Cloud via SN. Gateway will be added under “Gateways” menu.

My Devices

Search: [Search Bar]

Normal: 1, Alarm: 1, Offline: 1, Inactive: 3

+ New Devices

Add Device

* SN: [Input Field]

* Name: [Input Field]

Cancel Confirm

- Check if gateway is online.

My Devices

Search: [Search Bar]

Normal: 1, Offline: 0, Inactive: 1

+ New Devices

Status	Name	Associated Devices (Joined /Not Joined /Failed)	Last Updated
Normal	85-915 621694470052	2 / 2 / 0 More	-
Offline	8555 6217A3163763	Device is not bound, please power on the device, after that, it will be associated with your account automatically	2020-08-18 16:42

5.2 Add IOT-S500TH/WD/MCS to Cloud

- Go to “Device->My Devices” and click “Add Device”. Fill in the SN of IOT-S500TH/ WD/MCS sensor and select associated gateway.

Add Device

SN

6127

Name

Associated Gateway

231 (62178040/0000)

Device EUI

24e124127/00000000


Application Key

5572404c696e6b4c6f52613230313f

Cancel

Add

2. After sensor is connected to Cloud, you could check the device information and data and create dashboard for it.

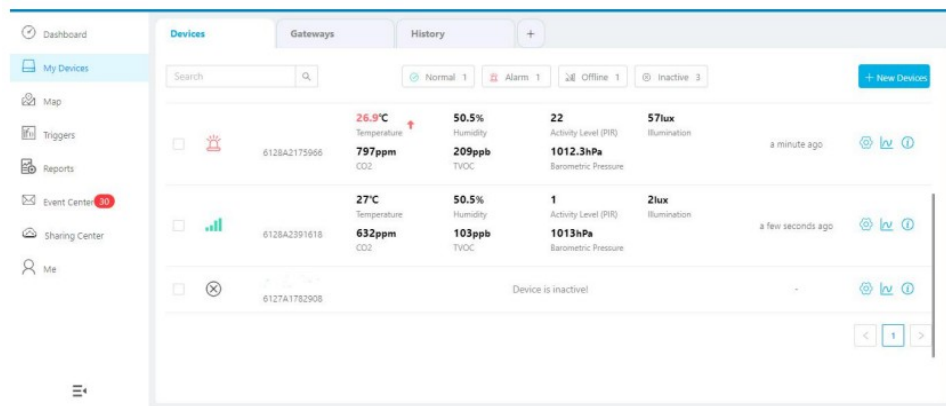

Sensor Payload

All data are based on following format:

0a(Software Version)	01 14	V1.14
0f(Device Type)	00	Class A

Uplink Packet(HEX)

Channel	Type	Data Example	Description
01	75(Battery Level)	64	64=>10 Battery level =100%
03	67 (Temperature)	10 01	10 01 =>01 10 =272 Temp=272*0.1=27.2°C
04	68(Humidity)	71	71=>1 3 Hum=113*0.5=56.5%
05	00	00	Not water leakage
		01	Water leakage
06	00	00	Magnet switch closed
		01	Magnet switch open
ff	01	01	V1
	08 (Device SN)	64 10 90 82 43 75 00 01	Device SN is 6410908243750001
	09 (Hardware Version)	01 40	V1.4

	0a(Software Version)	01 14	V1.14
	0f(Device Type)	00	Class A


Downlink Packet(HEX)

Channel	Type	Data Example	Description
ff	03(Set Reporting Interval)	b0 04	b0 04 =>04 b0 =1200s

Appendix Default LoRaWAN Parameters

DevEUI	24E124 +2nd to 11th digits of SN e.g. SN =61 26 A1 01 84 96 00 41 Then Device EUI =24E124126A101849
AppEUI	24E124C0002A0001
Appport	0x55
NetID	0x010203
DevAddr	The 5th to 12th digits of SN e.g. SN =61 26 A1 01 84 96 00 41 Then DevAddr =A1018496
AppKey	5572404C696E6B4C6F52613230313823
NwkSKey	5572404C696E6B4C6F52613230313823
AppSKey	5572404C696E6B4C6F52613230313823

Documents / Resources

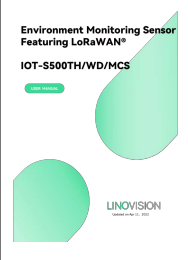	<p>LINOVISION IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor [pdf] User Manual</p> <p>IOT-S500TH, IOT-S500MCS, IOT-S500WD-P, IOT-S500TH LoRaWAN Wireless Temperature and Humidity Sensor, IOT-S500TH, LoRaWAN Wireless Temperature and Humidity Sensor, Wireless Temperature and Humidity Sensor, Temperature and Humidity Sensor, Humidity Sensor</p>
---	---

References

- [Welcome to Linovision Online Store | LINOVISION US Store](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.