



LINSAY SLP-500CLR LED Light Show Bluetooth Speaker User Manual

[Home](#) » [LINSAY](#) » LINSAY SLP-500CLR LED Light Show Bluetooth Speaker User Manual 



Contents

- 1 LINSAY SLP-500CLR LED Light Show Bluetooth Speaker User Manual
- 2 FCC Class B:
- 3 SAFETY PRECAUTIONS
- 4 Description of Parts
- 5 Charging the Speaker
- 6 Talking using the Bluetooth Speaker
- 7 1+1 Connection
- 8 Listening to FM Radio
- 9 Play Music through “Auxiliary” Mode
- 10 Troubleshooting
- 11 Specifications
- 12 SAFETY INSTRUCTIONS
- 13 FCC STATEMENT:
- 14 LINSAY’s Responsibility
- 15 How to Obtain Warranty Service
- 16 Owner’s Responsibility
- 17 Documents / Resources
 - 17.1 References

LINSAY SLP-500CLR LED Light Show Bluetooth Speaker User Manual



SLP-500CLR / SLP-500CLW / SLP-500CLB

Copyright 2023 LINSAY. All right reserved.

www.LINSAYdigital.com

FCC Class B:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTICE:

 
1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the Emission limits.
3. The manufacture is not responsible for any radio or TV interference caused by unauthorized modification to the equipment. It is the responsibilities of the user to correct such interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAFETY PRECAUTIONS

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.

- Charge the battery if: a) The battery level icon displays
- (An empty battery) b) The device powers off automatically when restarted. c) There is no response when pressing keys with keys unlocked and battery full.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety Symbol Explanation:

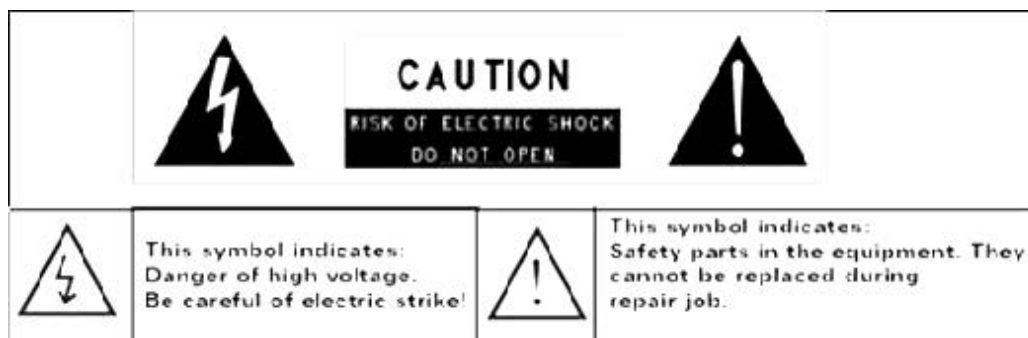

- -The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- -To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- -The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- -Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland. In France, except the channel 10 through 13, law prohibits the use of other channels.

Cautions

- The LINSAY SLP-500CLR / SLP-500CLW and SLP-500CLB respect the current regulations for limiting the output volume of consumer audio devices to a safe level. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.

- Sound can be deceiving. Over time your hearing “comfort level” adapts to higher volumes of sound. What sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.

- To establish a safe volume level:

- a. Start your volume control at a low setting.

- b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device’s operation. All information is subject to change without prior notification. Please follow your actual device’s operational procedures

Dear Sir/Madam:

Thanks you for purchasing LINSAY SLP-500CLR / SLP-500CLW and SLP-500CLB Bluetooth Speaker.

This product adopts high-capacity lithium battery, bass and noise reduction techniques, general Bluetooth audio module and A2DP for audio transmission to give you hi-fi music.

Also, it has built-in microphone to support hands-free talking and satisfy you with excellent user experience. Please read this manual carefully and completely before using the device. Please keep this manual for future reference.

Safety Notes

 
1. Please adjust the volume properly to avoid excessive output power, which may impair your hearing.

2. Please keep the device away from moisture, rain water, sand, heat source and any container with liquid.


3. Please clean this device with slightly wet cloth instead of alcohol or benzene containing solvent.

*Please charge the speaker every three months if the speaker doesn’t play for long time.

Description of Parts

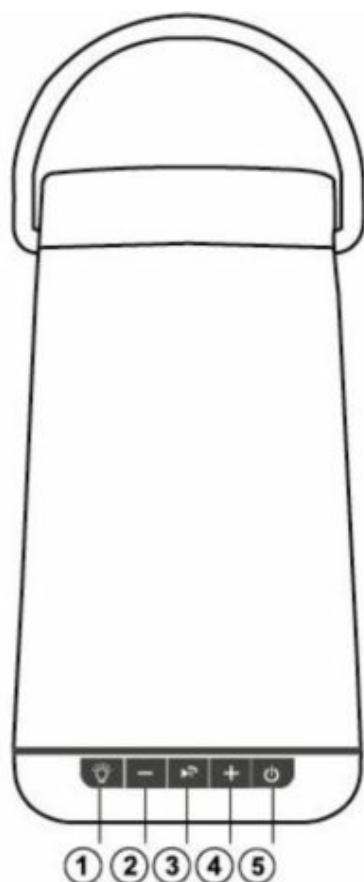

 - 1 Light Mode Switch
- 2 Skip Backward / Volume Decrease
- 3 Play / Pause / Hands Free Calling
- 4 Skip Forward / Volume Increase
- 5 ON/OFF/Mode Switch

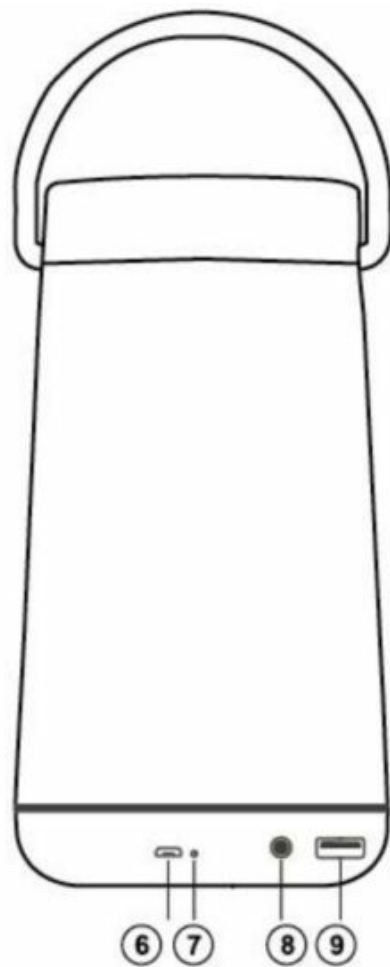

- 6 Charging Port**
- 7 LED Light Indicator**
- 8 Auxiliary Port**
- 9 USB (Flash Drive) Slot**

Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes 8 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.

Turning ON/OFF the Speaker

Before Turning ON the speaker, please ensure that it is fully charged.

To Turn ON the device – Long Press the ON/OFF switch to turn on the speaker. To Turn OFF the device – Long Press the ON/OFF switch to turn off the speaker.

Connect using Wireless Technology

Long Press the ON/OFF switch to open the power, you would hear an indication tone showing the device is turned on, and you will hear another indication tone, showing that you are now in Wireless Pairing Mode. Activate the Bluetooth function on your source device (Mobile Phone, Tablet or other devices). Please refer to manufacturer's instructions for instructions on enabling Bluetooth wireless connection on your device.

Search for available Bluetooth Wireless devices and you would find "LINSAY SLP-500CL" – Pair it with this device. If required, enter the password "0000" to pair with the device. Once paired successfully, another indication tone would be heard.

You can now stream wireless music on your speaker through your source device.

Listening to Music Connecting Bluetooth

Please ensure that your device (Mobile Phone, Tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to decrease the volume
Pause	Playing music	Short press the Play /Pause button will pause the music
Play	Pausing	Short press the Play /Pause button will resume the music
Previous track	Playing music	Short press the — button will return you to the previous track
Next track	Playing music	Short press the + button will take you to the next track

(Note: The above functions only can be used in Wireless mode only. An indication tone will alert you when the volume is adjusted to either minimum or maximum level.)

Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Wireless Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button for 2 second
End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a Call	Press and hold the + button to increase the volume
Decrease Volume	During a Call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

1+1 Connection

To enrich your listening experience please you can build your own party by wirelessly connecting 2 speakers.

1. Turn ON the Speaker
2. Long press the light button and you will hear “dingdong” sound and means 2 speakers are connected successfully.
3. Activate the Bluetooth Wireless function on your source device (Mobile Phone, Tablet or other devices). Please refer to manufacturer’s instructions for instructions on enabling wireless connection on your device.
4. Search for available Wireless devices and you would find LINSAY SLP-500CL – Pair it with this device.
5. Enjoy your connecting music time.

Listening to FM Radio

Insert the Micro USB end of the included USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM Antenna while in FM Radio mode.

Long Press the ON/OFF switch to open the power, you would hear an indication tone then short press button then the speaker is in FM mode.

To AUTO SCAN the station, Press Power button once.

It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.

Press + or – to skip selected station.

Long press + to increase the volume or press – to decrease the volume

Play Music through “Auxiliary” Mode

Turn ON the speaker.

Insert one end of the Auxiliary cable (included) into the Auxiliary port,

Plug the other end to the audio device (such as phone / MP3 Player / computer / tabletetc). Select your

favourite song at the source device to play.

Long press + to increase the volume or press – to decrease the volume.

The LED Light Settings

Short Press the button to change the LED Light you like or turn off the light.

Stream music from USB Flash Drive

Turn ON the speaker.

Insert the USB Drive preloaded with songs, into the USB Card Slot of the speaker correspondingly.

Speaker would automatically start playing songs from the USB Drive.

Troubleshooting

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to decrease the volume
Pause	Playing music	Short press the Play /Pause button will pause the music
Play	Pausing	Short press the Play /Pause button will resume the music
Previous track	Playing music	Short press the — button will return you to the previous track
Next track	Playing music	Short press the + button will take you to the next track

Specifications

Wireless Streaming Range Distance	up to 10 Metres
Output Power	5 Watts
FM Frequency Range	87.5-108MHz
Unit Size	L86 x H184 x D86mm
Unit Weight	497g approx.
Power Input	DC 5V
Charging Time	2-3 hours
Play time	up to 2 hours (max. volume)
Built-In Rechargeable Battery	3.7V / 2000mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance).

SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician.
- Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.

This appliance is not a toy.

- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operation the equipment.

Warranty Policy

(1) ONE YEAR Limited Warranty on Parts and Labor

LINSAY provides (1) One YEAR of limited WARRANTY against manufacturing defects in materials and workmanship to the original purchaser of a new LINSAY purchased from an authorized LINSAY U.S., which begins on the date of purchase by the customer. Customer is responsible for maintaining proof of date of purchase and must make the registration of the product into of 30 days of the purchase on

<http://www.linsaydigital.com/registration.php> to validate the warranty

Customer Support 305.956.9273

LINSAY's Responsibility

LINSAY purchased new from an authorized LINSAY U.S. reseller and that are used in the fifty (50) United States or Puerto Rico are warranted to be free from manufacturing defects in materials and workmanship for (3) three months from the date of the original retail purchase. LINSAY ' limited warranty covers only those defects which arise as a result of normal use of the product, and do not apply to any improper or inadequate maintenance or modification; software, interfacing, media, parts, or supplies not provided or supported by LINSAY; or operation outside the product's specifications.

If LINSAY receives, during the applicable warranty period, notice of a defect in any hardware product, which is covered by LINSAY' warranty, LINSAY shall either repair or replace the defective product at LINSAY' option.

If LINSAY is unable to repair or replace, as applicable, a defective product which is covered by LINSAY' warranty, LINSAY shall within a reasonable time after being notified of the defect, refund the purchase price for the product.

LINSAY shall have no obligation to repair, replace or refund until the customer returns the defective product to LINSAY.

Units sent to LINSAY for repair will be repair or replaced with new or like-new product (s) of the same model with the same functionality as the original unit.

Original unit (s) will be returned only at LINSAY' discretion. LINSAY is not responsible for any content on the original unit. LINSAY' limited warranty is only valid in the country of purchase. LINSAY will not validate purchases made via trade or barter. This pertains to trade or barter between individuals on sites such as E-Bay where trade or barter transactions are facilitated. LINSAY does not warrant damage incurred to the shell case on any unit sold. Any manufacturer's defect is at the sole discretion and discernment of LINSAY repair technicians as the unit will need to be in possession of the return authorization number RAN technicians for a full and accurate evaluation to be made.

How to Obtain Warranty Service

To obtain warranty service, contact LINSAY Technical Support via email at TechnicalSupport@linsaydigital.com. You must provide the model, serial number, and date of purchase. LINSAY Technical Support is available from 10:00AM to 5:00PM EAST Time, Monday through Friday, Please note that holiday hours may vary. For up to date information, please visit www.LINSAYdigital.com .

LINSAY reserves the right to assess all warranty claims and to determine if defects or damages are covered by

this limited warranty. In case of a claim that is not covered by this warranty, you will be contacted to determine whether LINSAY should repair the damage for a fee or whether the product should be returned to you as received by the service technician or service center.

Parts and service labor that are LINSAY's responsibility under this limited warranty will be provided without charge. All other service is at the customer's expense.

LINSAY reserves the right to charge the customer for any service call for anything not covered by this limited warranty. Before you ask for warranty service, please review your User Manual. You may avoid a service call and a service charge.

Please refer to the reverse side of this page for additional information regarding how to obtain warranty service.

PLEASE DO NOT RETURN YOUR UNIT TO LINSAY WITHOUT PRIOR AUTHORIZATION.

Not Covered

This limited warranty does not cover the following: cosmetic defects; damage, malfunctions or failures resulting from shipping or transit, improper or faulty installation, abuse, operation contrary to furnished instructions, operation on incorrect power supplies, products not supplied by LINSAY, modification, alteration, improper servicing or tampering; damage from fire, water, lightning, power surges, abnormal environmental conditions or other acts of nature; normal wear and tear; unsatisfactory audio performance not caused by a manufacturing defect; or unreadable serial number.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. LINSAY'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER, INCLUDING LINSAY'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

LINSAY SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This is the only warranty applicable; no one is authorized to extend or modify it or to grant any other warranty on LINSAY's behalf.

Owner's Responsibility


To ensure warranty service, keep the dated bill or sales receipt as evidence of the purchase date and location.

This limited warranty applies only to original purchaser and is non-transferable.

Warranty service conditions are subject to change. For the latest Warranty Terms and Conditions and additional information regarding LINSAY's Limited Product Warranty, please see complete details online at:

Read More About This Manual & Download PDF:

Documents / Resources

	<p>LINSAY SLP-500CLR LED Light Show Bluetooth Speaker [pdf] User Manual</p> <p>SLP-500CLR LED Light Show Bluetooth Speaker, SLP-500CLR, LED Light Show Bluetooth Speaker, Light Show Bluetooth Speaker, Show Bluetooth Speaker, Bluetooth Speaker</p>
---	---

References

-  [LINSAY - Art in Digital Technology](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.