



Contents [[hide](#)]

- [1 LITBLOOM Battery-Operated Eucalyptus Twig-Vine Lights](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

LITBLOOM

LITBLOOM Battery-Operated Eucalyptus Twig-Vine Lights



INTRODUCTION

The LITBLOOM Battery-Operated Eucalyptus Twig-Vine Lights will bring a gentle ambiance and botanical elegance to your home. This 6FT artificial garland is priced at **\$24.36** and is adorned with 96 warm white LED fairy lights that are interwoven along lifelike eucalyptus foliage. This garland, which is both year-round functional and infused with a natural charm, is the product of LITBLOOM, a reputable manufacturer of home lighting décor. The garland, which was introduced to improve the beauty of wedding décor, holiday arrangements, and everyday spaces, features a timer function that enables it to be on for 6 hours and turned off for 18 hours, making it ideal for creating a stress-free indoor or outdoor atmosphere. The flexible yet sturdy branches are effortless to shape and arrange, whether you are adorning a fireplace, stair handrail, event arch, or dinner table. Crafted from waterproof materials that have been rated at IP44, this garland is suitable for both domestic relaxation and outdoor festivities. It is a stunning finishing touch to any seasonal or everyday display, and it is powered by 3 AA batteries

(not included). Additionally, it is lightweight and portable.

SPECIFICATIONS

| | |
|---------------------------|--|
| Product Name | LITBLOOM Battery-Operated Eucalyptus Twig-Vine Lights |
| Price | \$24.36 |
| Brand | LITBLOOM |
| Length | 6 Feet |
| Light Count | 96 warm white LED fairy lights |
| Plant Type | Artificial Eucalyptus Vine |
| Design | Organic-textured eucalyptus leaves, artfully crafted |
| Branches | Flexible but sturdy – easy to shape for styling |
| Lighting Control | Built-in timer (6 hrs ON / 18 hrs OFF) |
| Power Source | 3 AA batteries (not included) |
| Waterproof Rating | IP44 – suitable for indoor and outdoor use |
| Uses | Fireplace, mantle, dinner table, wedding backdrop, arch, DIY events, holiday décor, centerpieces |
| Lighted | Yes |
| Average Light Life | 6 hours per cycle (with timer function) |

| | |
|--------------------|--|
| Decor Theme | Year-round greenery with warm lighting for weddings, holidays, parties |
|--------------------|--|

WHAT’S IN THE BOX

- Twig-Vine Lights
- User Manual

FEATURES

- **6 Foot Garland:** This garland is 6 feet in length and is ideal for adorning mantles, stairs, tables, and other surfaces.
- **96 warm white LED lights:** Cozy fairy lights that are affixed to the vine to create an inviting ambiance.
- **Artificial Eucalyptus Leaves:** The organic textured leaves offer a natural, elegant appearance.
- **Battery Operated:** For cordless convenience, it is powered by three AA batteries (not included).



- **Internal timer Function:** Energy conservation is achieved by automatically operating for six hours and then turning it off for eighteen hours.
- **Sturdy and Flexible Branches:** Branches can be bent and shaped to accommodate a variety of décor designs.
- **Indoor and Outdoor Applications:** IP44 weatherproof rating is appropriate for indoor and sheltered outdoor environments.
- **Design that is lightweight:** Installation and operation are effortless.
- **A versatile decoration:** Suitable for a variety of occasions, including weddings, birthdays, parties, fireplaces, and holiday decorations.
- **Cordless Convenience:** The absence of power outlets enables the flexible positioning of the device.
- **The natural color palette:** Grey-green eucalyptus leaves are well-suited to a variety

of interior designs.

- **Energy Efficient LEDs:** Long-lasting bulbs with low power consumption.
- **All-year-round Utilization:** Appropriate for both seasonal and everyday decor.
- **Simple to Modify:** Bend branches to your preference to personalize the appearance.

SETUP GUIDE

- **Garland Unpacking:** Extract the battery cell and garland from the packaging.
- **Insert Batteries:** Properly insert three AA batteries by opening the battery compartment.
- **Battery Compartment Closure:** Firmly fasten the battery cover.
- **Select a location:** Choose a location, such as a mantle, table, wall, or staircase.
- **Garland Designation:** Bend and arrange the flexible branches to achieve the desired shape.
- **Light the Garland:** Utilize the on/off switch to activate the lights.
- **Activate the built-in timer:** Establish automatic 6-hour on and 18-hour off cycles, if desired.
- **Garland Security:** Utilize hooks, ties, or tape to secure the garland in position.
- **To prevent injury:** Refrain from stretching the garland beyond its intended length.
- **Stay Away from Water:** To prevent water exposure, use sheltered outdoor areas or indoors.
- **Battery Pack Position:** Subtly conceal the battery supply to achieve a tidy appearance.
- **Test Lights:** Confirm that all LEDs are functioning appropriately.
- **Batteries Must Be Replaced When Required:** Monitor battery life and replace them promptly.
- **Enhance the decor:** Combine with other decorations, such as fairy lights or eucalyptus.

CARE & MAINTENANCE

- **Before adjusting or cleansing:** Ensure that the lights are turned off.
- **Battery Removal When Not In Use:** To prevent battery leakage during extended storage, batteries should be removed.
- **Dust Consistently:** Utilize a soft cloth or duster to eliminate leaves and lighting.

- **Prevent Water Exposure:** Do not immerse or spray water on the battery pack or lighting.
- **Inspect the battery compartment:** Check for corrosion or damage on a regular basis.
- **When not in use:** Ensure that the garland is stored in a dry location.
- **Handle wires with care:** Refrain from tugging or twisting them.
- **Substitute batteries with high-quality brands:** Invest in high-quality batteries to extend their lifespan.
- **To prevent overheating:** Refrain from covering the battery pack or garland.
- **Inspect for Loose Connections:** Guarantee that the battery contacts and conductors are securely fastened.
- **Maintain Distance from Heat Sources:** Prevent placement in close proximity to flames or radiators.
- **Prevent damage by gently shaping:** Avoid sharp bends.
- **Proper Storage:** Store in the original packaging or a package and coil loosely.
- **For indoor or sheltered outdoor use only:** Shield from torrential precipitation or snowfall.

TROUBLESHOOTING

| Issue | Possible Cause | Solution |
|---------------------------------|---------------------------------|---|
| Lights not working | Batteries installed incorrectly | Reinsert batteries and check correct polarity (+/-) |
| Dim or weak light output | Low battery power | Replace with fresh AA batteries |
| Lights turn off after few hours | Timer function is active | Verify if timer mode is on and reset if needed |
| Uneven lighting or flickering | Loose battery connection | Adjust battery position or clean contact terminals |

| Issue | Possible Cause | Solution |
|---------------------------------|---------------------------------------|--|
| Lights not turning on at all | Dead batteries or faulty switch | Replace batteries and check ON/TIME R/OFF switch settings |
| Branches won't hold shape | Not bent properly | Gently shape and hold in place until form is retained |
| Lights don't respond to switch | Switch mechanism jammed | Tap gently or cycle through switch positions |
| Part of garland unlit | Internal wire damage or disconnection | Inspect for visible breaks; avoid over-bending branches |
| Lights dull in cold outdoor use | Batteries losing charge in cold | Use lithium AA batteries for better cold-weather performance |
| Battery box overheating | Prolonged use or defective batteries | Replace batteries, and limit usage to timer function |

PROS & CONS

PROS

- 96 warm white LEDs for a cozy glow
- Lifelike eucalyptus leaves for elegant natural decor
- Timer function automates lighting cycles
- Flexible design for creative shaping
- Suitable for both indoor and outdoor use

CONS

- Batteries not included
- No remote control or dimming options
- Only one lighting color (warm white)
- May require additional units for larger spaces
- Battery life limited to approximately 6 hours per use

WARRANTY

The LITBLOOM Eucalyptus Twig-Vine Lights come with a **1-year** limited warranty, covering manufacturing defects in materials and workmanship. This warranty applies under normal usage conditions and excludes damage from misuse, weather exposure beyond IP44 limits, or battery corrosion. Proof of purchase is required for warranty claims. LITBLOOM offers dedicated customer service to resolve concerns within 24 hours.

FREQUENTLY ASKED QUESTIONS

How is the LITBLOOM Eucalyptus Garland powered?

This LITBLOOM garland runs on 3 AA batteries (not included) and includes a built-in timer that automatically cycles 6 hours ON and 18 hours OFF.

How long will the lights stay on with the timer function?

Once you activate the timer on your LITBLOOM garland, it will remain lit for 6 hours, then automatically switch off for 18 hours, repeating daily until turned off manually.

What should I do if the LITBLOOM Eucalyptus Garland lights don't turn on?

Check that fresh AA batteries are installed correctly, ensure the ON/TIMER switch is set to ON or TIMER mode, and verify the battery box lid is fully closed.

Why are some LEDs on my LITBLOOM garland flickering or dim?

Flickering often indicates low battery power. Replace all three AA batteries with high-quality alkaline or rechargeable cells to restore consistent brightness.

How do I reset the timer on the LITBLOOM Eucalyptus Vine Lights?

Turn the garland OFF, wait one minute, then switch it back to TIMER mode this restarts the 6-hour ON/18-hour OFF cycle from that moment.

What cleaning method is recommended for the LITBLOOM Eucalyptus Garland?

Unplug the lights (remove batteries), then gently dust the vines and leaves with a soft cloth or feather duster avoid water or cleaning solutions on the LEDs or battery box.

What do I do if the timer stops working on the LITBLOOM Eucalyptus Garland?

Remove the batteries, wait 30 seconds, then reinsert them. Set the switch to TIMER. If it still fails, test with fresh batteries or contact LITBLOOM support for assistance.

VIDEO – PRODUCT OVERVIEW

References

- [User Manual](#)

 B087Q366VD, Battery-Operated Eucalyptus Twig-Vine Lights, LITBLOOM, user

 LITBLOOM manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.