


LITETRONICS FLATM3 Flood Light Trunnion Mount

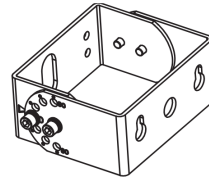

LITETRONICS FLATM3 Flood Light Trunnion Mount Instruction Manual


[Home](#) » [Litetronics](#) » LITETRONICS FLATM3 Flood Light Trunnion Mount Instruction Manual 

Contents

- 1 LITETRONICS FLATM3 Flood Light Trunnion Mount
- 2 SAFETY INSTRUCTIONS AND WARNINGS
- 3 WHAT COMES IN THE BOX
- 4 INSTRUCTIONS
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

LITETRONICS®

LITETRONICS FLATM3 Flood Light Trunnion Mount

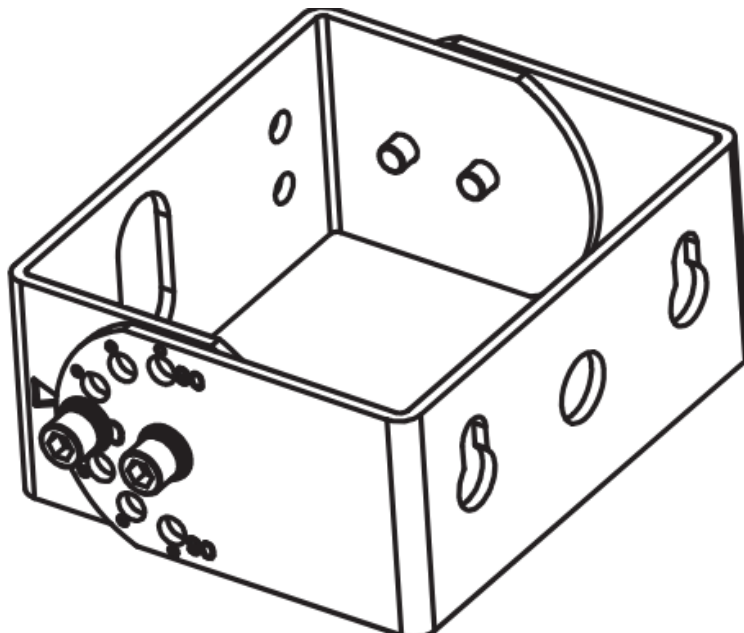

SAFETY INSTRUCTIONS AND WARNINGS

- When using electrical equipment, basic safety precautions should always be observed.
- This product must be installed by the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Installation should only be conducted by a qualified electrician by NEC and any relevant local building codes.
- Be certain electrical power is OFF before and during installation and maintenance.
- To prevent wiring damage or abrasion, do not expose wiring to the edges of sheet metal or sharp objects.

WHAT COMES IN THE BOX

- Trunnion Mount
- M8 * 20mm (x4)
- M8 Spring Washer (x10)
- M8 Flat Washer (x10)
- M8 Lock Nut (x6)
- Ground Washer (x1)
- M8 * 30mm (x4)
- Expansion Bolts (x2)
- Installation Instructions

REQUIRED TOOLS


- Allen Wrench

INSTRUCTIONS

Before Installation, carefully remove all parts from the packaging. Inspect product for defects due to shipping. Always turn off the power supply from main circuit breaker first!

TRUNNION BRACKET INSTALLATION

1. Open the mount head. (Figure 1)

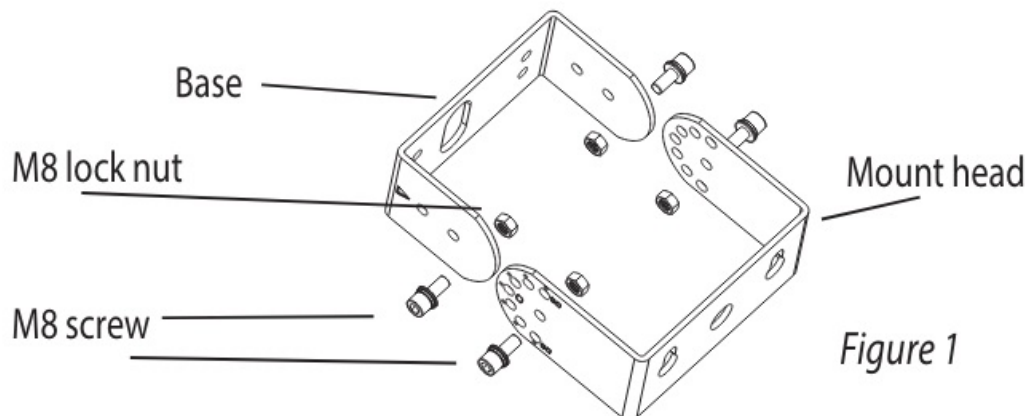

2. Run the input wire through the hole in the trunnion base (watch out not to scratch the wire). Affix the base with screws and lock to the fixture. (Figure 2)

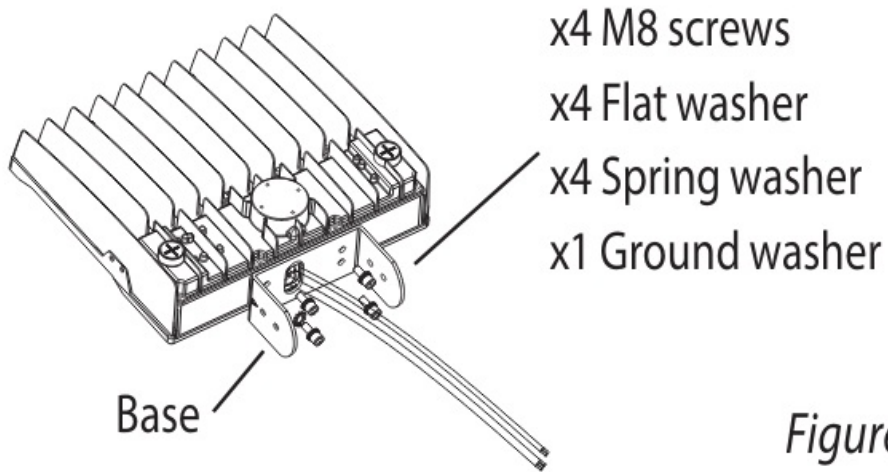


Figure 2

3. Pass the wires through the trunnion mount head. Install the mount head and keep M8 screws loose. (Figure 3)

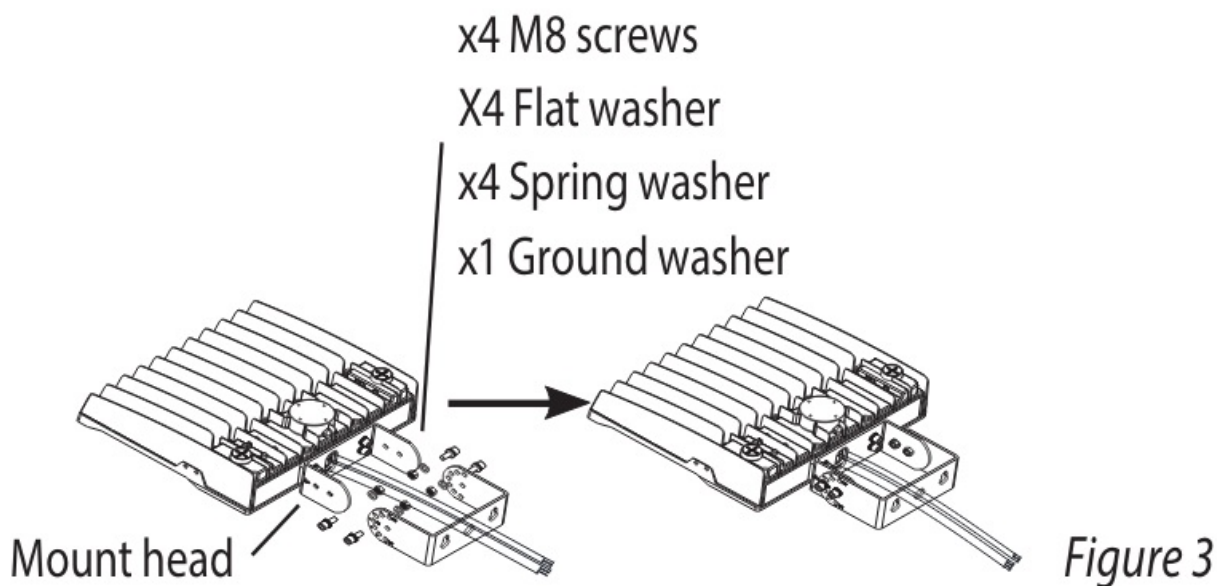


Figure 3

TRUNNION MOUNT FIXTURE INSTALLATION

1. Finish the wire connection accordingly (refer to flood light installation instructions for the wiring diagram).
2. Align the fixture to the required angle. Tighten M8 screws after angle is confirmed. (Figure 4)
3. Turn the power back on.

Note: Adjustable angle is 0~+/-90° (Figure 4)

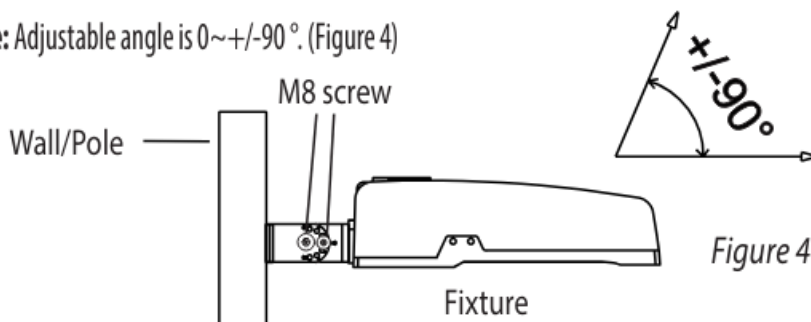



Figure 4

Thank you for choosing

CustomerService@Litetronics.com or 1-[800-860-3392](tel:800-860-3392)

The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us at [800-860-3392](tel:800-860-3392) or via email at customerservice@litetronics.com. To check for an updated version of these instructions, please visit www.litetronics.com.

Documents / Resources

	<p>LITETRONICS FLATM3 Flood Light Trunnion Mount [pdf] Instruction Manual FLATM3 Flood Light Trunnion Mount, FLATM3, Flood Light Trunnion Mount, Light Trunnion Mount, Trunnion Mount, Mount</p>
---	--

References

- [Commercial Lighting Company | LED Lighting Solutions](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.