

# **LiteWORKS AUL1027 Clarke Floor Lamp Instruction Manual**

Home » LiteWorks » LiteWORKS AUL1027 Clarke Floor Lamp Instruction Manual





## **INSTALLATION INSTRUCTIONS**

#### Contents

1 AUL1027 Clarke Floor Lamp

2 Documents / Resources

**3 Related Posts** 


# **AUL1027 Clarke Floor Lamp**

Product Name: Clarke Model No.: AUL1027 Description:1Lt

Rated Voltage:220-240V~, 50Hz,

Max Wattage:MAX 28W

Globe Type: E27 Floor Lamp

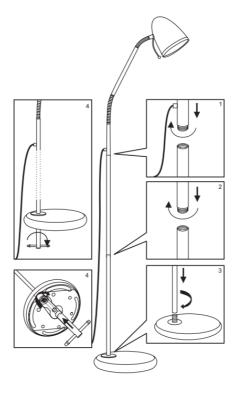

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The bulb, lamp holder, or shade may get hot when the lamp is operating, do not touch them to avoid a hazard.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning. Use a soft cloth and mild detergent. Always switch it off before cleaning.
- Failure to maintain the lamp in a clean condition could lead to deterioration of the surface that could adversely
  affect the life of the appliance and possibly result in a hazardous situation



**WARNING:** FIRE RISK EXISTS IF THE LAMP IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS

## **Documents / Resources**



<u>LiteWORKS AUL1027 Clarke Floor Lamp</u> [pdf] Instruction Manual AUL1027 Clarke Floor Lamp, AUL1027, Clarke Floor Lamp, Floor Lamp, Lamp