



litter-robot LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box Installation Guide

[Home](#) » [Litter-Robot](#) » **litter-robot LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box Installation Guide** 

Contents

- [1 litter-robot LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box](#)
- [2 Installing the Litter-Robot 4 Fence](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

litter•robot®
by whisker


litter-robot LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box



Installing the Litter-Robot 4 Fence

The Litter-Robot 4 Fence snaps onto the bezel at the globe entrance and acts as a barrier to contain kicked-up litter.


1. Hold the fence upright inside the globe.

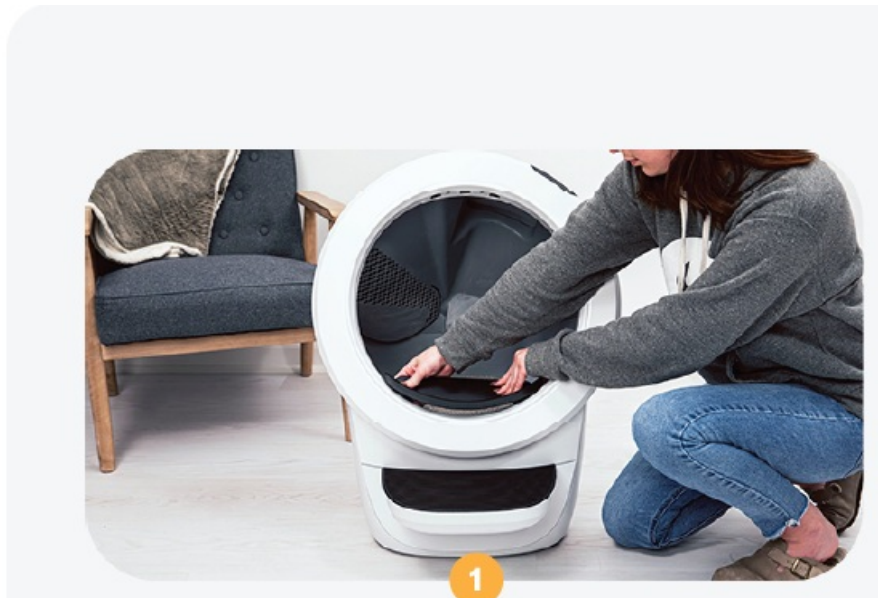

2. Tilt the bottom of the fence to align the back of the fence with the bezel



3. Gently push down on the front of the fence to snap it onto the bezel. Make sure the fence is level.

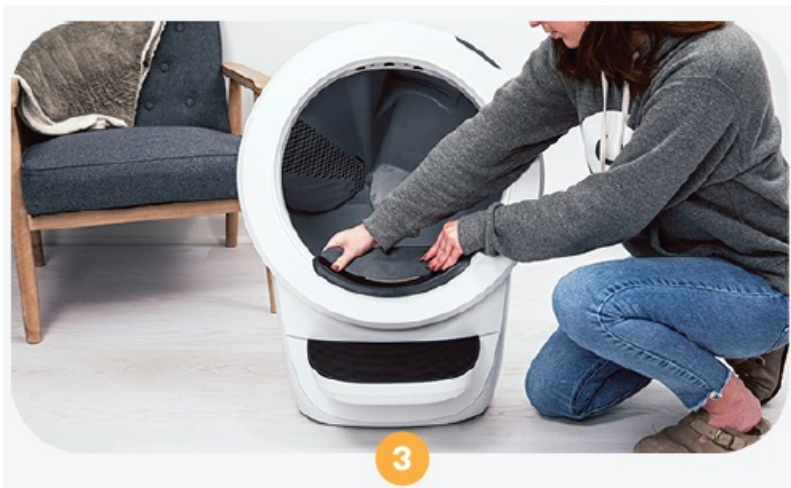

4. Press the Reset button to zero the weight sensors.



Documents / Resources



[litter-robot LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box](#) [pdf] Installation Guide
 LR3C-COREBD-BE, 4 Fence Wi-Fi Enabled Automatic Litter Box, LR3C-COREBD-BE 4 Fence Wi-Fi Enabled Automatic Litter Box, Wi-Fi Enabled Automatic Litter Box, Automatic Litter Box, Litter Box, Box