



little tikes 658426 Learn and Play Count and Learn Hammer User Guide

[Home](#) » [Little Tikes](#) » little tikes 658426 Learn and Play Count and Learn Hammer User Guide 

Contents

- 1 little tikes 658426 Learn and Play Count and Learn Hammer User Guide
- 2 CONTENTS
- 3 BATTERY REPLACEMENT
- 4 QUICK START
- 5 FEATURES
- 6 IMPORTANT INFORMATION
- 7 LIMITED WARRANTY
- 8 BATTERY SAFETY INFORMATION
- 9 FCC COMPLIANCE
- 10 Little Tikes Consumer Service
- 11 MGA Entertainment UK Ltd.
- 12 MGA Entertainment (Netherlands) B.V.
- 13 Imported by MGA Entertainment Australia Pty Ltd
- 14 Read More About This Manual & Download PDF:
- 15 Documents / Resources
- 16 Related Posts

little tikes 658426 Learn and Play Count and Learn Hammer User Guide



CONTENTS

Count and Learn Hammer



BATTERY REPLACEMENT

The batteries included in the hammer are for in-store demonstration. Before playing, an adult must install fresh alkaline batteries (not included) in the unit. Here's how:

1. Using a Phillips screwdriver (not included) remove the screws and battery compartment cover from the bottom of the hammer.
2. Install two (2) 1.5V AAA (LR03) alkaline batteries (not included) making sure the (+) and (-) ends face the

proper direction as indicated inside the battery compartment.

3. Replace the compartment cover and tighten the screws.

QUICK START



Turn the switch from Try Me (X) to either wacky sounds, color or number mode. When moving the dial switch, make sure the arrow is pointed to the desired mode. To change the language from English to French, insert a pointed object (like a pin) to press the button on top of the switch for two seconds.



Lightly hit a non-fragile, hard surface with the hammer.

- Both sides of the hammer's head will trigger the sound effects.
- While in color mode, the hammer's head will light up.



FEATURES



While in WACKY SOUNDS mode, the hammer will make fun, random sounds each time you hit it on a surface.



While in COLOR mode, the hammer will go through seven colors each time you hit it on a surface. It will say blue, green, orange, pink, purple, red, and yellow. It will also light up in that color.



While in NUMBER mode, the hammer will count from 1 through 10 each time you hit it on a surface.

IMPORTANT INFORMATION

- Illustrations are for reference only. Styles may vary from actual contents.
- Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.
- Play is limited in Try Me mode. Before playing, make sure it is on wacky sound, color or number mode.
- To conserve battery power, always turn it o (O) after playing.
- Do not use the hammer on fragile surface.
- Do not hit or throw the hammer at people or pets, as doing so may cause injury to the person and irreparable damage to the unit.
- Never aim or hit people's or pet's faces.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only size “AAA” (LR03) alkaline batteries (2 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer’s instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).



Let's care for the environment!

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Little Tikes Consumer Service

2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.

50 Presley Way, Crownhill, Milton Keynes,
MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.


Baronie 68-70, 2404 XG Alphen a/d Rijn
The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd

Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

Read More About This Manual & Download PDF:

Documents / Resources

	<p>little tikes 658426 Learn and Play Count and Learn Hammer [pdf] User Guide 658426, Learn and Play Count and Learn Hammer</p>
---	---