



# LIVARNO home HG03917 Nutcracker Egg Slicer Instruction Manual

Home » LIVARNO home » LIVARNO home HG03917 Nutcracker Egg Slicer Instruction Manual



# **Contents**

- 1 LIVARNO home HG03917 Nutcracker Egg **Slicer**
- 2 Specifications
- 3 Introduction
- 4 Intended use
- 5 Cleaning and care
- **6 Warranty**
- 7 Warranty claim procedure
- 8 FAQs
- 9 Documents / Resources
  - 9.1 References



LIVARNO home HG03917 Nutcracker Egg Slicer



# **Specifications**

• Intended Use: Crack nuts

• **Usage**: For private household use only, not for commercial purposes

• Cleaning: Wash with warm water and mild detergent; dishwasher safe

• **Disposal**: Packaging is recyclable

## Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarize yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

#### Intended use

This product is intended for crack the nuts. This product is only intended for private household use, not for commercial purposes. The manufacturer accepts no liability for damages caused by improper use.

# Cleaning and care

- Before and after use: Clean the product with warm water and a mild detergent. Thoroughly dry the product.
- Do not use the product if damaged.
- This product is suitable for dishwasher.

## **Disposal**

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities. Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

## Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects, you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below. The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location, as this document is required as proof of purchase. Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.

Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts. This warranty becomes void if the product has been damaged or used or maintained improperly. The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g., batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g., switches or glass parts.

# Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (IAN 460155\_2401) available as proof of purchase. You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product. If functional or other defects occur, please contact the service department listed either by telephone or by e-mail. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

#### Service

#### **Service Great Britain**

Tel.: 08000569216

• E-Mail: owim@lidl.co.uk

IAN 460155 2401 OWIM GmbH & Co. KG Stiftsbergstraße 1 74167 Neckarsulm GERMANY Model No.:

HG03917 B Version: 07/2024



#### **FAQs**

# What is the intended use of the product?

The product is designed for cracking nuts.

## Can the product be washed in a dishwasher?

Yes, this product is suitable for cleaning in a dishwasher.

## How should I dispose of the product?

You can dispose of the product at local recycling facilities as the packaging is made of recyclable materials. Contact your local refuse disposal authority for proper disposal instructions.

### **Documents / Resources**



<u>LIVARNO home HG03917 Nutcracker Egg Slicer</u> [pdf] Instruction Manual HG03917 Nutcracker Egg Slicer, HG03917, Nutcracker Egg Slicer, Egg Slicer, Slicer

# References

# • User Manual

## Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.