



LIVING SPACES 240982 Connie Midnight Power Recliner With Power Headrest and USB User Manual

[Home](#) » [LIVING SPACES](#) » LIVING SPACES 240982 Connie Midnight Power Recliner With Power Headrest and USB User Manual 

LIVING SPACES



1676 CONNIE POWER RECLINER USER MANUAL

Contents

- [1 Components:](#)
- [2 Quick Trouble-Shoot for Motors](#)
- [Malfunctioning:](#)
- [3 Trou able -Shooting Guide](#)
- [4 Power Recliner PARTS](#)
- [5 Power Recliner Trouble Shooting](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Components:

- **Switch** – mounted on the side of the furniture and controls all motors and functions (reclining, power headrest, etc.) via a direct connection with motors.
- **AC wall plug** – connects the power transformer to the power outlet.
- **DC cord** – connects the power transformer to the DC socket (mounted on the rear bottom of the LAF arm stump).

- **DC socket** – receives power from DC cord then transfer to motors.
- **Power Transformer** – A box-shaped unit to transfer 110V AC power to 25V DC power to supply for the furniture.
- **Seat / Headrest Motor** – motors mounted on a mechanism to drive movement on seat/headrest via switch control.
- **Mechanism** – the motion mechanical frame unit within the piece of furniture.
- **USB Ports**- located on side switches for charging USB-supported devices.

Quick Trouble-Shoot for Motors Malfunctioning:

Below are some possible reasons to cause motors to stop working:


1. Loose connection or wires not securely plugged in.
2. Broken side switch
3. Broken DC socket
4. Broken power transformer (especially when ALL motors stops working on one unit)
5. Power cords damaged
6. Motors failure

NOTE: In some cases, a button on the switch might be stuck after being pushed, thus continuously activating the motor. This can cause overheating or even damages to the power transformer.


Trou able -Shooting Guide

NO	The fault	diagnosis	To rule out
1	The power supply doesn't light up, and no output	The power supply fails	Replace a new power supply
2	Power supply light flashing	Power self-protection function start signal, parts, and wires may be shorted	Check the surface of the actuator/hand controller, whether is crushed Internal shorted in the actuator/hand controller, replace the part.
3	The light of the power supply is always on, press the hand controller, and the actuator can't work.	The actuator isn't powered, check whether the plug is loose.	Reconnect the plug.
		After checking the plug, the actuator still can't work, exchange the actuator is OK.	Replace a new actuator.
		After checking the plug, the actuator still can't work, exchanging the controller is OK.	Replace a new hand controller.
4	The actuator cannot be retracted after it has been removed	Check whether the plug is loose.	Reconnect the plug.
		The actuator internal failure.	Replace a new actuator.
5	There is noise during the actuator moving	The noise in the actuator.	Replace a new actuator
		The noise is caused by the interference of the mechanism.	Replace a new mechanism.
6	USB can't charge the IPAD	The output current of USB is only 1A, the input of the IPAD is 2A	Can't charge the IPAD
	USB without output	The hand controller internal failure	Replace a new hand controller

Power Recliner PARTS

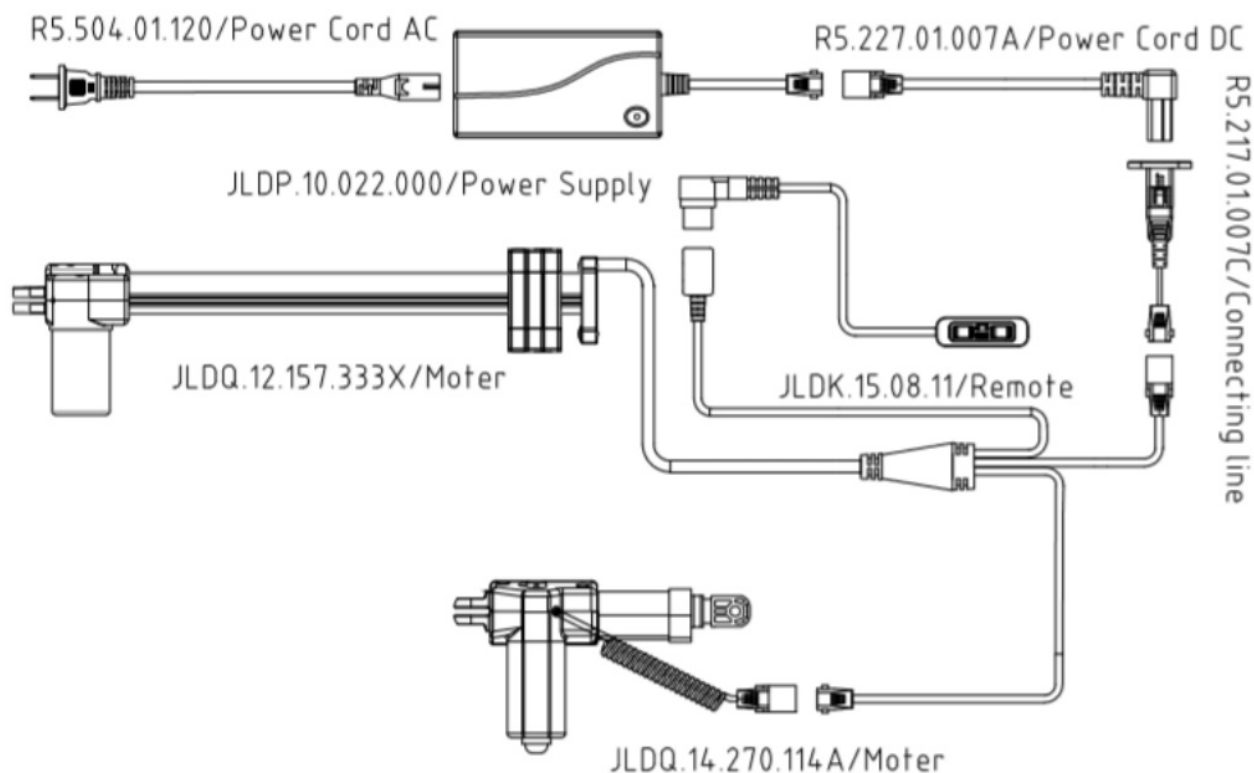


Power Recliner Trouble Shooting

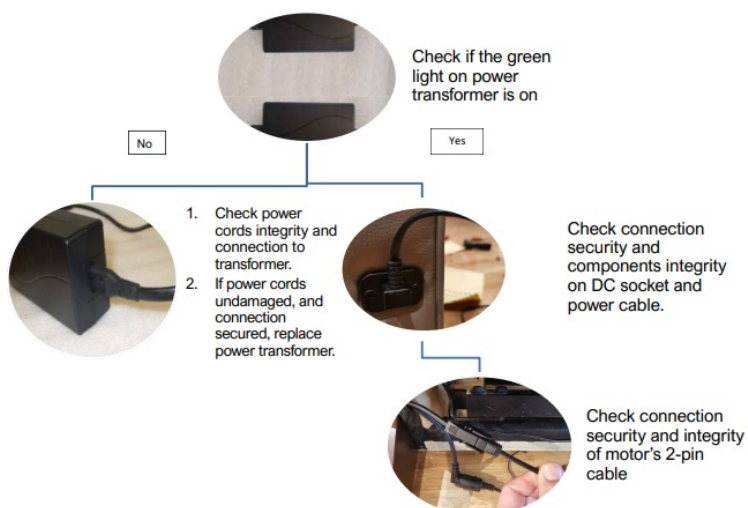

For dual-power recliners, please check the connection and integrity of the Y-Cable splitter.

Documents / Resources

 <p>LIVING SPACES</p> <p>1676 CONNIE POWER RECLINER</p> <p>USER MANUAL</p>	<p>LIVING SPACES 240982 Connie Midnight Power Recliner With Power Headrest and USB [pdf] User Manual</p> <p>240982, Connie Midnight Power Recliner With Power Headrest and USB</p>
---	--