



## Livoo DOD157 Kettle with Temperature Control User Manual

[Home](#) » [Livoo](#) » Livoo DOD157 Kettle with Temperature Control User Manual 

### Contents

- [1 Livoo DOD157 Kettle with Temperature Control](#)
- [2 Safety Advices](#)
  - [2.1 SPECIAL MEASURES](#)
- [3 SPECIFICATIONS](#)
- [4 DESCRIPTION](#)
- [5 FOR THE FIRST USE](#)
- [6 USE](#)
- [7 CLEANING AND STORAGE](#)
- [8 Troubleshooting](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)



**Livoo DOD157 Kettle with Temperature Control**



## User manual

You have purchased a product LIVOVO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

## Safety Advices

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE IT FOR ANY FURTHER NEED.

Incorrect operation or usage is likely to cause damage to the appliance and injure the user. Make sure that you follow all safety instructions. Only use this appliance for the purpose for which it has been designed; we decline all responsibility in the event of damage due to incorrect use or bad handling.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
3. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.  
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.  
Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance
4. The appliance must not be immersed. Never place it into the dishwasher.
5. Never let the machine operate while unattended.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (\*).
7. Never use the appliance outdoors and always place it in a dry environment.
8. Always remove the plug from the socket in case of any malfunction, before filling or after use, or before cleaning.
9. Do not allow the appliance or its supply cord to touch hot surfaces or to come into contact with any heat sources.
10. To reduce the risk of electric shock, never operate this product with wet hands.
11. Never touch the hot surface of product. Use the handle only or the button.
12. Never unplug or move the appliance by pulling the cord. Do not wind the cord around the appliance or twist it.
13. Stand the appliance on a stable, flat surface.
14. Never let the cord of the kettle from table pending.

15. Never use your kettle without water in it. Only use fresh and cold water.
16. Never fill the water tank beyond the Max. level. Do not use your kettle in case of overflowing.
17. Never put the jug in an oven (including microwave oven) to warm up water.
18. Do not forget that the temperature of water prepared is high, handle with care the jug to avoid scalding.
19. The kettle is only to be used with the stand provided.
20. Always set any control to "off" before unplugging from the socket.
21. Make sure the ambient temperature is above 0°C, otherwise the appliance does not function properly.
22. Always descale the appliance regularly to ensure optimum performance and prevent malfunction.
23. Make sure that the appliance completely cooled down before cleaning.
24. This kind of appliance cannot work continuously, it is not a professional type of appliance. It is necessary to make temporary stops.
25. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
26. Regarding the instruction for cleaning surfaces in contact with food, please refer to the below paragraph "cleaning" in manual.
27. Make sure the appliance is unplugged before inserting, removing or cleaning.
28. The appliance is not intended to be operated by means of external timer or separate remote control system.
29. Never use the appliance :
  - If the power cord is damaged
  - In case of bad operation
  - It has been damaged in any manner It has been submerged in water
  - If you dropped it
30. Unwind the cord of its flat to avoid the superheating of the appliance.
31. The guarantee can only cover the manufacturing defect and household use. All deterioration resulting of failure to respect the safety instruction are not covered by the guarantee.
32. All the appliances are submitted to quality control, some tests are made with one of them taken at random, that's why there is sometimes tracks of use.
33. Never try to open the casing yourself.
34. There is potential injury from misuse
35. Heating element surface is subject to residual heat after use
36. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments

## **SPECIAL MEASURES**

### **Warning:**

- DO NOT remove the lid while the water is boiling.
- Position the lid so that steam is directed away from the handle
- If the kettle is overfilled, boiling water may be ejected.
- Always ensure that the lid is tightly closed.
- Use only cold water when filling the appliance.

- The water level must be between the MAX. and MIN. marks.
- Insure that the appliance is switched off before removing it from its stand.
- Avoid any spillage on the connector.

## SPECIFICATIONS

- Voltage: 220-240V~ 50-60Hz
- Power : 1800W
- Capacity: 1,8L

## DESCRIPTION



## FOR THE FIRST USE

Clean the outside with a damp cloth and wipe dry.

Before using the machine for the first time it's better to rinse the inside kettle.

1. Fill half of the tank of fresh water. (without addendum of any product).
2. Put the switch on " ON "position. The light goes on, showing that water begins heating up.
3. When boiling, the apparatus goes out automatically
4. Raise the kettle with circumspection and empty water in a sink by watching out not to splash (risk of scald).
5. The appliance is ready to be used.

## USE

1. Unroll the power cord completely.
2. Connect the appliance in a correct socket-outlet.
3. Fill the kettle with fresh water (Do not overfill ! Use the water MAX level indicator.)
4. Place the kettle on the base.
5. Switch the machine to position "1". The control lamp on the kettle shows that the water is heating.
6. When boiling the machine switches off automatically.
7. Take the kettle and pour gently the water in a sink. Take care to avoid any burn.

## CLEANING AND STORAGE

1. Make sure the appliance is unplugged from the supply socket and fully cooled down before cleaning.
2. To clean the exterior surfaces, slightly wipe over with a soft damp cloth and dry thoroughly. Note: Never use abrasive product
3. Never immerse the jug kettle or its base in water.
4. Dish washer forbidden.
5. The appliance has to be descaled regularly to ensure optimum performance. The frequency depends on the water hardness and the boiling frequency.
  - If you begin to notice the increase of the noise during boiling, or if the kettle switches off before water being boiled, this indicates that descaling is necessary.  
Generally, the descaling should be done in the following periodicity:  
With soft water, at least once every 6 months.  
With hard water, at least once every 3 months.
  - You can use descaling agent (In this case read carefully the instructions supplied with the product) or vinegar (0,5 liters of white vinegar 8% to a kettle).
  - After the descaling, rinse the inner of the kettle thoroughly with clean water.

## Troubleshooting

Fault	The reason for the fault and how to remove it
Auto shut-off before the boil	<p>1. This problem is usually due to the presence of scale in the kettle, so it can be removed by eliminating the scale.</p> <p>2. This may also be inadequate amount of water in the kettle or the inclusion of an empty kettle, which triggers the kettle protection against running dry. In order to reset the device again pour cold water into the kettle; reset security after approximately 2 minutes; then you can restart the kettle.</p>
Kettle does not work	<p>1. Make sure the plug is properly inserted into the socket and that the socket is working.</p> <p>2. If there is damage to the power cord must be replaced on the same type of cable for maintenance personnel department manufacturer.</p>
The water in the kettle has a strange smell	<p>1. This problem usually occurs when the kettle is used for the first time. In order to solve this problem, proceed in accordance with section 6.</p> <p>2. If the problem persists, fill the kettle with water up to the maximum level, add two tablespoons of baking soda, and after boiling empty the kettle.</p>

## Correct Disposal of this product (Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.

## Documents / Resources

<div data-bbox="255 367 561 383">  </div> <div data-bbox="255 383 561 409"> <p>Kettle with temperature control</p>  </div>	<div data-bbox="561 367 1329 383"> <p><a href="#">Livoo DOD157 Kettle with Temperature Control</a> [pdf] User Manual</p> </div> <div data-bbox="561 383 1329 409"> <p>Kettle with Temperature Control, Kettle, Temperature Control Kettle, Temperature Control, DOD 157 Kettle with Temperature Control, DOD157, DOD157 Kettle</p> </div>
--	---

## References

-  **Livoo, life in feel-good mode**