



Livoo DOP233 Bubble Waffle Maker Instruction Manual

[Home](#) » [Livoo](#) » Livoo DOP233 Bubble Waffle Maker Instruction Manual 

Contents

- [1 DOP233 Bubble Waffle Maker](#)
- [2 Product Information: Bubble Waffle Maker](#)
- [3 General Instructions:](#)
- [4 Product Usage Instructions](#)
- [5 TECHNICAL SPECIFICATIONS](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Livoo

DOP233 Bubble Waffle Maker



Product Information: Bubble Waffle Maker

The Bubble Waffle Maker is a product from the LIVOO brand. The product has been designed with great care to provide users with a simple and ergonomic experience. The product manual is available on the LIVOO website for reference. It is important to read the instructions for use carefully before using the product to prevent any damage or injury.

General Instructions:

1. Ensure that the main voltage corresponds to that stated on the appliance.
2. Proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. Check the cord for damages from time to time. Never use the appliance if cord or appliance shows any signs of damage. In that case, all repairs should be made by a competent qualified electrician.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard(*).
6. Do not pass the cord over objects with sharp edges and keep it at a distance from hot objects and bare flames. Always pull on the plug to disconnect it from the feed source.
7. For extra protection, it is possible to equip your home electrical system with a residual current circuit breaker with voltage break at 30 mA maximum. Ask your electrician for advice.
8. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use.
9. When you use an extension cable, make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/or the plug risks overheating.
10. Only use the appliance for domestic purposes and in the way indicated in the instructions.

11. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
12. In case the appliance accidentally falls into water disconnect it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.
13. Never try to open the casing yourself.
14. Do not use the appliance if your hands are damp if the oil is wet, or if the appliance itself is damp.
15. Do not touch the plug if your hands are damp or wet.
16. Never use the appliance near hot surfaces.
17. Before cleaning, always unplug the appliance from the power supply.
18. Never use the appliance outside and always place it in a dry environment.
19. Never use accessories that are not recommended by the producer.
They could constitute a danger to the user and risk to damage the appliance.
20. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.

Product Usage Instructions

1. Ensure that the main voltage corresponds to that stated on the appliance.
2. Place the Bubble Waffle Maker on a flat and stable surface.
3. Plug in the appliance and wait for it to heat up. The indicator light will turn on when it is ready to use.
4. Apply a small amount of oil to the cooking surface.
5. Pour the batter into the cooking surface, making sure not to overfill it.
6. Close the lid and wait for the waffle to cook. The cooking time may vary depending on the recipe and preferences.
7. Open the lid and remove the waffle using a non-metallic utensil.
8. Repeat the process until all the batter is used up.
9. Unplug the appliance and let it cool down before cleaning.
10. Clean the appliance with a damp cloth, making sure not to immerse it in water or any other liquid.
11. Store the appliance in a dry place.

Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your main voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of

damage. In that case, all repairs should be made by a competent qualified electrician.

5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard(*)
6. Do not pass the cord over objects with sharp edges and keep it at a distance from, hot objects and bare flames. Always pull on the plug to disconnect it from the feed source .
7. For extra protection it is possible to equip your home electrical system with a residual current circuit breaker with voltage break at 30 mA max mum. Ask your electrician for advice
8. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use
9. When you use an extension cable. make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/ or the plug risks overheating.
10. Only use the appliance for domestic purposes and in the way indicated in the instructions.
11. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
12. In case the appliance accidentally falls into water disconnect it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.
13. Never try to open the casing yourself
14. Do not use the appliance if your hands are damp if the oil is wet, or if the appliance it self is damp.
15. Do not touch the plug if your hands are damp or wet.
16. Never use the appliance near hot surfaces.
17. Before cleaning, always unplug the appliance from the power supply.
18. Never use the appliance outside and always place it in a dry environment.
19. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
20. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
21. Stand the appliance on a table or flat surface.
22. Unplug the appliance when not in use.
23. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
24. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
25. Make sure the appliance is unplugged before inserting, removing or cleaning one of the accessories. It is absolutely necessary to remove the accessories before cleaning them.
26. The appliance is not intended to be operated by means of external timer or separate remote control system.
27. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
28. Never leave this appliance unsupervised when it is in operation
29. Children shall not play with the appliance.
30. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
31. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
32. Keep the appliance and its cord out of reach of children less than 8 years.

33. Surfaces are liable to get hot during use.
34. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

SPECIAL MEASURES

WARNING

- Risk of burning! Place the appliance on a flat and non-inflammable surface.
- In order to place or take-out food from the heating surface, use suitable wooden or plastic utensils
- Let the appliance cool down in a safe place after use, out of the reach of children.

TECHNICAL SPECIFICATIONS

- **Voltage:** 220-240V~ 50-60Hz
- **Power:** 1000W

Before first use:

1. Remove all packaging.
2. Clean the heating surfaces with a soft damp cloth and then dry them.
3. Use a soft damp cloth on the surface of the appliance and dry it. Be careful to the matt coating.
4. Unwind the mains cable completely.

USING

Let your appliance heat for around 10 minutes for first time use, it may emit slight smoke or odor. This is normal. This does not affect the safety of your appliance.

1. Close the appliance and plug it, the power and the ready to cook light will go on, the appliance heats up. If you have preheated, it is ready to use. If you have not pre heated, it will take approximately 5 minutes to reach baking temperature, the ready to cook light will goes off.
2. Open the appliance, put waffle mix on cooking plate.
Note : Do not put an excessive amount of waffle dough, size will be modified when cooking. Too much dough may cause overflow.
3. Close the appliance. The ready light will go on again.
4. Cook for about 3 to 6 minutes, the ready to cook light goes off again. You can wait longer time until suitable to you.
5. When the waffle is cooked, use the handle to open the lid. Remove the waffle using a wooden spatula.
Never use metal objects as these can cause damage to the non-stick coating of the cook plates.

6. Once you are finished cooking, disconnect the plug. Let it cool down

CLEANING AND MAINTENANCE

Only clean when the appliance has completely cooled down.

1. Always unplug the appliance
2. Never immerse the appliance in water.
3. Wipe cooking plates with a soft brush to remove food residue.
4. Do not use anything abrasive to clean it or metal utensils to remove the food that can damage the non-stick coating.
5. Wipe the outside of the appliance with a damp cloth only.




Correct disposal of the unit (Electrical and Electronic Equipment). (Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries). The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

LIV OO
BP 61071
674 52 Mundolsheim – FRANCE

- Non contractual illustration
- Product information is subject to change without prior notice.

Documents / Resources

	<p>Livoo DOP233 Bubble Waffle Maker [pdf] Instruction Manual DOP233 Bubble Waffle Maker, DOP233, Bubble Waffle Maker, Waffle c, Waffle Maker</p>
---	--

References

- [Livoo, life in feel-good mode](#)